



# 9514 & 9514-25 CANISTER REPAIR/REPLACEMENT INSTRUCTIONS

## STEP 1

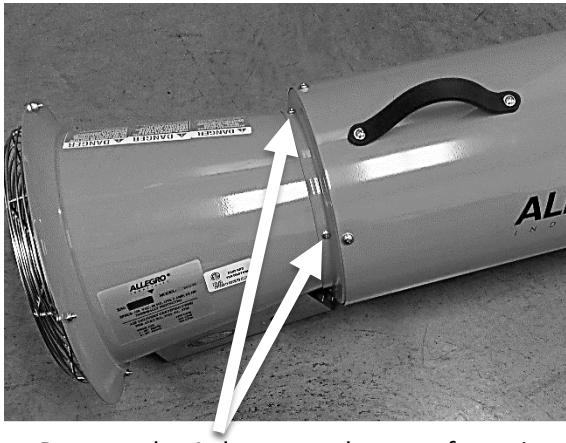


- Remove the 4 sheet metal screws fastening the blower to the duct canister.

## STEP 2

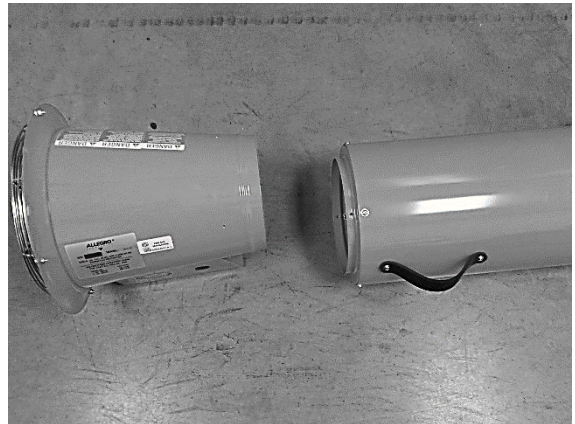

- Separate the blower from the duct canister as shown.

## STEP 3

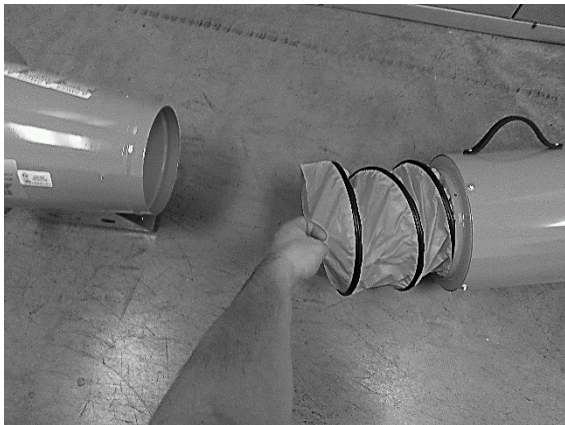

- Pull a short amount of ducting through the canister.


## STEP 4



- Slide ducting onto the blower past the blower lip as shown. Securely fasten the hose clamp screw, aligned on the side as shown.


# 9514 & 9514-25 CANISTER REPAIR/REPLACEMENT INSTRUCTIONS

## STEP 5

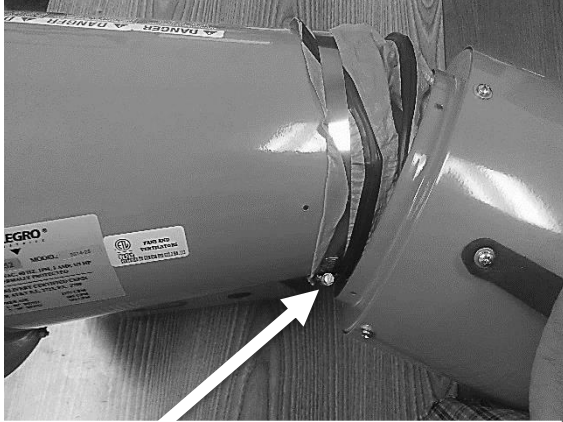

- Assemble the duct canister onto the blower by allowing the canister to clear the hose clamp screw aligned on the side.

## STEP 6

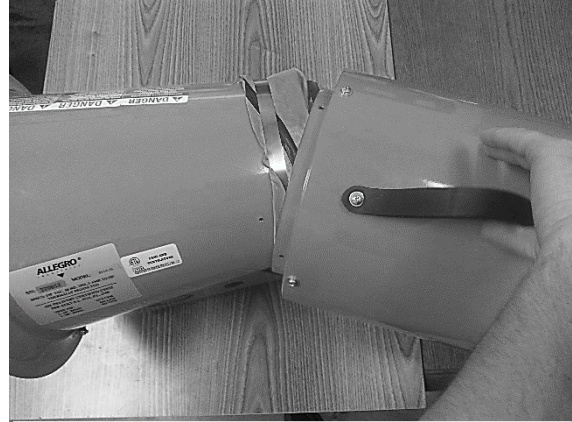

- Once the hose clamp screw is clear of obstruction, continue to slide the duct canister onto the blower.

## STEP 7



- Align the existing holes on the duct canister and blower. Securely fasten the duct canister onto the blower being careful not to over-torque the sheet metal screws.

IS140 Rev A  
11/20/14  
DCN #D0747