

BEFORE CALLING FOR SERVICE

MY FREEZER IS TOO WARM

• Adjust cold control. See page 2.

• Make sure door is closed properly.

MOISTURE COLLECTS ON THE OUTSIDE

• Frequent door openings in highly humid conditions will cause this. Reduce door openings and reduce time door is open.

• Make sure door seal is tight.

MY FREEZER IS NOISY

• Make sure cabinet is level, not touching a wall or other surface, and rests squarely on the floor on all four corners.

• Normal noises include refrigerant gurgling as it passes through tubes and the compressor clicking on and off.

THERE IS AN ODOR IN MY FREEZER

• Check for spoiled foods. Clean interior. See page 3, Lower part.

IMPORTANT SAFEGUARDS



DANGER

- Before the appliance is used, it must be properly positioned and installed as described in this manual, so read the manual carefully. To reduce the risk of fire, electrical shock or injury when using the appliance, follow basic precautions, including the following:
- Plug into a grounded 3-prong outlet, do not remove grounding prong, do not use an adapter, and do not use an extension cord.
 - It is recommended that a separate circuit, serving only your appliance be provided. Use receptacles that cannot be turned off by a switch or pull chain.
 - Never clean freezer parts with flammable fluids. These fumes can create a fire hazard or explosion.
 - Do not store or use gasoline or other flammable vapors and liquids inside or in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
 - Do not use inflammable sprays in the vicinity of the appliance.
 - Before proceeding with cleaning and maintenance operations, make sure the power line of the unit is disconnected.
 - Do not connect or disconnect the electric plug when your hands are wet.
 - Unplug the appliance or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
 - Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.

INSTRUCTION
MANUAL

FS603

UPRIGHT FREEZER

IMPORTANT WARNING

An empty refrigerator is a very dangerous attraction to children. Remove the gasket, latches, lids or doors from unused appliances, or take some other action that will guarantee the appliance harmless.

-DANGER: Risk of child entrapment. Before you throw away your old refrigerator:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb in.

ATTENTION

For your protection in the event of theft or loss of refrigerator, fill in spaces provided below. Model and Serial Number are indicated on rear wall of refrigerator.

MODEL No. _____

SERIAL No. _____

FELIX STORCH, INC.
770 Garrison Avenue
Bronx, NY 10474

For parts and accessory ordering, troubleshooting and helpful hints, visit:

www.summitappliance.com/support

⚠ WARNING ⚠

- Use two or more people to move and install the appliance.

Failure to do so can result in back or other injury.

- To ensure proper ventilation for your appliance, the front of the unit must be completely unobstructed. Choose a well-ventilated area with temperatures above 60°F (16°C) and below 90°F (32°C). This unit must be installed in an area protected from the elements, such as wind, rain, water spray or drips.

- The freezer should not be located next to ovens, grills or other sources of high heat.

- The freezer must be installed with all electrical, water and drain connections in accordance with state and local codes. A standard electrical supply (115 V AC only, 60 Hz), properly grounded in accordance with the National Electrical Code and local codes and ordinances is required.

- Do not kink or pinch the power supply cord of the freezer.

- The fuse (or circuit breaker) size should be 15 amperes.

- It is important for the appliance to be leveled in order to work properly. You may need to make several adjustments to level it. Check for leaks after connection.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

IMPORTANT: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

IMPORTANT: Do not damage the refrigerant circuit.

IMPORTANT: Do not use electrical appliances inside the storage compartment of the appliance, unless they are of the type recommended by the manufacturer.

- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.

- Do not use this apparatus for other than its intended purpose.

SAVE THESE INSTRUCTIONS

WARNING! This product may contain chemicals known to the state of California to cause cancer or birth defects or other reproductive harm. For more information, visit: www.summitappliance.com/prop65

Chemicals known by the manufacturer to be present in this product in concentrations higher than threshold limits: NONE.

CAUTION

Never use brushes, cleanser, acids, chemical thinner, turpentine or benzene for cleaning any part of the refrigerator.

Hot water or benzene are especially harmful for plastic and rubber.



INSTALLATION INSTRUCTIONS

To use your freezer with the most efficiency and safety, select a suitable place for installation keeping in mind the following points:

1. The freezer should be installed on a strong, level floor. If floor is not quite level, adjust feet as necessary.
2. This freezer is designed for free standing installation only and should not be recessed or built-in.
3. Allow four inches of air space behind the freezer.
4. Keep away from direct sunlight, oven, or other heat source.
5. The freezer is equipped with a three-prong plug and is grounded to eliminate electrical hazards. It should be plugged into a grounded electrical outlet.
6. Do not use an extension cord.

TEMPERATURE CONTROL

The freezer temperature can be adjusted by the Cold Control Knob. Freezer temperature will become lower as the control knob is set closer to the "MAX" position.

Freezer temperature will vary depending on the quantity of food stored and on the frequency with which the door is opened.


Ice cream can be used as an indicator of freezer temperature. If it is too hard or too soft, adjust Cold Control accordingly.

HOW TO DEFROST

Remove frozen food from freezer. Set Cold control Knob to "OFF" position.


Defrosting may take up to several hours. To defrost faster:

- Leave door open.
- Place pans of hot water on frost shelves.
- Wipe with warm towel or sponge.

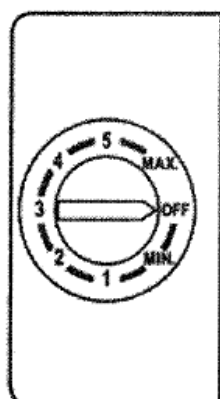

NEVER USE A KNIFE OR OTHER METAL OBJECT TO REMOVE FROST AND/OR ICE. DOING SO MAY SEVERELY DAMAGE THE REFRIGERATION SYSTEM.

When defrosting is complete, remove drip tray and dispose of water. Set Cold Control back to original position.

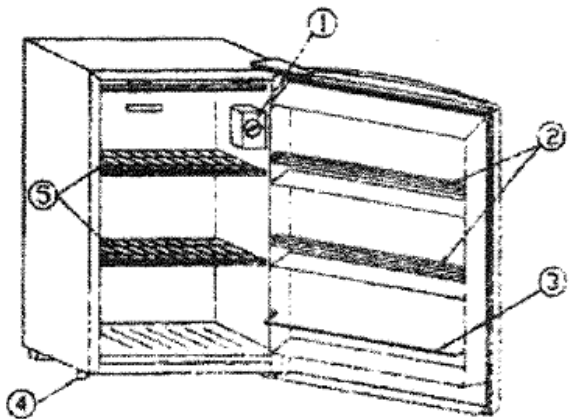

1. Temperature control.
2. Door racks: provide extra space for storage.
3. Panel Guard provides extra space for storage.
4. Adjustable foot keeps freezer level.
5. Evaporator forms shelves for storage and provides even freezing temperature throughout.

Cleaning and maintenance

Turn off your freezer and remove all food, shelves, etc. Wash interior liner with a solution of two tablespoons of baking soda and a quart of warm water. Then, rinse and wipe it out. Do not use soaps, detergents, scouring powders, spray cleaners or the like for cleaning the interior liner, as these may cause odors in the refrigerator compartment.

Wash the ice cube tray and shelves in a mild detergent solution and dry with a soft cloth.

Wipe the exterior surface with a soft cloth dampened with soapy water and dry it with a soft cloth. Normal appliance spray cleaners may be used for the exterior only.

Use only mild soap and water to clean the door gasket.

Never use acid, chemical thinners, gasoline, benzene or the like to clean any part of the refrigerator. Boiling water and benzene may deform or damage the plastic parts.

Your Summit refrigerator does not require any maintenance.