

Model #CZFP1

COMFORT
ZONE®

Ceramic Fireplace Heater

Features:

- Realistic LED 3-D Flame Effect
- Three Settings:
 - High (1200 watts - 4095 BTUs)
 - Low (600 watts)
 - 3-D Flame Only
- Fan Forced Air Circulation
- No Venting Required
- Stay Cool Composite Body
- Safety Tip-Over Cutoff Switch
- Safety Overheat Protection
- 120V A.C. / 60Hz. 10.0 Amps



Save These Instructions

SAVE THESE INSTRUCTIONS

INTENDED USE:

This product is intended for indoor residential and office use only, not for industrial or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate, consult a qualified electrician.

Use your heater only with a working smoke detector located in the vicinity of your heater.

While using your heater, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word **WARNING** to indicate the level of hazard: **WARNING** indicates a hazard which, if not avoided, could result in injury or death.

IMPORTANT INSTRUCTIONS

As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

- Read all the instructions before using this heater.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or damage to persons or property.
- Do not operate the heater with a damaged power cord or after the heater malfunctions or has been dropped in any manner.
- Do not use with cracked or broken glass.
- Do not use heater unattended. Use of extreme caution is necessary when any heater is used by or near children, disabled persons or pets.
- Do not place the heater on a small, unlevel, uneven or any surface which might allow heater to tip or fall.
- For proper operation, heater should be placed on a smooth, non-combustible surface. Do not place on rugs or carpet.
- Always unplug heater when not in use.
- Do not operate the heater with heater guards or any safety device removed.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.

WARNING: SHOCK HAZARD

Use your heater only in dry environments. This heater is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water container. Do not use heater outdoors. Do not use in damp environments such as flooded basements.

WARNING: HOT SURFACES

Do not touch body of heater when in use. This heater is hot when in use, to avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater.

WARNING: FIRE HAZARD

Heater has hot and arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. DO NOT USE in areas where gasoline, paint or flammable materials are used or stored. This heater is hot when in use. If provided, use handles when moving this heater. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater

WARNING: ELECTRICAL SHOCK HAZARD

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code.

The supply cord has a polarized plug. As a safety feature this plug will fit in a polarized outlet only one way. To prevent electric shock, match wide blade of plug to wide slot, fully insert plug. If the plug does not fit contact a qualified electrician. Never use an extension cord. DO NOT attempt to defeat this safety feature.

Do not operate any heater with a damaged cord or plug or after heater malfunctions, has been dropped or damaged in any manner. Do not operate heater with a broken heating element or ceramic cone or any visual imperfections. For repairs covered under warranty, see warranty statement. For all other repairs contact Comfort Zone's Customer Service by telephone or mail for information and assistance.

DO NOT run power cord under carpeting. DO NOT cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over. Always plug heater directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip). Unplug the heater when not in use. Do not operate heater with its ventilation obstructed.

Black border shows page size and should not print

USAGE:


HEATER OPERATION: Always operate the heater in the upright position following all instructions and recommendations listed in this manual **HEATER LOCATION:** Place the heater in the area of the room that is coldest. **HEATER CONNECTION:** Plug heater directly into 120 volt A.C., 60 Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or heater. **NOTE:** To prevent overloading a circuit, do not plug the heater into a circuit that is servicing other electrical needs.

TURNING HEATER ON:

For LED Flame Effect Only - Rotate Power On/Off Flame Control switch to FLAME Setting. Indicator light will come on.

For Low Heat (600 watts) - Rotate Power On/Off Flame Control switch to LOW position. Fan will operate at full speed, power to the ceramic element will be limited to 600 watts.

For High Heat (1200 watts) - Rotate Power On/Off Flame Control to HIGH position. Fan will operate at full speed, 1200 watts of power is delivered to the ceramic elements.

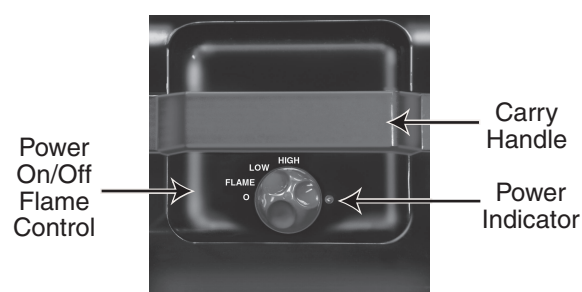

IMPORTANT SAFETY FEATURES

The power indicator light, located near the Power On/Off Flame Control switch, lights whenever the heater is turned on any setting to tell you that the heater is functioning properly. The heater is equipped with an automatic overheat protection device located inside the body of the heater. If the heater grill is obstructed, or if the heater gets too hot for any reason, the automatic overheat protection device will turn the heater off. To reset the heater, simply turn power off and unplug the heater for 20 minutes until it cools down and you may plug the heater in and restart the heater. Be sure that the heater is on a smooth level surface with no obstructions. The heater is also equipped with a safety tip-over switch to turn power off to the heater when the heater tips over. To resume heater functions simply stand heater upright. Be sure that the heater is on a smooth level surface where the heater will not be accidentally tipped over.

CARE AND MAINTENANCE

CLEANING: CAUTION-Before cleaning the heater be sure to disconnect power cord and allow the heater to cool completely. Clean the outside surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. DO NOT IMMERSE THE HEATER IN WATER. Allow heater to dry completely before use. Use a vacuum or duster to keep heat and vent area clean and free of dust and dirt.

REPAIR: DO NOT OPERATE THE HEATER WITHOUT THE GRILL IN PLACE. DO NOT USE THE HEATER IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

STORAGE: Keep original carton for storage of the heater. Coil and tie the power cord to avoid damage during storage.

ROTARY POWER ON/OFF FLAME CONTROL: This heater has two heat settings: HIGH and LOW. Use the higher setting (1200 watt) to raise the room temperature quickly. When the desired temperature is reached use the LOW (600 watt) setting. It is usually sufficient to maintain a comfortable temperature.

POWER INDICATOR: The Power Indicator Light located on the switch will illuminate when the Power On/Off Flame Control switch is turned on any setting.

TO OPERATE SIMULATED FLAME ONLY: Rotate the Power On/Off Flame Control switch to FLAME to have the flame effect without any heater functions.

TURNING OFF: Turn the Power On/Off Flame Control to OFF to discontinue use. Heater should be unplugged when not in use.

Black border shows page size and should not print

LIMITED WARRANTY

Products manufactured by Comfort Zone® are warranted to the original consumer to be free of defects in material and workmanship for twelve (12) months from the original date of purchase. The warranty does not cover products modified outside our factory, damage or failure caused by acts of God, abuse, misuse, abnormal usage, faulty installation, failure to follow suggested maintenance procedures enclosed with this product (as defined by Magnuson-Moss Warranty-Federal Trade Commission Improvement Act) This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, freight prepaid, to Comfort Zone® for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage due to accidents, operation on other than 120 volts, 60 hertz, AC, current, or any other abuse. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Manufactured by:
Comfort Zone®
324A Half Acre Rd.
Cranbury, NJ 08512 USA
800-221-6895
www.comfortzoneheaters.net
rev 072911

11.0"

8.50"