


T155 KNOB INSTALLATION

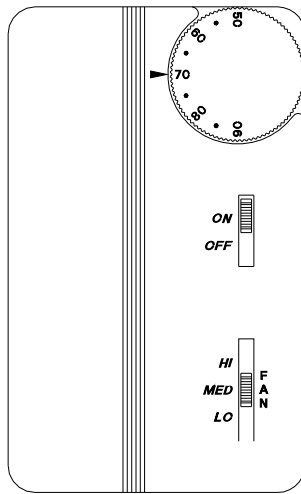

LINE UP KNOB
BEFORE REMOVING
LINE UP AND
RE-INSTALL

Use special care when removing and re-installing the knob during installation or subsequent servicing.

1. Adjust knob to the 70F or midrange position before removing.
2. Remove the knob by gently prying straight upward.
3. Remove cover, complete installation or servicing, replace cover.
4. Align knob to the 70F or midrange position and gently push the knob back into the mating rectangular socket in the potentiometer. When properly aligned, the knob stem will easily seat in the socket.
5. If the knob does not easily seat in the socket, do not force it. It is not aligned properly and damage to the knob stem or potentiometer socket could result.
6. Gently push down on the knob while turning it in each direction until it finds correct alignment and slips into the socket.
7. Once installed, rotate the knob through its complete range to check for proper orientation.
8. If the knob cannot be easily turned to the ends of the scale, do not force it. It has been installed backward and damage to the knob stem or potentiometer socket could result.
9. Remove the knob, turn it 180 degrees, and gently re-install as in step 6. Verify correct installation by rotating the knob through the entire scale.