


23701

Dual Laser Printer Stand



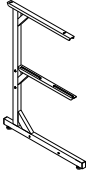
 
 

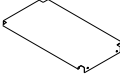

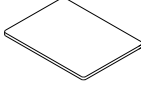


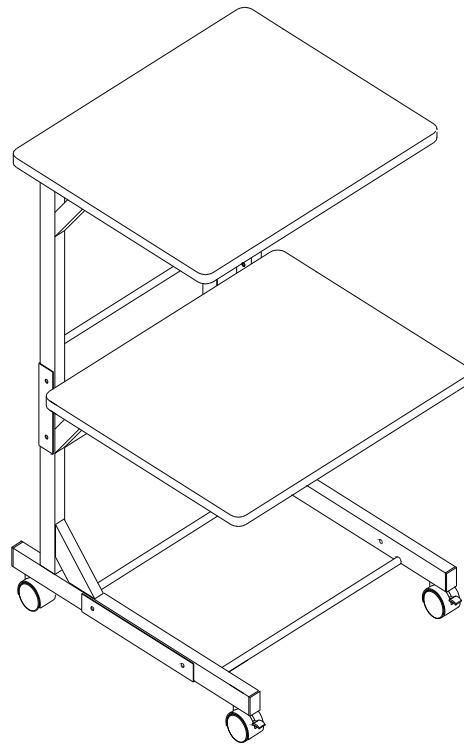



Assembly Instructions

Dual Laser Printer Stand 23701

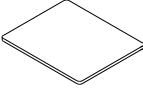Parts List


Hardware List

Part	Drawing	Description	Qty	Drawing	Description	Qty
P-1		Top Panel	1 EA	A	 Flat Head Screw	16 EA
P-2		Leg Assembly	2 EA	B	 Interior Threaded Post	8 EA
P-3		Back Stability Panel	1 EA	C	 Leveling Feet	4 EA
P-4		Bottom Stability Panel	1 EA	D	 2" Locking Casters (for Front)	2 EA
P-5		Middle Shelf	1 EA	E	 2" Casters (for Back)	2 EA
				F	 Allen Wrench	1 EA
				G	 Caster Wrench	1 EA
				H	 Cable Clips	4 EA


To Assemble:

- 1.) Identify and Separate all the Parts and Hardware.
- 2.) Attach Bottom Stability Panel (P-4) to 2 Leg Assemblies (P-2) using 4 Screws (A) and 4 Interior Threaded Posts (B).
- 3.) Attach Back Stability Panel (P-3) to the 2 Leg Assemblies (P-2) using 4 Screws (A) and 4 Interior Threaded Posts (B).
- 4.) Attach Top Printer Platform (P-1) to the 2 Leg Assemblies (P-2) using 4 Screws (A).
- 5.) Attach Middle Shelf (P-5) to the 2 Leg Assemblies (P-2) using 4 Screws (A).
- 6.) Attach 4 Leveling Feet (C) or Casters to the Leg assemblies. [If casters, 2 Locking casters (D) in the front, and 2 casters (E) in the back. Tighten the casters using Caster wrench (G).
- 7.) all the screws securly using the Allen wrench.


23701 Dual Laser Printer Stand Assembly Diagram

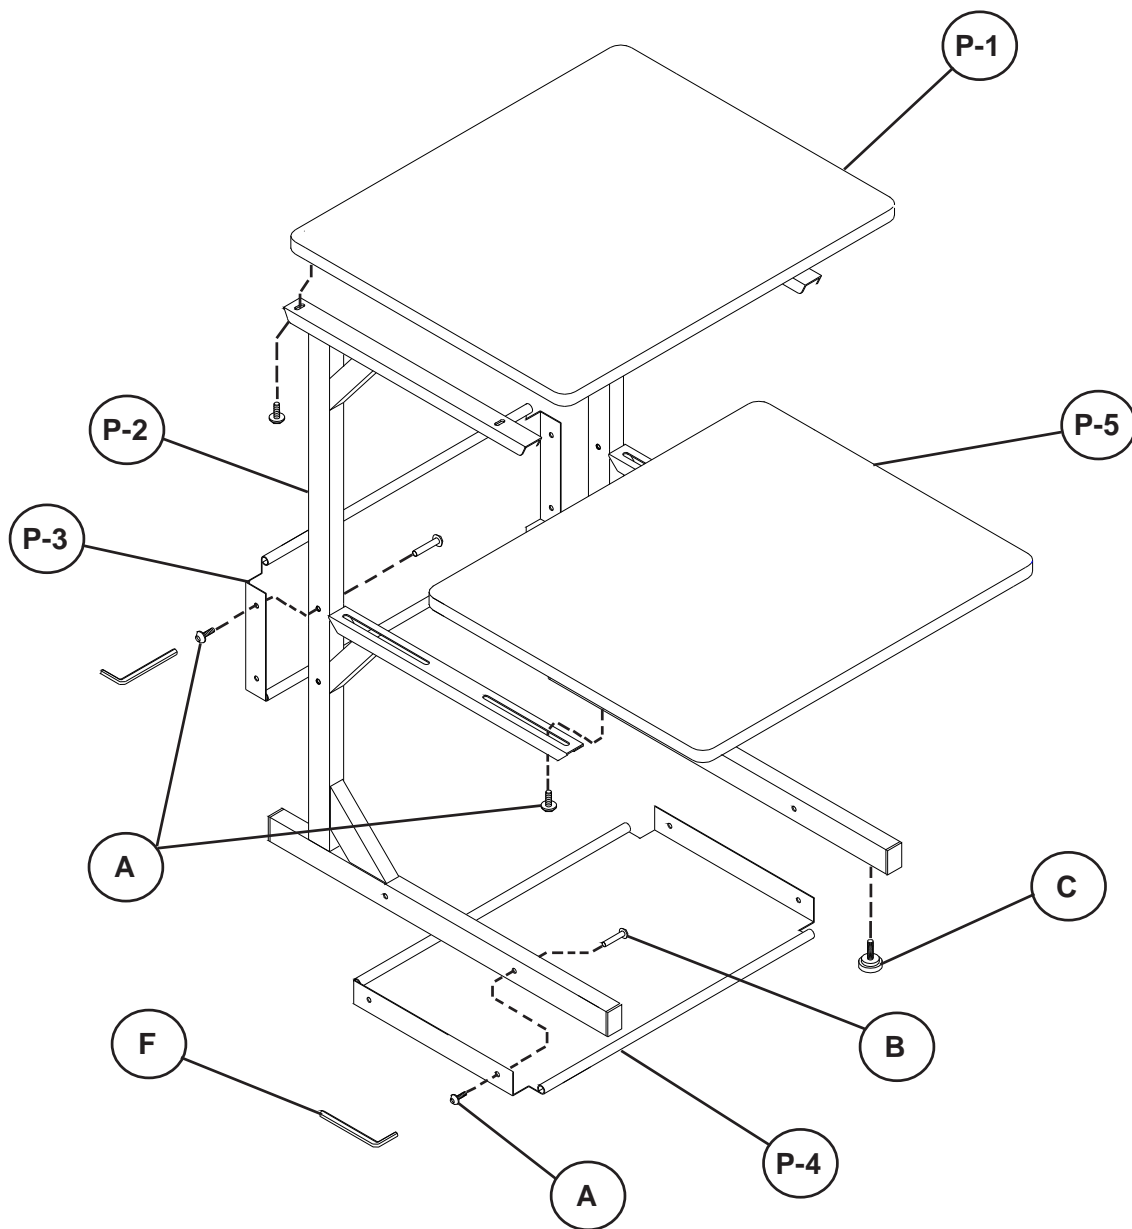

23701 Laser Printer Stand

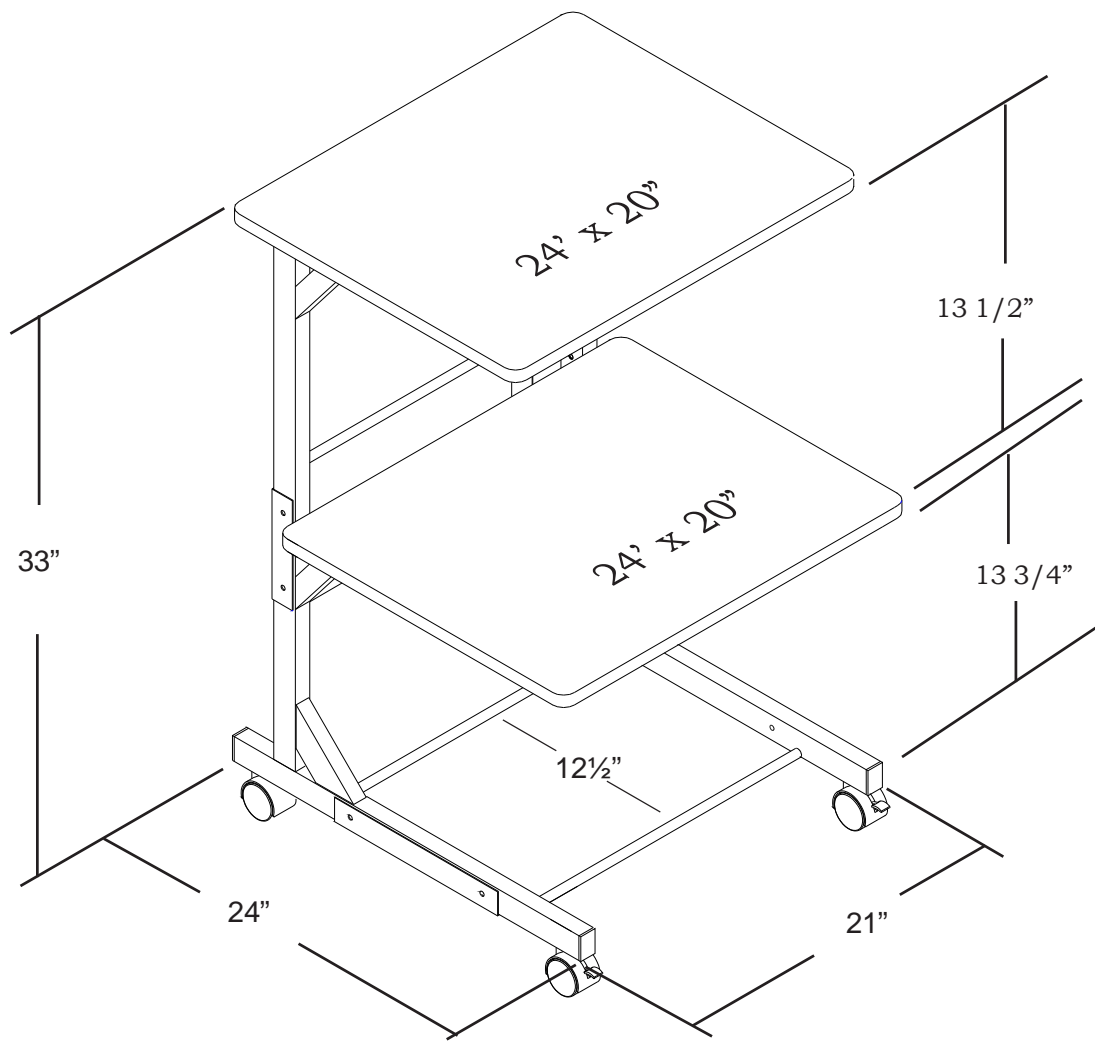

Shipping Information
2.9 Cubic Feet
50 lbs.

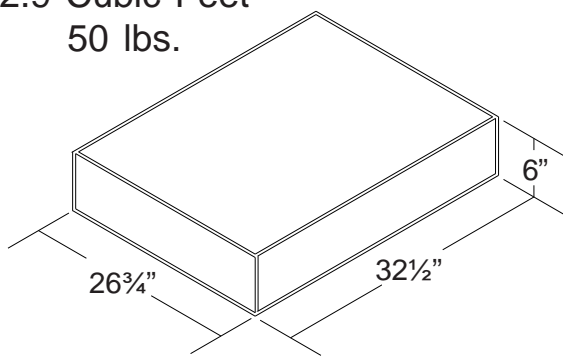

Designed for efficient Laser printing.
Includes 2" Casters for mobility.
Ships UPS.