


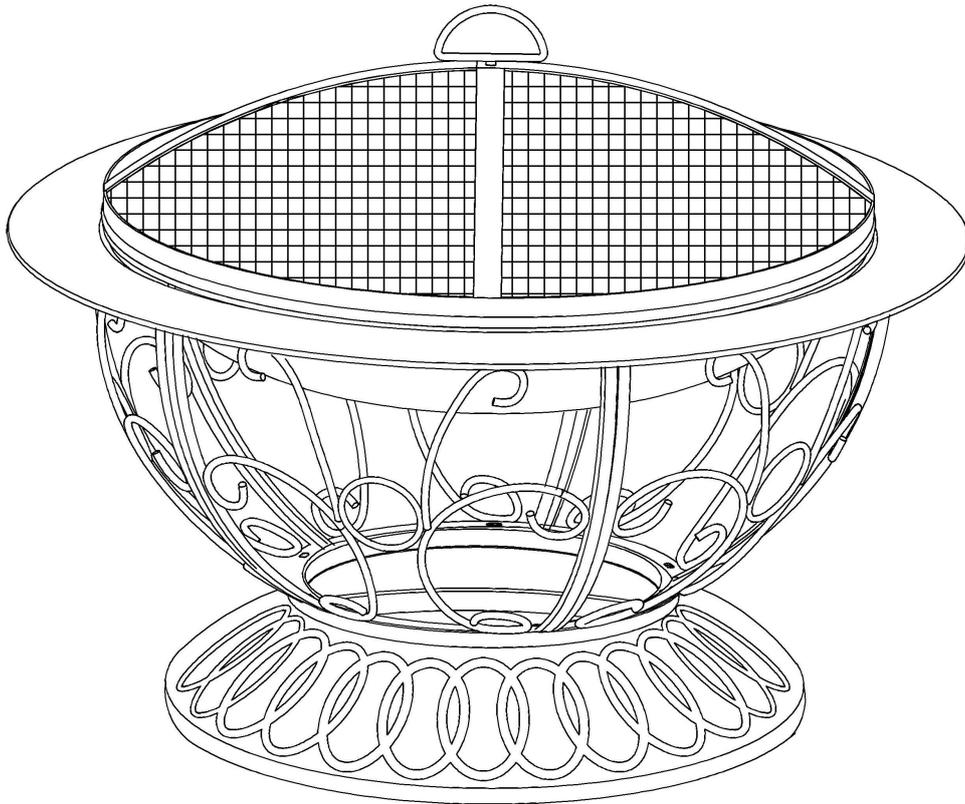

30" Wood Burning Firepit with Scroll Design

MODEL #YFP-022



ATTACH YOUR RECEIPT HERE

Serial Number _____ **Purchase Date** _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at **1-888-775-1330**, 8 a.m. - 4 p.m., PST, Monday - Friday.

OWNER'S MANUAL

Item Number: YFP-022

Product Name: 30" Wood Burning Firepit with Scroll Design

⚠️ WARNINGS:


- This firepit is intended for outdoor use only. **Do not** use on wooden decks.
- This firepit is intended to burn wood logs only. Do not burn coal, leaves, or other combustible materials in the pit.
- Not for use by children. Keep children and pets away from this firepit.
- The firepit is hot. Use with caution. Do not touch the hot firepit with bare hands.
- Never leave the burning firepit unattended, and always extinguish the fire completely before leaving the firepit.
- Do not use near flammable or combustible objects or materials.
- When the firepit is in use, the handle on the mesh screen can reach extreme temperatures that can cause serious injury to an unprotected hand. Use a poker or an appropriate heat resistant glove or pad when handling.
- **DO NOT** use this firepit as a cooking appliance. This firepit is not designed for grilling food.
- Check local fire regulations and municipal by-laws for safe use.
- Read all safety guidelines, warnings, instructions, and operating rules carefully before assembling and using this product.
- Some parts may contain sharp edges—especially as noted in the manual. Wear protective gloves if necessary.

PARTS LIST

| No. | PARTS | Qty |
|-----|------------------|-----|
| A | Lift Handle | 1 |
| B | Screen | 1 |
| C | Wood grate | 1 |
| D | Fire Bowl | 1 |
| E | Frame Ring | 1 |
| F | Decorative Frame | 6 |
| G | Base | 1 |
| H | Fire Poker | 1 |
| | | |


HARDWARE LIST

| No. | Hardware | Qty |
|-----|------------|-----|
| I | M6*12 Bolt | 18 |
| J | M6 Nut | 6 |

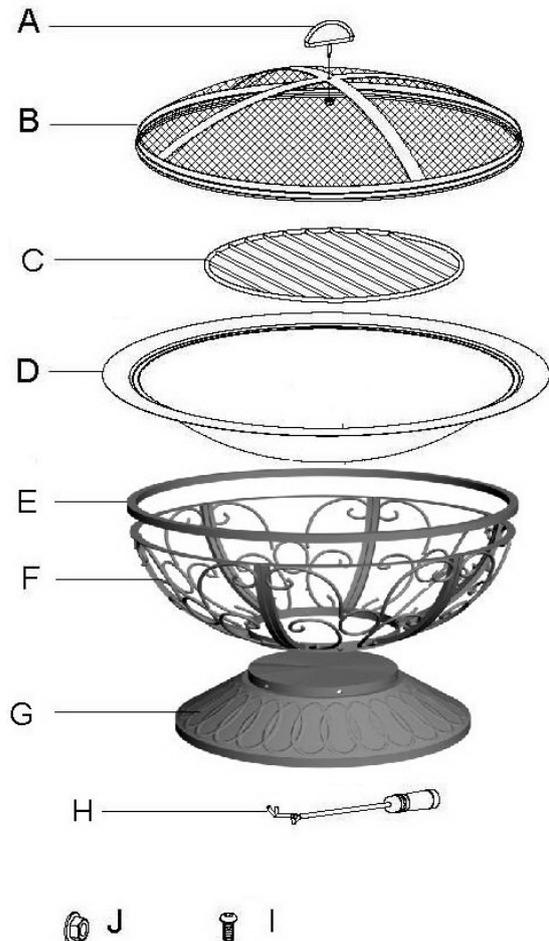


Note: You will need a screwdriver to complete the assembly.

Step 1: Attach Lift Handle (A) to Screen (B); tighten with Nut M6 (J), as per Fig. 1

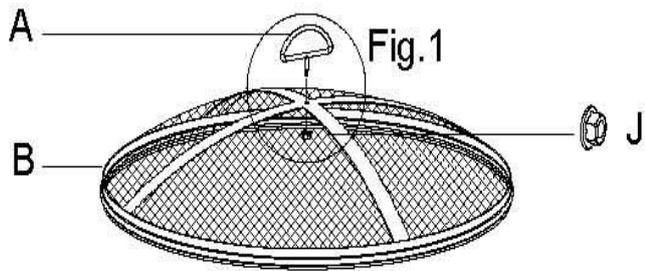

Step 2: Attach Frame Ring (E) to Decorative Frame (F) using Bolts (I). Do not fully tighten the bolts.

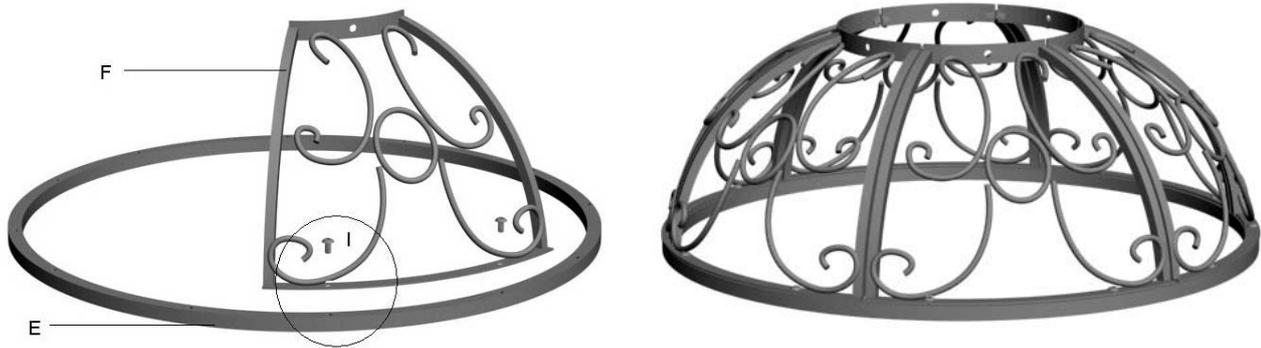

Step 3: Connect Base (G) to Decorative Frame (F) using Bolts (I) and Nut (J). Fully tighten all bolts.



Step 4: Place D, C, and B on the assembled frame. The firepit is now ready for use.

