
INSTRUCTIONS FOR MODELS

SF-4400 **GRAVITYFLO®** Portable Eyewash

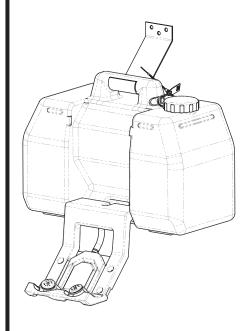

NEED HELP?

For additional assistance or service please contact:

SPEAKMAN® Company 400 Anchor Mill Road New Castle, DE 19720



800-537-2107 لمرين






www.speakmancompany.com

92-SE-4400-R1

TOOLS AND SUPPLIES

REQUIRED **©**

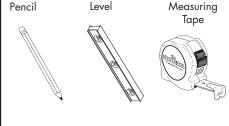











HELPFUL **©**

Safety Glasses







/ IMPORTANT /



ANSI Z358.1 requires that all self-contained eyewash units shall be visually inspected weekly, unless the product is placed in environments with extreme conditions that may affect the form, fit, or function of the unit (temperature, dirt, etc.). If this is the case, then the inspection should be conducted more often as the end user deems necessary. Speakman Company furnishes a testing record tag (91-0635) with each unit. On this tag, the date of inspection and the inspectors' initials should be noted. ANSI Z358.1 specifies that the height of the spray heads is to be between 33"-45" from the floor. The SE-4400 weighs approximately 100 lbs when filled. Ensure the mounting surface and mounting hardware (not supplied) can safely hold a minimum vertical load of 150 lbs. Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur. The unit should be full at all times, to achieve the minimum 15 minute run time as stated by ANSI, in case of an emergency. Refill the tank to full level after each activation

SAFETY TIPS O

Be sure to always wear proper eye protection. Wear proper skin protect on when cleaning and disinfecting

MAINTENANCE **©**


Occasional cleaning and disinfection is recommended. To clean the inside of unit, add 1/4 cup (2 fluid oz.) of Clorox Liquid Bleach to a full tank of potable water. Allow the mixture to penetrate for 15 minutes. Drain tank, and rinse thoroughly several times with potable water. For further information about Clorox Liquid Bleach, call toll-free at 1-800-292-2200, Follow refilling instructions in this manual and place tank back in service. Should any repair part be required, use only genuine SPEAKMAN parts for repair or replacement. See available replacement parts on the final page of this manual. To order replacement parts, please call toll-free at 1-800-537-2107

WARRANTY O

Additional warranty information can be found at: www.speakmancompany.com




Select a suitable mounting location for the SE-4400 capable of supporting 150 lbs. The location should protect the unit from freezing and potential scalding conditions. Place mounting bracket on surface so the top of the mounting bracket is located between 58 3/8"-69 3/8" from the floor. Making sure the bracket is level, mark the mounting locations onto the structure.

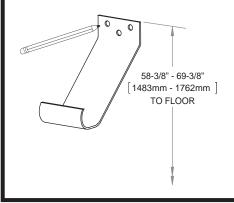






Drill necessary holes into mounting surface and secure Mounting Bracket to surface using appropriate hardware, being sure to torque to manufacturer's specifications.

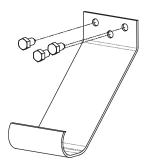

 
NOTE: Mounting hardware not included. Ensure the mounting surface (wall, etc.) and mounting hardware can safely hold a minimum vertical load of 150 lbs.

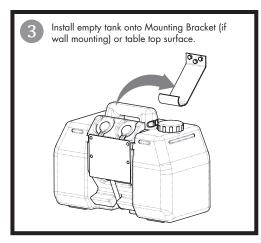




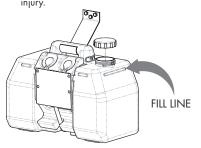


Reinstall Fill Cap and secure it with the tamper-evident Seal Tie. Secure the included Maintenance Tag to the tank in a location where it can be easily checked.

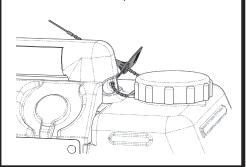

To activate the flow of water, rotate activation tray downward.

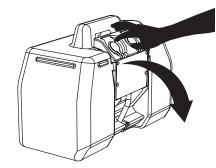

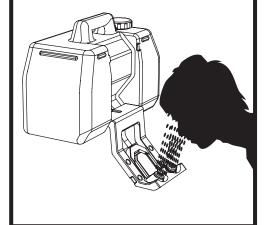


FLOW DATA **①**

Run Time (Full Tank): 15 minutes (minimum)

Flow Rate: .4 gpm (1.5 L/min) (minimum)

REPAIR PART GROUPS **4**

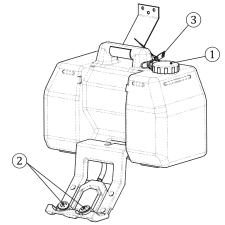

(1)RPG07-0021 QTY: 1 (2)RPG38-0434 QTY: 2 (3)RPG05-0935

QTY: 6

283mm

ROUGH IN DIMENSIONS &

