

 
 

 

 



Erase Board (48W x 36H) (36W x 24H)

ASSEMBLY INSTRUCTION

 






NOTE:





- . Use appropriate hardware when mounting to concrete.
- . Use 2 or 3 people to install.

Model 695260 / 695497 (Magnetic Glass)
695510 (Calender Magnetic White)


CONTENTS		
REF.	QTY.	DESCRIPTION
1	1	Glassboard 
2	1	Concealed Tray 
	4	Magnet 
	1	Magnetic Eraser Cloth 
H1	4	Plastic Anchor 
H2	4	Wall Bracket 
H3	4	#6 Phillips Pan Head Screw 1 1/2" lg. 
H4	4	Rubber Washer 
H5	4	Bracket Insert 

 Model 695466 / 695498 (Frosted Glass)


CONTENTS		
REF.	QTY.	DESCRIPTION
1	1	Glassboard 
2	1	Concealed Tray 
H1	4	Plastic Anchor 
H2	4	Wall Bracket 
H3	4	#6 Phillips Pan Head Screw 1 1/2" lg. 
H4	4	Rubber Washer 
H5	4	Bracket Insert 

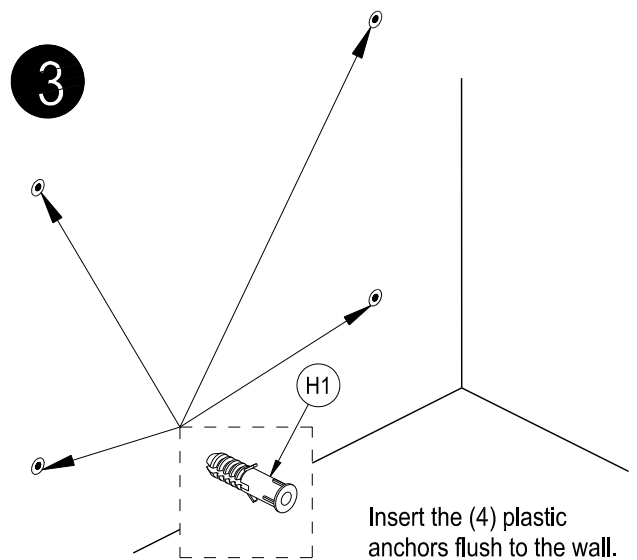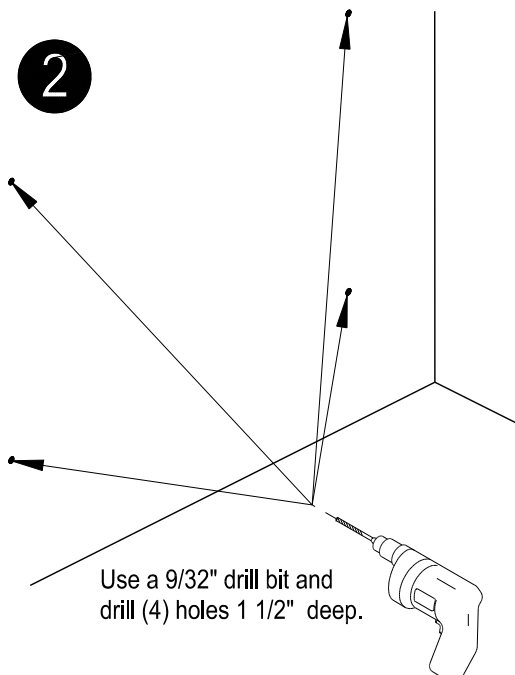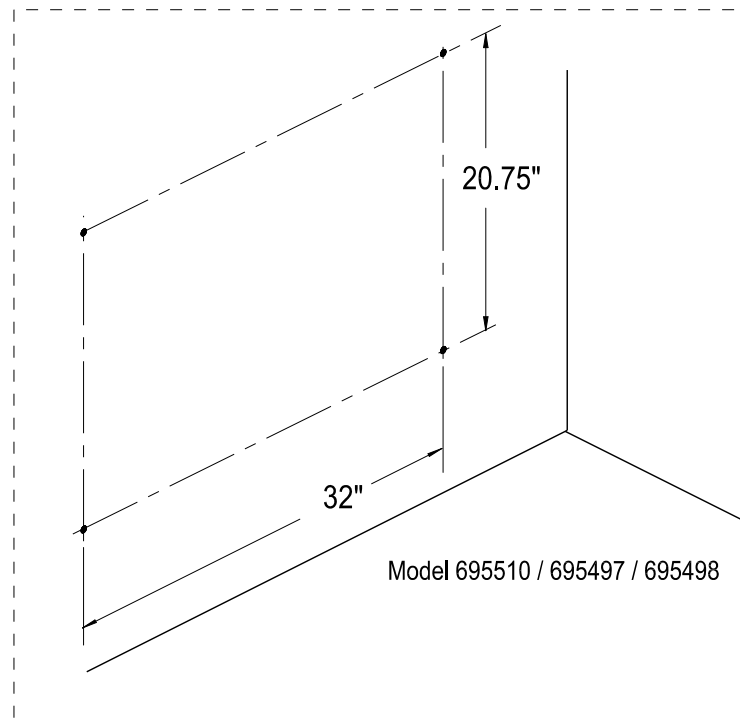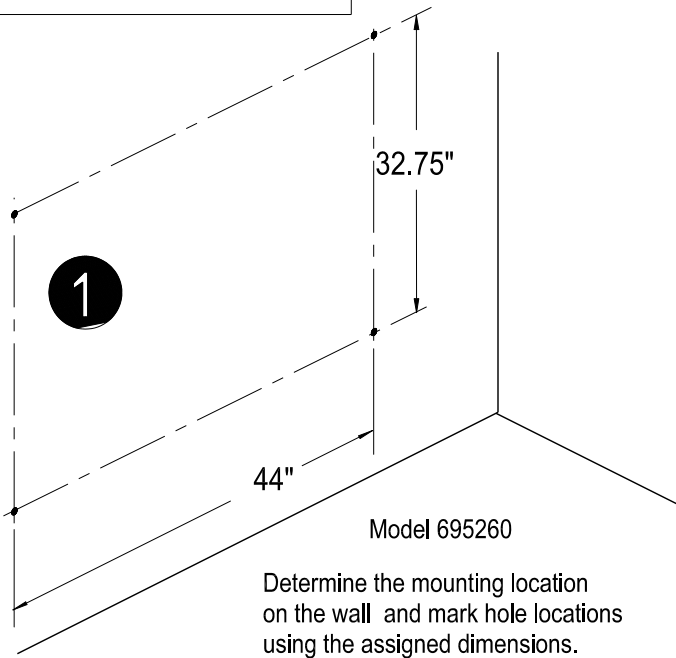    


4

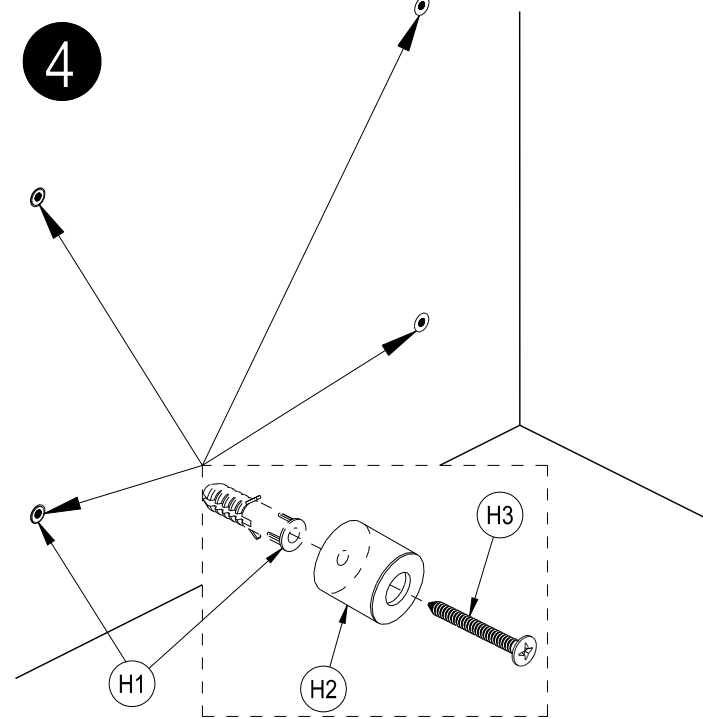 

 Attach wall brackets to plastic anchors using the (4) phillips pan head screws provided.

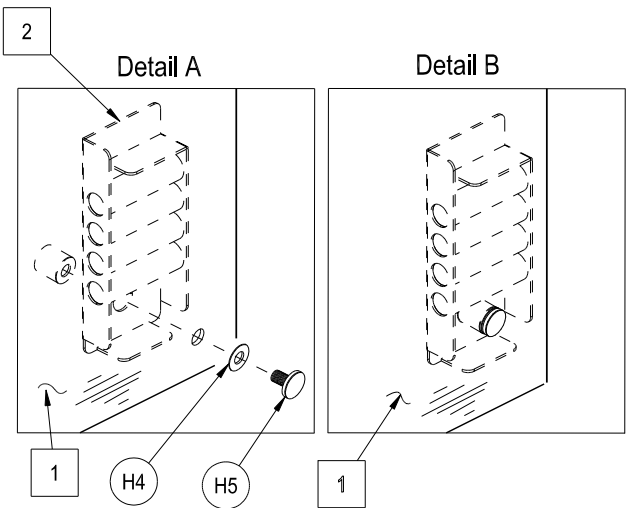

5

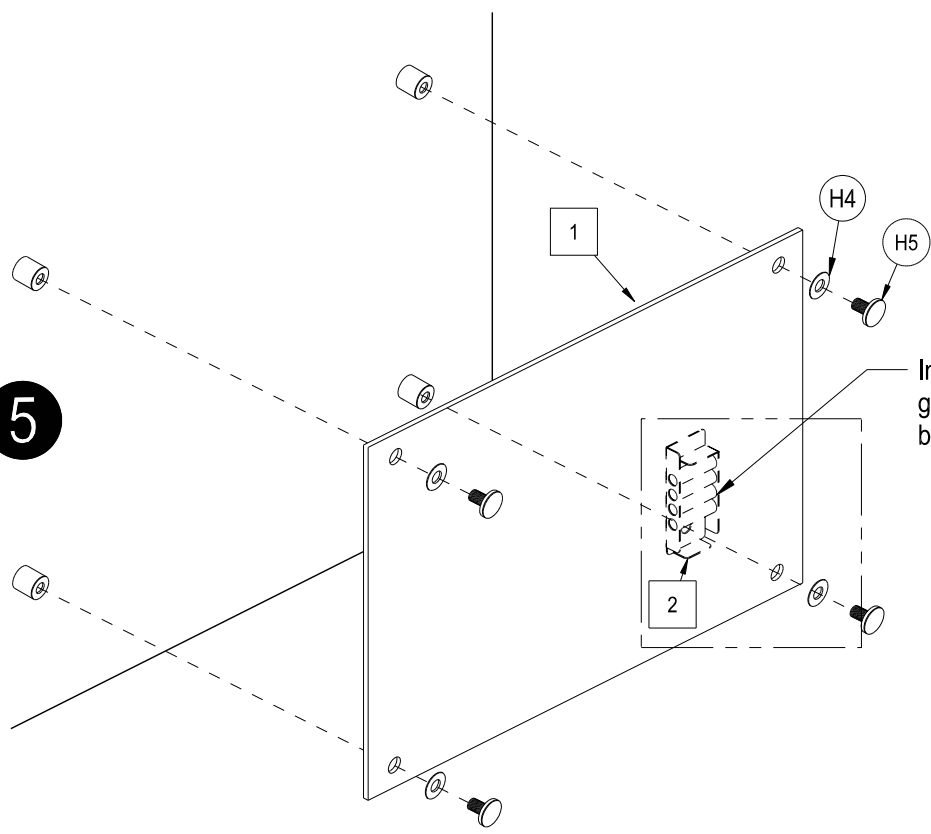 

Insert concealed tray behind glassboard at bottom right corner before securing the last thumb screw. (See detail A and B)

Attach glassboard to wall brackets as shown.

6

