

# Vent Adapter – No. 9399

## *Installation Instructions*

1. Remove existing vent cap and ensure all old caulking has been removed and the surface of the exterior wall has been cleaned.
2. This vent adapter requires that .25" be added to all dimensions for cutting the vent tubes to size.
3. Using the furnace Installation and Operating Instructions, follow all clearances required.
4. Apply the sealing material provided to the back side of the vent adapter ensuring that the entire outer edge will be sealed. *Important:* If using high temperature silicone, proceed to the next step.
5. With the vent tubes attached to the wall heater, the vent adapter may now be applied to the exterior wall using existing mounting holes. The air inlet vent tube will fit firmly between the three location brackets on the back side of the vent adapter.
6. Once the vent adapter has been mounted to the exterior wall, the vent cap provided with the wall heater will be applied using the hardware in the bag assembly. *Important:* The flue outlet pipe will slide into the vent cap approximately .50".
7. If the sealing material provided with this accessory was NOT utilized, apply high temperature silicone around the outer edge of the vent adapter only; do NOT apply to the vent cap.

