

RollMaster™ 1000 Product Manual



Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

RollMaster™ 1000 / 3856.0516

RollMaster™ 1000 Sprayer

Table of Contents

| | |
|-----------------------------|----------|
| Precautionary Warning | Page 1 |
| Assembly | Page 2-3 |
| Operation | Page 3-4 |
| Helpful tips..... | Page 4 |
| Cleaning Procedure..... | Page 5 |
| Troubleshooting..... | Page 5 |
| Parts List..... | Page 6-7 |
| Warranty..... | Page 8 |

Thank you! For your purchase of the Newstripe RollMaster™ 1000 Striper.

Please read over the instructions and make sure you understand operating procedures before using the unit.

Please check the serial number on your unit. This Manual is for units with serial number 1010742 and above only. For units with serial numbers below 1010742, please contact Newstripe for the correct manual.



RollMaster™ 1000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!



PRECAUTIONARY WARNING!

- Please read and understand all operation instructions as detailed in this manual. Failure to follow specified instructions may result in equipment damage or serious injury to person.
- Use only in well-ventilated area.
- Keep away from sparks and flame – No smoking.
- Wear appropriate personal protective equipment.
- Always consult your Facility Safety and/or Personnel Department for specified safety protocols prior to operating this equipment.
- Paint and all foreign matter should be kept away from the pump and trough. It is especially important that pump rollers always be clean and greased with every use.
- **NEVER** use fuels to clean the equipment.
- **DO NOT** use brushes with metal bristles or any metal object to clean any part of the RollMaster™ 1000.
- The Paint Can Tube (attached to paint hose) and Mandrel Tube (in Roller Assembly), Mandrel, and Knurled Nuts are permanent parts of the machine. **NOTE: These parts must be cleaned after every use and are not supplied with the Roller Hose Replacement Kits.**



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • NewStripe.com


RollMaster™ 1000 Manual / 3856.0516

RollMaster™ 1000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!





Your RollMaster™ 1000 box should include these parts:

- Can hole punch
- Paint can tube
- Mandrel and Knurled nuts
- Mandrel tube w/ "O" ring
- 4" Roller kit (3 Pk)

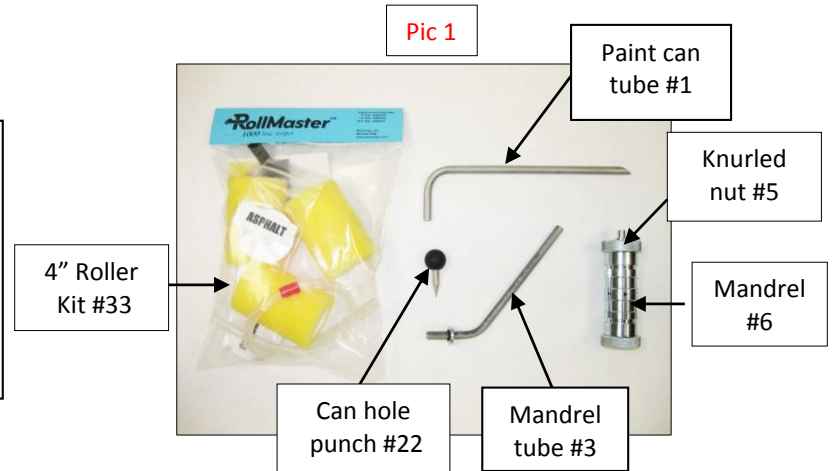

Assembly

1. Remove chassis and handle assembly from box. (Pic 2)
2. Remove quick release pins from the bottom of the handle.
3. Loosen wingnuts and raise handle to upright position. (Pic 3)
4. Line up bottom holes in handle with holes in side plates. Insert quick release pins and tighten wingnuts. (Pic 3)
5. Pull up on the cable adjuster with cable and slip into slot in the chassis. (Pic 4)
Note: The cable adjuster should be positioned all the way into the slot with the hex nut above the plate and round adjusting nut below the plate.
6. Adjust the nuts on the cable adjuster for proper operation. When adjusted correctly, Pump Rollers will spin when Paint Trigger is squeezed and stop spinning when trigger is released.
7. The Guide bar / Kickstand raises the Mandrel off the surface when it is in the vertical position. When lowered for striping it can also serve as a line guide. (Pic 2)
8. Remove the protective film from the Regulating Discs before installing. (Pic 5)
9. Place one Regulating Disc on one end of the Mandrel core (threaded area) and screw on one Knurled Nut (finger tight). Slide Roller Cover onto Mandrel and install second Regulating Disc and Knurled Nut. Tighten nuts fully.
NOTE: PVC spacers will be included with your kit if you ordered 2" or 3" wide rollers. Follow the above assembly instructions, except you must add these spacers between the plastic disc and the knurled nut.

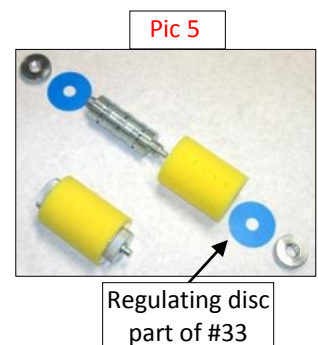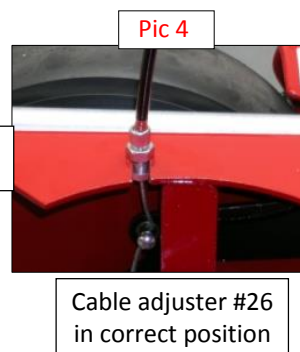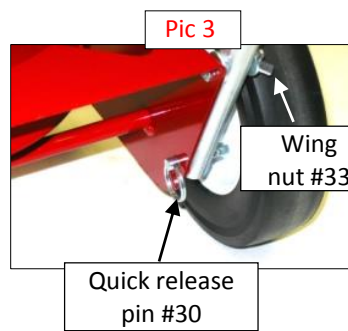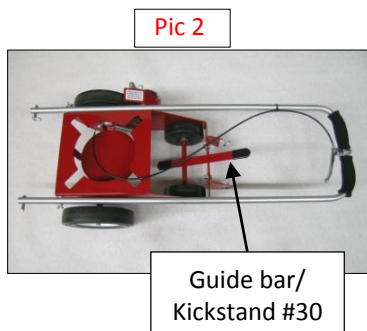


RollMaster™ 1000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

Assembly for Striping

1. Apply a light coat of grease to the "O" ring and the short end of the Mandrel Tube. Insert the Mandrel Tube into the open side of the Mandrel with the "O" ring side toward the Mandrel. (Pic 6)
2. Place the Mandrel with Roller Cover in the "J" hooks of the Carrier Assembly with the Mandrel Tube to the left side. The Regulating Disc on the Mandrel Tube will be on the inside of the "J" Yokes. The Mandrel should be able to slide up and down in the "J" Yokes freely. If necessary, bend the side plates out just enough to allow the Mandrel to move up and down freely. (Pic 7)
3. Open the Hose Trough by grasping the Knurled Trough Stud and the Rear Wheel hub and squeeze together. (It will click and lock open). (Pic 8)
4. Slide one end of Paint Hose over the Mandrel Tube and insert the hose under the Pump Rollers and inside the Trough. Squeeze the hose flat and insert it through the side of the Eyebolt with colored band **ABOVE** the Eyebolt at the top of the Trough. Close the Trough by pulling **OUT** on the release button located on the Trough. (Pic 9)
5. Make sure the Paint Hose is under the Pump Rollers and is not pinched by the sides of the Trough.

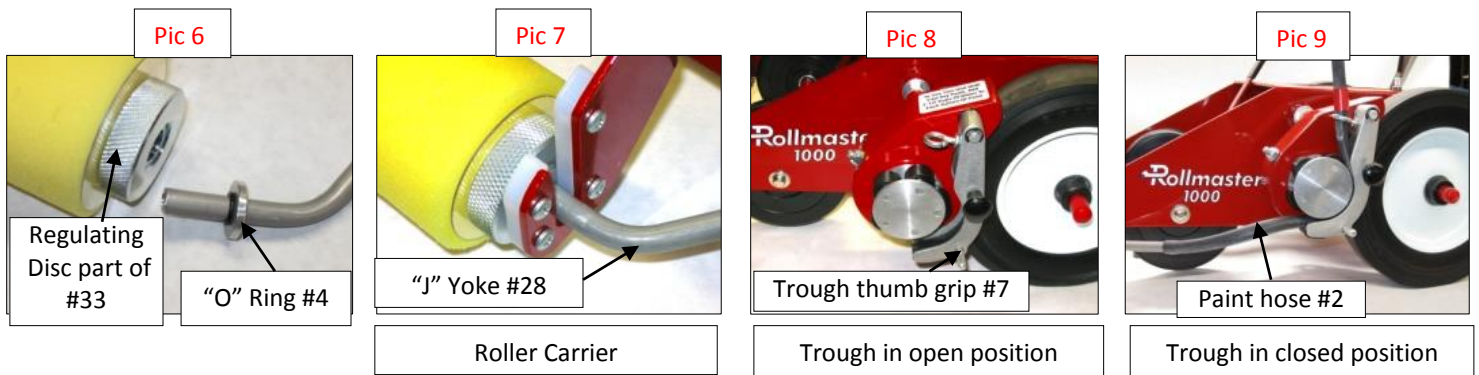

OPERATION

1. Punch a hole in the can lid with the provided Punch about 1 inch from the left edge. A second SMALL "vent hole" should be punched near the other hole.
2. Insert the Paint Can Tube (1) into the punched hole.
3. Attach the open end of the Paint Hose to the Paint Can Tube.
4. When you squeeze the Paint Trigger, the Pump Drive Wheel is brought in contact with the Rear Wheel, and paint is pumped directly to the Roller Cover. Release the trigger and pumping stops.
NOTE: Only squeeze Paint Trigger in the forward motion. Release trigger when rolling backwards.
5. Make sure the Pump Trough is closed.
6. To prime the Roller Cover for painting, squeeze and hold the Paint Trigger. Tip the unit back slightly so the front wheels are off the ground and roll the unit forward approximately 50-75 feet. You should see 'dots' of paint forming on the Roller Cover. This indicates that the Roller Cover is priming properly with paint.
7. Now place the unit on an existing line or cardboard and roll the unit forward and backwards with the front wheels contacting the surface until the roller is completely saturated.
NOTE: Only squeeze Paint Trigger in the forward motion. Release trigger when rolling backwards.



RollMaster™ 1000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

OPERATIONAL NOTE!

- DO NOT use lacquer based paints.
- DO NOT over thin the paint.
- The Mandrel and Roller Cover should slide up and down freely in the "J" Yokes with side clearance of not more than 1/32". Proper clearance was set at the factory, but it may be necessary to spread the side plates on the Carrier Assembly to regain this clearance.
- The Mandrel and Roller Cover Roller should roll freely in the "J" Yokes. If not, lightly oil the short end of the Mandrel Tube and the "O" Ring.
- Most paints can be used without thinning. However, some will "flow" better and may need to be thinned for easier use.
- Cooler temperatures (50-65 degrees) will also require paint thinning. Normally, no more than 4 oz (1/2 cup) per gallon is required. **Fast Dry paints are not recommended** (Fast Dry paints are those that are "no pick up" in 30 minutes or less) Also, on rough surfaces thinning will improve the appearance of the line.
- Paint should be at room temperature for best results.
- If Roller Cover becomes oversaturated with paint, release the Paint Trigger for a short period of time and continue rolling forward to allow excess paint to transfer from Roller Cover to surface area. Squeeze the trigger again when roller cover requires additional paint. This practice, called feathering, will be required when the operator is striping a 2" or 3" line.
- Releasing the trigger when you are 2-3 feet from the end of the line will allow you to finish with a clean and crisp end without puddling.

HELPFUL TIPS

- The Roller Cover must be saturated with paint before a solid painted line will appear on the painting surface. It is recommended that you saturate the Roller Cover as per the operation instructions.
- We recommend that you use water-base traffic paints as they are easier to clean up and do not "lift" new asphalt surfaces.
- Paint should be at least room temperature for proper operation. In colder climates, the flow of paint can be restricted because the paint becomes too thick. Make sure the paint is thin enough for the pump to pull the paint from the can and through the passageways of the Mandrel. If the paint is not thin enough, you will not get a solid line and the edges of your line not appear crisp.
- When stopping for prolonged periods without use, cover the Mandrel and Roller Cover in plastic wrap to prevent it from drying out.
- The machine works better if the operator moves at a slow constant pace for nice even edges.
- Releasing the Paint Trigger about two feet from the end of the line to create a crisp edge without puddling.



RollMaster™ 1000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

CLEANING PROCEDURE

1. When you are finished striping, open the Trough and roll forward on a dry painted line or cardboard to transfer excess paint from the Roller Cover.
2. Remove the end of the Paint Hose attached to the Paint Can Tube. Keep the hose upright to avoid dripping paint.
3. Squeeze the Paint hose through the side of the Eye Bolt and remove Paint Hose, Mandrel tube, and Mandrel with Roller Cover from the machine.
NOTE: This prevents any paint coming into contact with the pumping mechanism.
4. Set the Mandrel Tube and Paint Can Tube aside for cleaning.
5. Remove one Knurled Nut and Regulating Disc from Mandrel and slide Roller Cover off. Remove second Knurled Nut and Regulating Disc from Mandrel. Discard Roller Cover, Regulating Discs, and Paint Hose.
6. Clean Mandrel, Knurled Nuts, Mandrel Tube, and Paint Can Tube with ***water or solvent** for further use.
***DO NOT THROW AWAY THE MANDREL, KNURLED NUTS, PAINT CAN TUBE, OR MANDREL TUBE AS THESE ARE PERMANENT PARTS OF THE MACHINE.**
NOTE: Always use the solvent recommended by the paint manufacturer. **DO NOT** use petroleum base cleaners or thinners with water based paint. The cleaner will react with the paint, making it difficult to clean.
7. Apply a light coat of oil to all moving parts. (3 in 1 or light spray oil)

TROUBLESHOOTING GUIDE

| PROBLEM | REMEDY |
|---|---|
| Paint not getting to roller or too little paint getting to roller. | <ol style="list-style-type: none">1. Make sure trough is closed.2. Check paint hose for kink. If hose is kinked open Trough and rotate hose.3. Check Pump Drive Wheel is contacting Rear Wheel. If not adjust the cable at the frame.4. Check that all Pump Rollers are rotating. If not clean rollers of debris or paint and lubricate.5. Check to see if your paint is "Set Fast" or "Fast Dry". These paints are not recommended and require thinning, which may cause the paint to dry slower, or can diminish overall line quality. |
| Painted line is solid on one side, but "light" or skipping on the other side. | <ol style="list-style-type: none">1. Check that the Roller Cover slides up and down freely in the "J" Yoke and that the Mandrel is not binding. Adjust the "J" Yokes if needed or clean debris and paint off "J" Yokes.2. If the Mandrel and Roller Cover is "riding up" on the Mandrel Carrier sides, grease the Mandrel Tube end and "O" ring with light oil. |
| Painted line has heavy ridges on edges or excessive paint. | <ol style="list-style-type: none">1. Make sure you are using the proper Regulating Discs.2. Periodically release Paint Trigger every couple of feet during striping to avoid the Roller Cover from becoming oversaturated. |
| Paint line skips across width of roller. | <ol style="list-style-type: none">1. Make sure the Mandrel and Roller Cover are rolling freely. If not, grease "O" ring end of Mandrel Tube and "O" ring. |

Please call us! If you have any questions during setup, painting or cleaning.

Your machine is designed to be simple and safe to operate: 1-800-624-6706



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

RollMaster™ 1000 Manual / 3856.0516

RollMaster™ 1000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

PARTS LIST

| <u>Item Number</u> | <u>Description</u> | <u>Part Number</u> |
|--------------------|---|--------------------|
| 1 | Tube, Paint Can | 10000665 |
| 2 | Hose, Paint (5 pack) | 10002496 |
| 3 | Mandrel tube assembly | 10003864 |
| 4 | "O" ring 3/8" ID X 1/32" Thick | 10000027 |
| 5 | Nut, Knurled, Mandrel (2 required) | 10000646 |
| 6 | Mandrel | 10000643 |
| 7 | Hose Trough thumb grip | 10000702 |
| 8 | Hose Trough | 10000700 |
| 9 | Eye bolt w/nut | 10000726 |
| 10 | Pump Rotor assembly | 10000654 |
| 11 | Trough Lock Pin Kit | 10000671 |
| 12 | Wheel, Pump Drive (not shown) | 10000684 |
| 13 | Tire, Pump Drive (not shown) | 10000650 |
| 14 | Axle, Front (not shown) | 10003862 |
| 15 | Cable, Control (Sheath cut to 35") | 10000820 |
| 16 | Handle | 10003859 |
| 17 | Grip, Foam (2 required) | 10000967 |
| 18 | Lever, Control. | 10000821 |
| 19 | Wheels, Front | 10000753 |
| 20 | Wheels, Rear | 10003837 |
| 21 | Collar, Rear Axle (not shown) | 10001313 |
| 22 | Punch, Can Hole (not shown) | 10000669 |
| 23 | Spring, Actuating Arm | 10000692 |
| 24 | Actuating Arm | 10003860 |
| 25 | Cable Stop | 10001577 |
| 26 | Cable Adjuster | 10000018 |
| 27 | Roller Carrier with "J" Yokes | 10004024 |
| 28 | Replaceable "J" Yokes | 10004023 |
| 29 | Guide Bar/Kick Stand | 10003861 |
| 30 | Quick Release Pin | 10003844 |
| 31 | Wing Nut, Handle | 10000107 |
| 32 | Replaceable roller covers, regulating discs and paint hoses | |
| | 3 pack Replacement Roller Kits include 3 roller covers, paint hoses & 12 discs: | |
| | • 4" Replacement Roller Kit | 10004377 |
| | • 3" Replacement Roller Kit | 10004378 |
| | • 2" Replacement Roller Kit | 10004379 |
| | 12 pack Replacement Rollers include 12 roller covers & 48 discs: | |
| | • 4" Replacement Rollers and discs | 10000728 |
| | • 3" Replacement Rollers and discs | 10001461 |
| | • 2" Replacement Rollers and discs | 10000729 |
| | Optional Left Position Roller Kit includes: | 10004461 |
| | Mandrel Tube Assembly for left position (10003866), Left Position | |
| | Striping Bracket (10003865), 5/16-18 x 3/4" Bolts (2) (10001499), | |
| | 5/16" Flat Washers (4) (10000095), 5/16-18 KEPS Nuts (2) (10004461) | |



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com


RollMaster™ 1000 Manual / 3856.0516

RollMaster™ 1000


ALWAYS wear safety goggles or protective eye-wear when operating the unit!

PARTS PICTURES


Pic 10

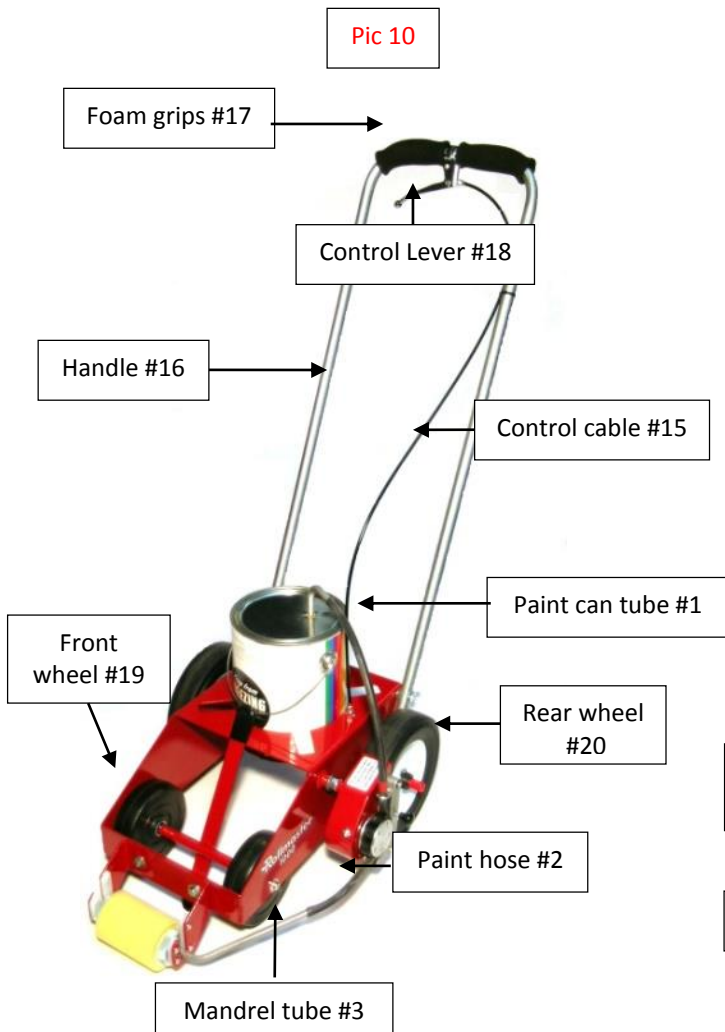


Pic 11

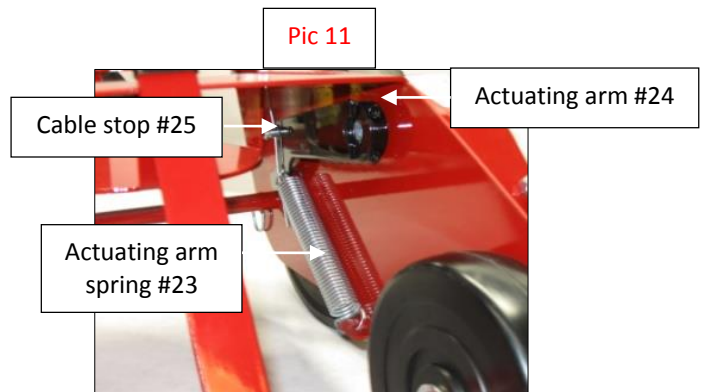

Pic 12

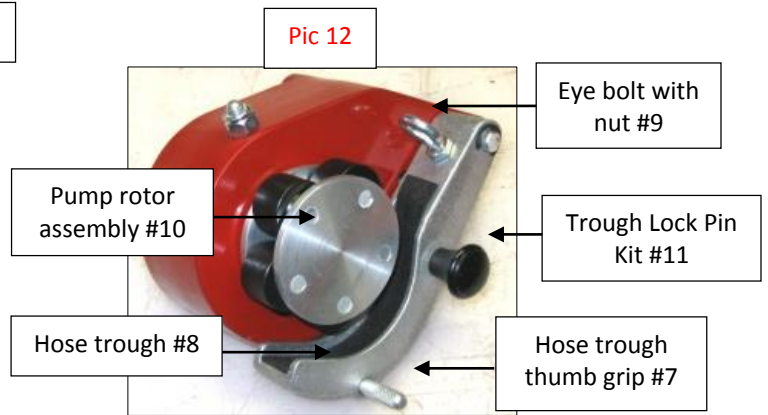

Pic 13

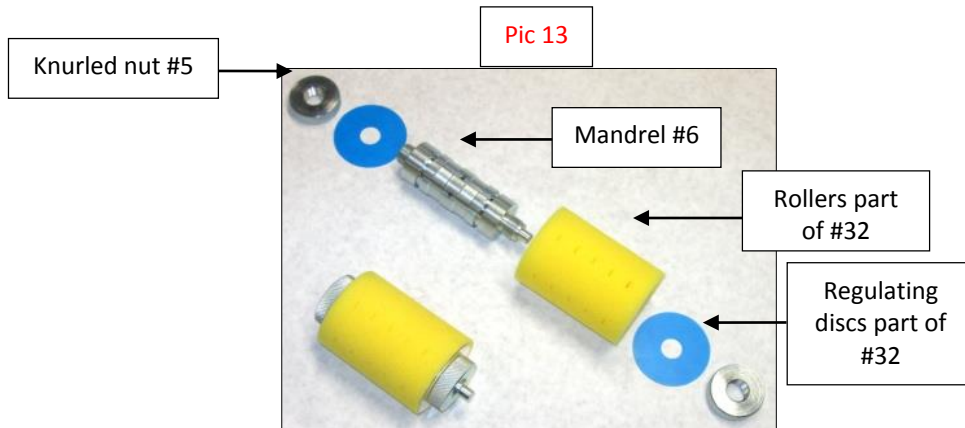

1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

RollMaster™ 1000 Manual / 3856.0516

RollMaster™ 1000

ALWAYS wear safety goggles or protective eye-wear when operating the unit!

THE NEWSTRIPE WARRANTY – 18 MONTH

NEWSTRIPE, INC., WARRANTS TO THE ORIGINAL PURCHASER, FOR 18 (EIGHTEEN) MONTHS AFTER DATE OF PURCHASE, THAT THE EQUIPMENT* HEREBY SOLD SHALL BE FREE OF DEFECTS IN MATERIALS AND WORKMANSHIP. THIS WARRANTY DOES NOT EXTEND TO ANY DAMAGE OR MALFUNCTION RESULTING FROM MISUSE, NEGLIGENCE, ACCIDENT, IMPROPER OPERATION, OR NORMAL WEAR AND TEAR.

Damage incurred in shipment from Newstripe, Inc. to the customer is the total responsibility of the carrier. The CUSTOMER MUST NOTE DAMAGES on the Bill of Lading of Trucking Company or Railroad; and Newstripe, Inc. will furnish to the customer the cost or parts and labor. The customer can then bill the common carrier for the damages by placing his signature on the documents.

The Newstripe, Inc. obligation under this warranty and any implied warranties is limited to replacement or repair of defective parts of its manufacture without charge for 18 (EIGHTEEN) months from date of purchase. For service under this warranty, buyer shall ship the defective part or parts of the equipment, transportation prepaid, to Newstripe, Inc. together with a written description of any claimed defect and proof of purchase date of the materials being returned. **Prior to retuning any part or machine, the CUSTOMER must obtain a Return Materials Authorization number. Call 1-800-624-6706. To review the complete guidelines for warranty and returns, please visit www.newstripe.com/guidlinesforwarrantyandreturn.**

***Gasoline engines, compressors, pumps (including airless) and Transaxles are furnished with their respective manufacturer's warranties only. Such components are not covered by any warranty of Newstripe, Inc. Where Newstripe elects to extend manufacturers' warranties, the warranty shall be pro-rated as to cover 100% of the cost to replace or repair materials and parts for the first 12 months of ownership and 60% for the remaining 6 month period.**

The responsibilities described above are the only responsibilities of Newstripe, Inc. under this written warranty or any implied warranty, and may be exercised only within 18 (EIGHTEEN) months from the date of purchase. In no event shall Newstripe, Inc. be liable for incidental or consequential damages and no person had any authority to bind it to any representation or warranty, not be responsible for work done, materials furnished or repairs made by others without its' specific written authorization.

THIS WARRANTY SHALL BE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND THERE IS NO OTHER REPRESENTATION OR WARRANTY OF ANY KIND WITH RESPECT TO THE GOODS SOLD HEREBY EXCEPT AS SET FORTH HEREIN. IT IS EXPRESSLY AGREED THAT THIS WARRANTY SHALL BE LIMITED TO THE ADJUSTMENT, REPAIR OR REPLACEMENT OF PARTS AND THE LABOR AND SERVICES REQUIRED THEREBY. IN NO EVENT, INCLUDING ANY CLAIM FOR NEGLIGENCE, SHALL NEWSTRIPE, INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Sincerely,
Newstripe, Inc



1700 Jasper St., Unit F, Aurora, CO 80011 T 800.624.6706 F 303.364.7796 • Newstripe.com

RollMaster™ 1000 Manual / 3856.0516

