



Vestil Manufacturing Co.
 2999 North Wayne Street, P.O. Box 507, Angola, IN 46703
 Telephone: (260) 665-7586 Toll Free (800) 348-0868
 Fax: (260) 665-1339 www.vestilmfg.com

SWA-50, SWA-70, & SWA-51-AR Semi-Automatic Stretch Wrap Machines Instruction Manual



Receiving instructions:

After delivery, remove the packaging from the product. Inspect the product closely to determine whether it sustained damage during transport. If damage is discovered, immediately record a complete description of the damage on the bill of lading. If the product is undamaged, discard the packaging.

Note:

The end-user is solely responsible for confirming that product design complies with all laws, regulations, codes, and mandatory standards applied where the product is used.

Table of Contents

Specifications.....	2
Signal Words.....	2
Hazards of Improper Use.....	3
FIG. 1: SWA-50 exploded parts diagram & bill of materials.....	4
FIG. 2A: Stretch wrap carriage subassembly exploded parts diagram & bill of materials.....	5
FIG. 2B: Manual counterbalanced mast subassembly exploded parts diagram & bill of materials.....	5
FIG. 2C: Thrust bearing subassembly exploded parts diagram & bill of materials.....	5
FIG. 3: Power unit subassembly with sheave exploded parts diagram & bill of materials.....	6
FIG. 4: SWA-70 exploded parts diagram & bill of materials.....	7
FIG. 5: SWA-51-AR exploded parts diagram & bill of materials.....	8
FIG. 6: Electrical system diagram.....	9
FIG. 7: Powered mast electrical diagram.....	10
Delta Motor Speed Controller.....	11
Installation.....	12 – 13
Stretch Wrap Holder Assembly.....	13
Belt Tensioning Procedure	14 – 15
Use Instructions.....	15 – 16
Inspections & Maintenance.....	16
Labeling Diagram.....	17
Troubleshooting.....	18
Limited Warranty.....	19

Specifications

Thank you for purchasing a semi-automatic stretch wrap machine made by Vestil Manufacturing Company ("Vestil"). Our wrapping machines are designed for dependability and incorporate numerous safety-enhancing features. Although use and maintenance procedures are relatively intuitive, all persons who might use or maintain this product must familiarize themselves with the instructions provided in this manual.

Notable features of standard models include:

- Carousel rotation controlled by a (foot) pedal switch connected to an 8 foot cord. The standard 115V, variable AC motor allows adjustable rotation speeds of 3-12 rpm and includes soft-starting and stopping capability.
- Adjustable stretch-wrap tension controlled by a friction-brake assembly. Film placement is controlled manually by moving the carriage assembly up and down on the vertical mast. An easy-to-release, hand operated carriage-brake allows the carriage to move freely making film application fast and simple.
- Adaptability to use stretch wrap rolls 10"-20" long.
- Minimal assembly is necessary. Each wrapping machine is shipped with the mast disconnected. Assembly simply requires raising the mast and bolting it in place.
- The stretch-wrap delivery mechanism can be upgraded to a 115V, single phase, AC-powered mast option (PMO).
- Ability to be used in conjunction with an optional ramp, which allows the operator to load and unload the machine with a pallet truck.

Dimensions and other product specifications of standard wrapping machine models appear in the following tables:

Model	Turntable diameter	Maximum service height	Turntable height	Uniform capacity	Net weight
SWA-50	50in. (127cm)	82in. (208.3cm)	2in. (5cm)	4,000lb. (1,818kg)	499lb. (~226.8kg)
SWA-70	70in. (178cm)	82in. (208.3cm)	2 ¹ / ₄ in. (5.7cm)	4,000lb. (1,818kg)	926lb. (~420.9kg)
SWA-51-LP	51in. (129.5cm)	83in. (211cm)	1in. (2.5cm)	4,000lb. (1,818kg)	470lb. (~214kg)

Optional equipment		
Model	Description	Weight in pounds (~kg)
SWA-5070LP-PMO	Powered mast option (50in. and 70in. diameter)	400lb. (~181.8kg)
SWA-50-R-4848	Approach ramp: 48in. x 48in. x 2in. (W x L x H)	150lb. (~68.2kg)
SWA-70-R-4848	Approach ramp: 48in. x 48in. x 2in. (W x L x H)	268lb. (~121.8kg)
SWA-50-SCALE	Digital scale (50in. diameter)	680lb. (~309.1kg)
SWA-70-SCALE	Digital scale option (70in. diameter)	884lb. (~401.8kg)
SWA-50-R-4860-SCL	Approach ramp for scale option	346lb. (~157.3kg)
SWA-70-R-4860-SCL	Approach ramp for scale option	335lb. (~152.3kg)

Signal Words

This manual uses SIGNAL WORDS to draw the reader's attention to safety-related information. Signal words indicate the likelihood of personal injuries as well as the probable seriousness of those injuries, if the product is misused in the ways described. Other signal words call attention to uses of the product likely cause property damage. Signal words used in this manual appear below along with the meaning of each word:



Identifies a hazardous situation which, if not avoided, WILL result in DEATH or SERIOUS INJURY. Use of this signal word is limited to the most extreme situations.



Identifies a hazardous situation which, if not avoided, COULD result in DEATH or SERIOUS INJURY.



Indicates a hazardous situation which, if not avoided, COULD result in MINOR or MODERATE injury.



Identifies practices likely to result in product/property damage, such as operation that might damage the product.

Hazards of Improper Use

Vestil diligently strives to identify foreseeable hazards associated with the use of its products. However, material handling is inherently dangerous and no manual can address every conceivable risk. The end-user ultimately is responsible for exercising sound judgment at all times.

⚠️ WARNING

Failure to read and understand the entire manual before assembling, installing, using and servicing the product is a misuse of the product. If this product is used improperly or carelessly, the operator and/or bystanders might sustain serious personal injuries. To reduce the likelihood of injury:


- DO NOT modify the product in any way UNLESS you first obtain written approval from Vestil. Unauthorized modifications automatically void the Limited Warranty and might make the product unsafe to use.
- Read the manual to refresh your understanding of proper use and maintenance procedures.
- DO NOT exceed the maximum rated load (see Label 287 in “Labeling diagram” on p. 17).
- DO NOT stand or sit on the turntable or on the load at any time.
- Loads must not extend over the shelves of the cart.
- Install the machine ONLY on even, level surfaces where the machine will not be exposed to the outdoor environment.
- Keep hand, clothing, etc. out of contact with all moving parts of the machine.
- BEFORE using the wrapping machine, instruct all bystanders to stand away from the machine and the item to be wrapped.
- The person operating the turntable should stand where the mast is between him and the turntable.
- DO NOT activate the turntable UNLESS the load is centered on it and stable. Be prepared to stop the turntable, because rotation can cause the load to shift and become unstable. Because an unstable load might topple during the wrapping process, EVERY person involved should remain far enough away from the machine to avoid contact with the load if it falls. Higher rotation speeds can cause an unstable load to be flung from the turntable.
- DO NOT continue to use the machine if you observe abnormal motion or noise. Immediately tag the unit “Out of service” and report the problem to maintenance personnel.
- DO NOT attempt to resolve any problem(s) with the product unless you are both authorized to do so and certain that it will be safe to use afterwards.
- Inspect the product before each use:
 - A. DO NOT use this product if the inspection reveals structural damage. Examples of structural damage include, but are not limited to, the following: 1) Cracked, broken or significantly deformed frame, mast or turntable; 2) cracked welds; 3) corrosion, severe wear, or other condition that affects the ability of the product to support weight. Replace each part that fails to pass an inspection, and DO NOT use the product until it is fully restored to normal condition.
 - B. DO NOT use the product if any unusual noise or movement is observed. If a malfunction occurs, remove the unit from service and notify your supervisor & maintenance personnel about the issue.
- DO NOT use this device UNLESS all product labels (see “Label Placement Diagram”) are readable and undamaged.

NOTICE

- Proper use, maintenance, and storage are essential for this product to function properly.
- Always use this product in accordance with the instructions in this manual and consistent with any training relevant to machines, devices, etc. used in conjunction with this product.
 - Periodically lubricate the chain.
 - Keep the product clean & dry.
 - Vestil uses only quality parts to make the equipment we manufacture. Vestil bears no responsibility for problems that result as a consequence of using unapproved replacement parts. To order replacement or spare parts for this equipment, contact the factory.


FIG. 1: SWA-50 Exploded Parts Diagram & Bill of Materials

Stretch wrap carriage subassembly (part no. 20-538-005 shown in exploded form in FIG. 2A on p. 5).

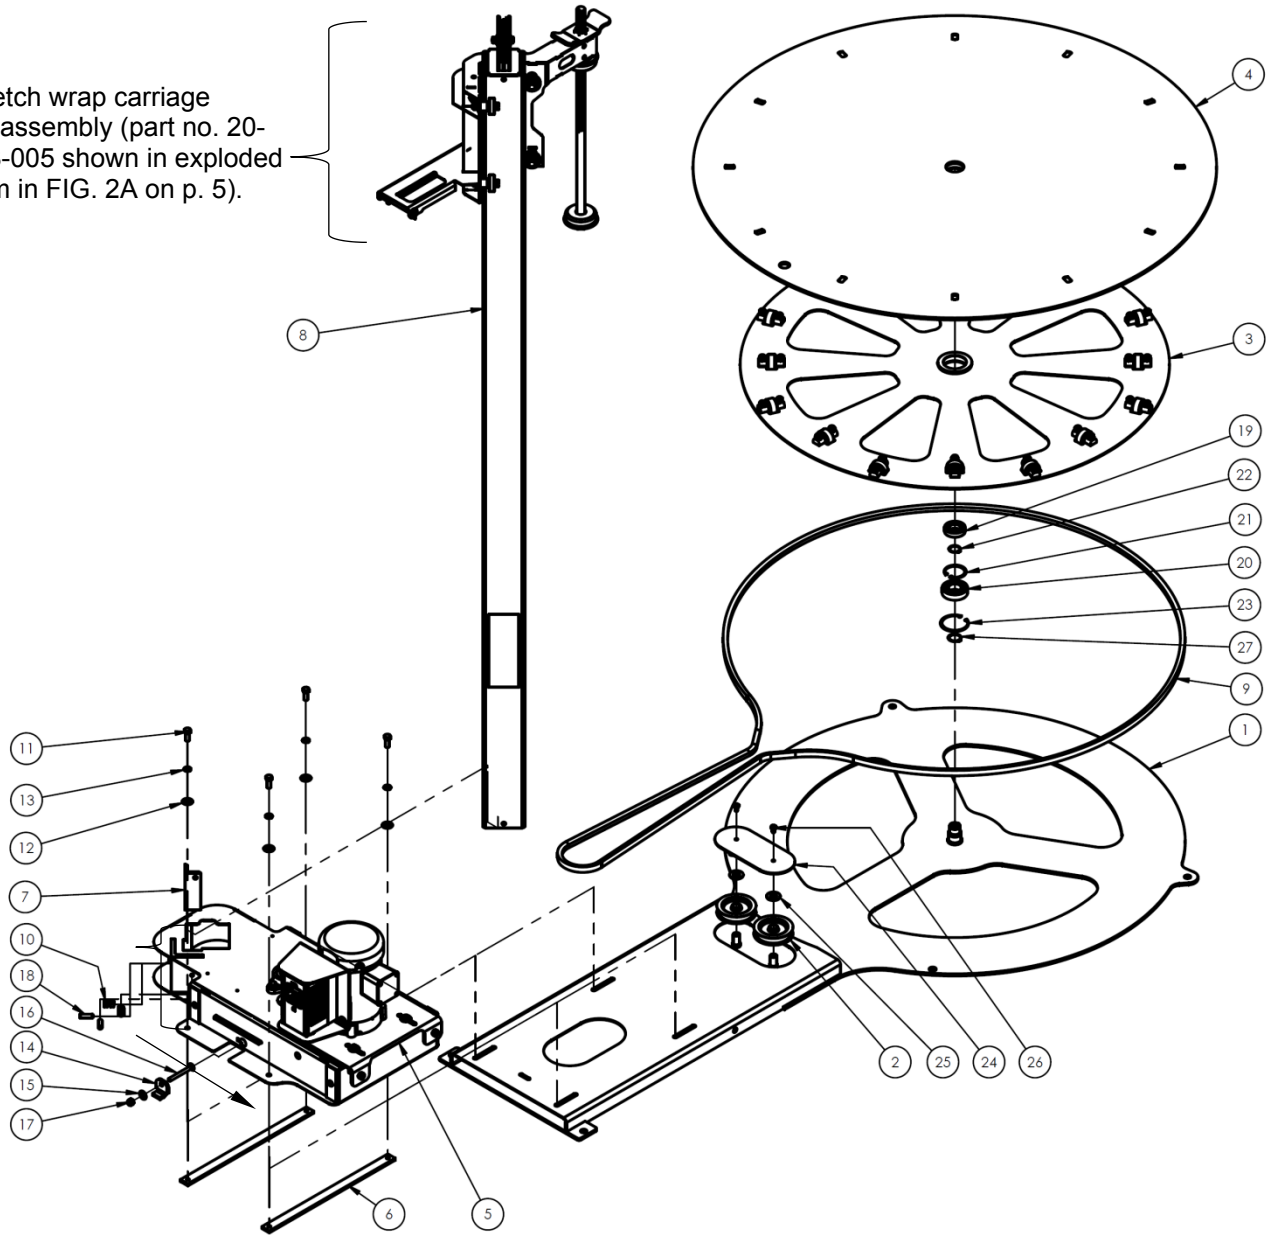


Item	Part no.	Description	Qty	Item	Part no.	Description	Qty
1	20-514-078	Weldment, base frame	1	15	33006	⁵ / ₁₆ in. USS zinc-plated flat washer	1
2	20-027-012	Belt idler	2	16	21265	⁵ / ₁₆ in. – 18 UNC x 3in. zinc-plated bolt	1
3	20-610-001	Subassembly, thrust bearing	1	17	37021	⁵ / ₁₆ in. – 18 #2 zinc-plated Nylon lock nut	1
4	20-513-098	Weldment, SWA-50 deck	1	18	SSFLASKT 0.375-16x1.25-HX-N		2
5	20-160-001	Power unit subassembly with sheave	1	19	20-110-001	Single row ball bearing, shielded, R16Z	1
6	20-113-024	Spacer, plate	2	20	20-110-022	6206 bearing, 1.18 ID x 2.44 OD x 0.62 thick	1
7	20-014-117	Frame, bar, squeeze	1	21	20-117-001	Internal retaining ring, 2in.	1
8	20-514-084	Subassembly, counterbalanced mast, manual (see FIG. 2B on p.5)	1	22	20-117-003	External retaining ring, 1in. diameter shaft	1
9	20-027-007	Belt, B190 (large belt)	1	23	20-117-005	Internal retaining ring, 2 ⁷ / ₁₆ in.	1
10	36106	³ / ₈ in. – 16 zinc-plated hex nut	4	24	20-024-025	Cover plate, idler access	1
11	11105	³ / ₈ in. – 16 x 1in. HHCS #2 zinc-plated bolt	4	25	33090	⁵ / ₈ in. SAE flat washer	2
12	33008	³ / ₈ in. USS zinc-plated flat washer	4	26	11001	Hex bolt, grade A, zinc plated, ¹ / ₄ in. – 16 x ¹ / ₂ in.	2
13	33622	³ / ₈ in. zinc-plated lock washer	4	27	68021	External retaining ring, phosphate finish, 1 ¹ / ₈ in.	1
14	20-016-096	Bracket, tensioning, formed	1				

FIG. 2A: Stretch wrap carriage subassembly exploded parts diagram & bill of materials

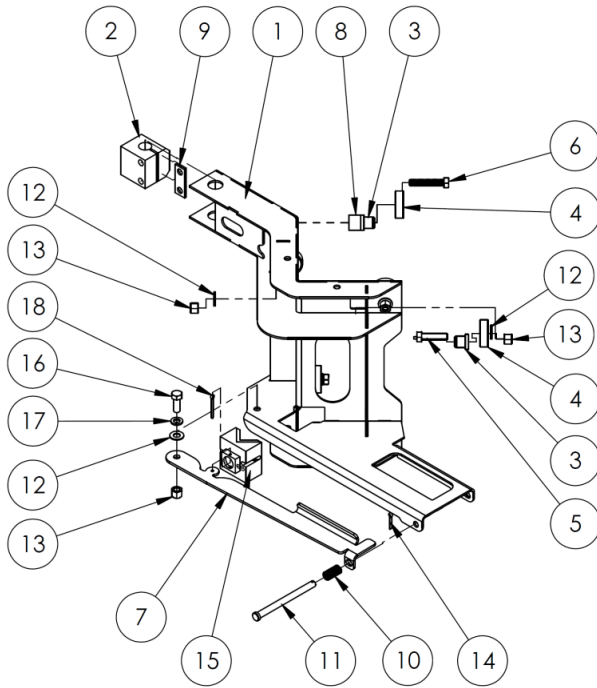

Item	Part no.	Description	Quantity
1	20-514-080	Weldment, carriage frame	1
2	20-145-010	Specialty hardware, clamp, wrap, mounting	1
3	21-113-021	Spacer, bearing shaft	8
4	20-110-006	Roller bearing	8
5	11109	³ / ₈ in. - 16 x 1 ¹ / ₂ in. HHCS #2 zinc-plated bolt	4
6	11111	³ / ₈ in. - 16 x 2in. HHCS #2 zinc-plated bolt	4
7	20-040-001	Lever, brake release, formed	1
8	21-113-020	Spacer, bearing	4
9	20-113-023	Spacer	1
10	20-146-008	Spring, compression spring	1
11	99-112-006	Pin, clevis	1
12	33008	³ / ₈ in. USS zinc-plated flat washer	10
13	37024	³ / ₈ in. Nylock insert nut	9
14	64076	¹ / ₈ in. x 1in. zinc-plated cotter pin	1
15	20-537-018	Brake pad assembly	1
16	11105	³ / ₈ in. - 16 x 1in. HHCS #2 zinc-plated bolt	1
17	33622	³ / ₈ in. zinc-plated lock washer	1
18	65078	¹ / ₈ in. x 1 ¹ / ₂ in. zinc-plated cotter pin	1

FIG. 2B: Manual counterbalanced mast subassembly exploded parts diagram & bill of materials

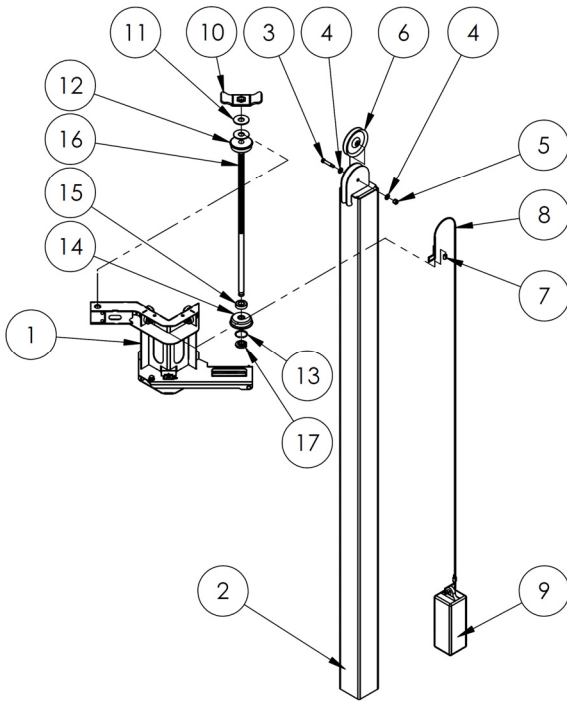

Item	Part no.	Description	Quantity
1	20-538-005	Subassembly, carriage	1
2	20-514-082	Subassembly, mast, manual	1
3	26333	Shoulder screw 0.375in. x 1.5in.	1
4	33008	³ / ₈ in. USS zinc-plated flat washer	2
5	37024	³ / ₈ in. Nylock insert nut	1
6	20-027-001	Pulley, counterweight	1
7	20-145-019	Specialty hardware, swage sleeve	2
8	20-145-018	Specialty hardware, cable	1
9	28-014-179	Cast, counterweight (SWA-48)	1
10	20-620-001	Weldment, specialty hardware, rod tension wing nut	1
11	20-113-003	⁷ / ₈ in. fiber washer	2
12	20-014-005	Frame, tube retainer, (top)	1
13	68061	1 ⁵ / ₈ in. retainer ring	1
14	20-014-006	Tube, retainer, (bottom)	1
15	20-111-002	Bearing, 7R16	1
16	20-014-116	Frame, rod, wrap retainer	1
17	20-113-022	Spacer, lock	1

FIG. 2C: Thrust bearing subassembly exploded parts diagram & bill of materials

Item	Part no.	Description	Qty
1	20-610-003	Weldment, thrust bearing plate	1
2	20-027-011	Load roller	16
3	26327	Shoulder screw 0.375in. x 0.5in.	32
4	37021	⁵ / ₁₆ in. - 18 zinc-plated #2 nylon lock nut	32


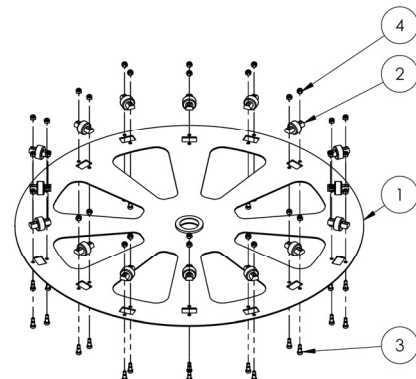



FIG. 3: Power unit subassembly with sheave exploded parts diagram & bill of materials

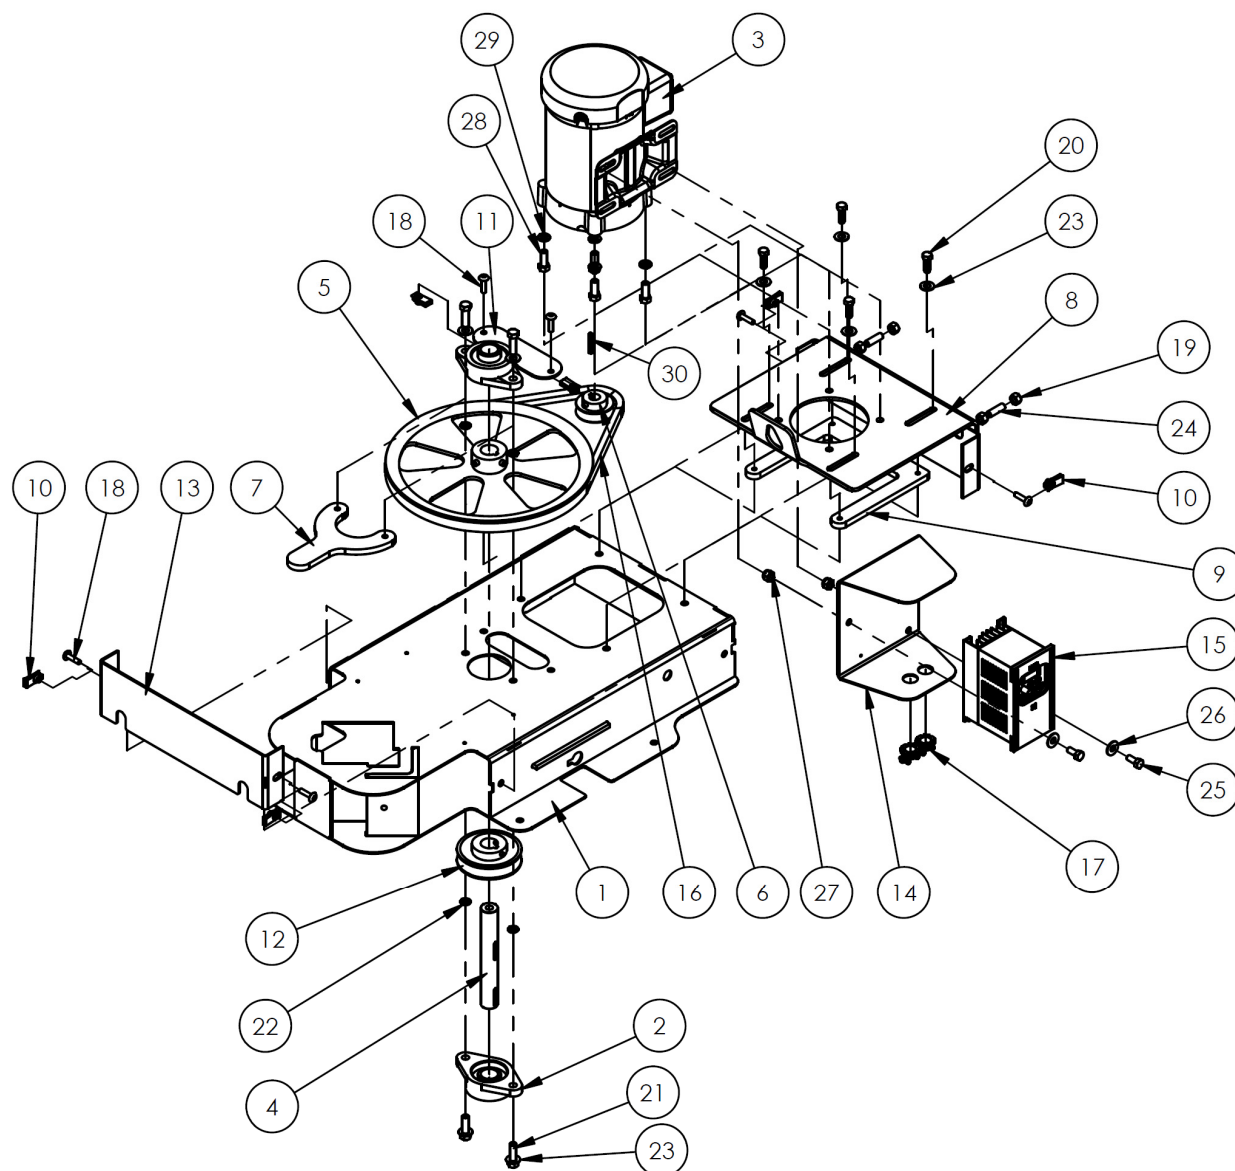

Item	Part no.	Description	Qty	Item	Part no.	Description	Qty
1	20-514-099	Weldment, frame, subassembly	1	16	20-027-008	Belt, B40	1
2	20-110-014	Flange, 2 bolt, 1in. inner diameter	2	17	99-034-037	Accessories, electrical, Romex 0.375in.	2
3	20-135-004	Motor 1/2 HP, 3 PH, 1725 RPM, 230/460V, 60 Hz	1	18	29185	Screw, machine, truss head	6
4	20-112-015	Shaft pin, 1in. outer diameter	1	19	36106	3/8in. - 16 zinc-plated hex nut	4
5	20-027-010	Sheave, 12in., 1in. hub	1	20	11055	5/16in. - 18 x 1in. HHCS zinc-plated #2 bolt	4
6	20-027-009	Sheave 5/8in. inner diameter x 2 in. outer diameter	1	21	11107	3/8in. - 16 x 1 1/4in. HHCS zinc-plated #2 bolt	4
7	20-110-013	Bearing, mount, upper	1	22	33620	5/16in. zinc-plated lock washer	4
8	20-016-085	Bracket, motor, mounting plate	1	23	33008	3/8in. USS zinc-plated flat washer	8
9	20-016-084	Bracket, motor, mounting plate	1	24	SSFLATSKT 0.375-16x1.25-HX-N		2
10	0162854	U-spring, threaded nut	6	25	11052	5/16in. - 18 UNC x 3/4in. HHCS screw	2
11	20-024-023	Plate cover, bearing	1	26	33006	5/16in. USS zinc-plated flat washer	2
12	20-042-019	Sheave, drive	1	27	37021	5/16in. - 18 #2 zinc-plated Nylon lock nut	2
13	20-024-022	Guard, end, formed	2	28	11105	3/8in. - 16 x 1in. HHCS #2 zinc-plated bolt	4
14	20-016-053	Bracket, mounting	1	29	33622	3/8in. zinc-plated lock washer	4
15	20-029-006	Accessories, electrical, delta controller	1	30	99-130-001	Pin, keystone	1


FIG. 4: SWA-70 exploded parts diagram

Stretch wrap carriage subassembly (part no. 20-538-005) and counterbalanced mast (shown in exploded form in FIGS. 2A & 2B on p. 5).

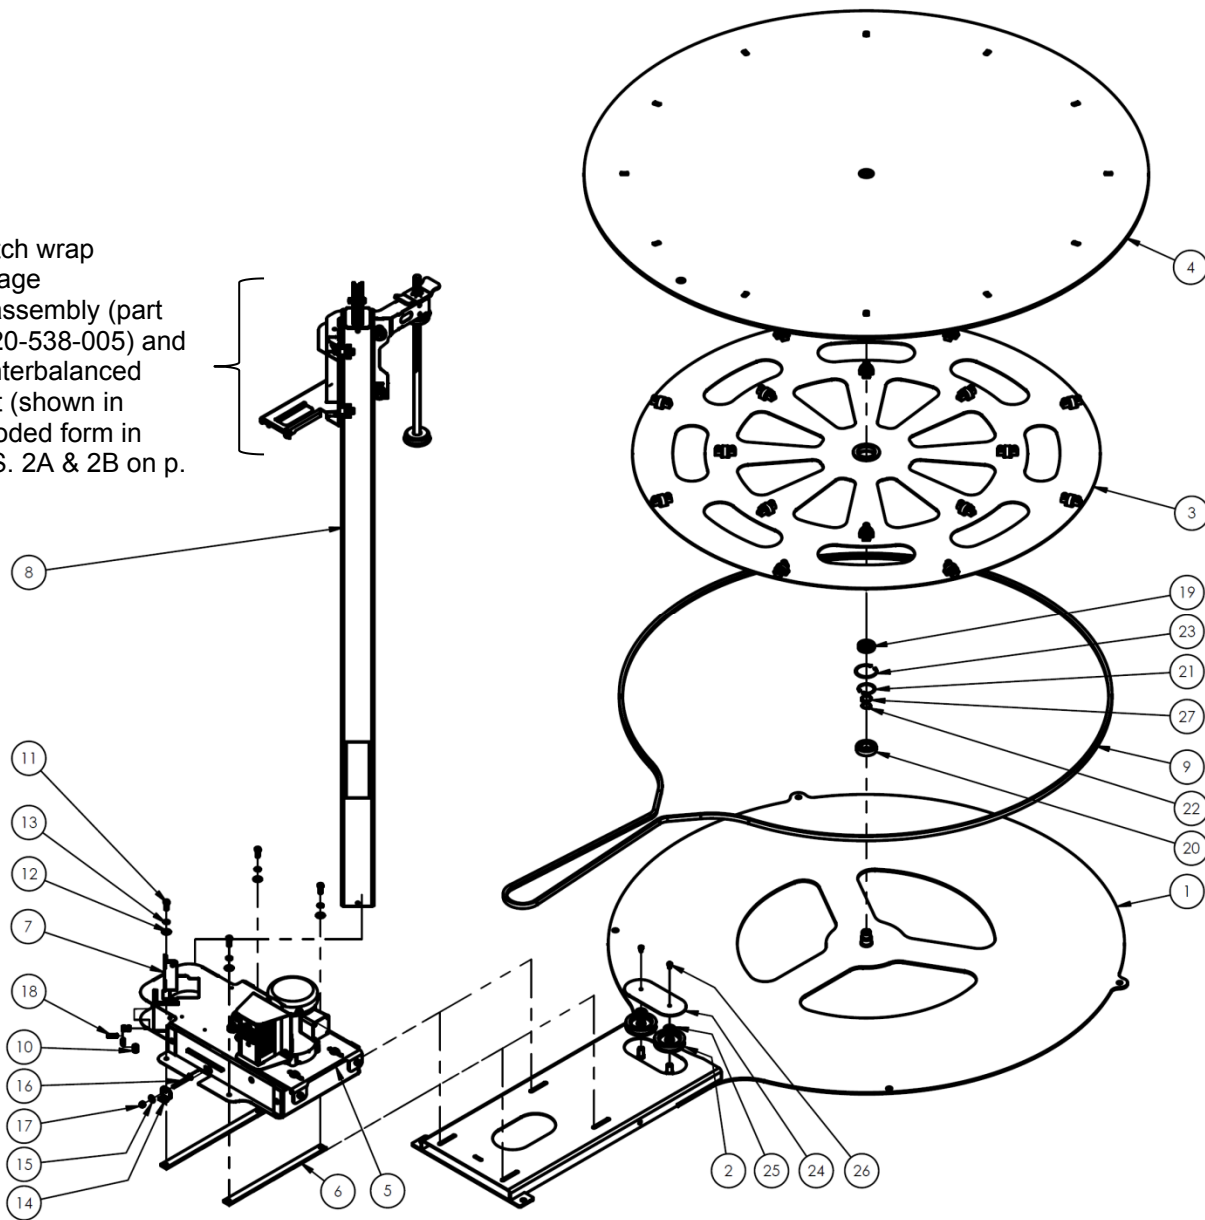

Item	Part no.	Description	Qty	Item	Part no.	Description	Qty
1	20-514-079	Weldment, base frame	1	15	33006	⁵ / ₁₆ in. USS zinc-plated flat washer	1
2	20-027-012	Belt idler	2	16	21265	⁵ / ₁₆ in. – 18 UNC x 3in. zinc-plated bolt	1
3	20-610-002	Subassembly, thrust bearing	1	17	37021	⁵ / ₁₆ in. – 18 #2 zinc-plated Nylon lock nut	1
4	20-513-100	Weldment, SWA-70 deck	1	18	SSFLASKT 0.375-16x1.25-HX-N		2
5	20-160-001	Power unit subassembly with sheave (see FIG. 3 on p. 6)	1	19	20-110-001	Single row ball bearing, shielded, R16Z	1
6	20-113-024	Spacer, plate	2	20	20-110-022	6206 bearing, 1.18 ID x 2.44 OD x 0.62 thick	1
7	20-014-117	Frame, bar, squeeze	1	21	20-117-001	Internal retaining ring, 2in.	1
8	20-514-084	Subassembly, counterbalanced mast, manual (see FIG. 2B on p. 5)	1	22	20-117-003	External retaining ring, 1in. diameter shaft	1
9	20-027-014	Belt, B245 (large belt)	1	23	20-117-005	Internal retaining ring, 2 ⁷ / ₁₆ in.	1
10	36106	³ / ₈ in. – 16 zinc-plated hex nut	4	24	20-024-025	Cover plate, idler access	1
11	11105	³ / ₈ in. – 16 x 1in. HHCS #2 zinc-plated bolt	4	25	33090	⁵ / ₈ in. SAE flat washer	2
12	33008	³ / ₈ in. USS zinc-plated flat washer	4	26	11001	Hex bolt, grade A, zinc plated, ¹ / ₄ in. – 16 x ¹ / ₂ in.	2
13	33622	³ / ₈ in. zinc-plated lock washer	4	27	68021	External retaining ring, phosphate finish, ¹ / ₈ in.	1
14	20-016-096	Bracket, tensioning, formed	1				


FIG. 5: SWA-51-AR5 exploded parts diagram

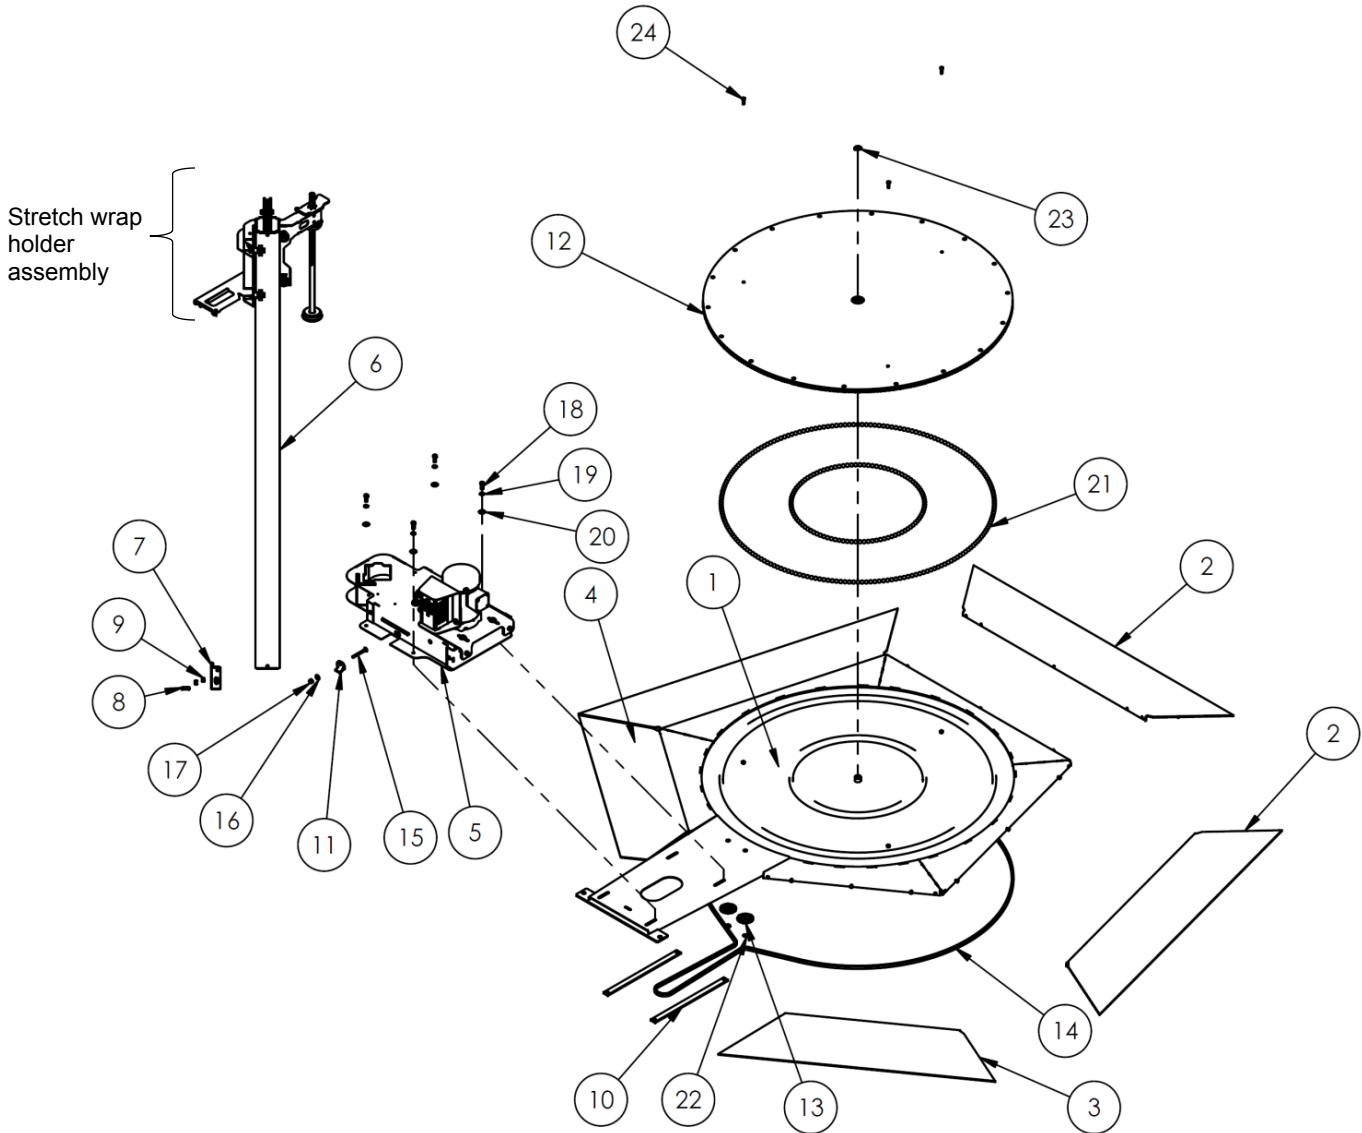

Item	Part no.	Description	Qty	Item	Part no.	Description	Qty
1	20-514-135	Weldment, frame	1	13	20-042-033	Sprocket, idler assembly	2
2	20-514-136	Weldment, approach ramp	3	14	20-042-034	#35 chain	1
3	20-514-137	Weldment, approach ramp	1	15	21265	Bolt, carriage, $\frac{5}{16}$ "-18UNCx3", zinc plated	1
4	20-514-138	Weldment, approach ramp	1	16	33006	Flat washer, zinc plated, USS, $\frac{5}{16}$ "	1
5	20-160-002	Sub-assembly, power unit with sprocket	1	17	37021	Nylon insert lock nut, grade 2, zinc finish, $\frac{5}{16}$ "-18	1
6	20-514-084	Subassembly, counterbalanced mast, manual	1	18	11105	Hex bolt, grade A, zinc plated, $\frac{3}{8}$ "-16x1"	4
7	20-014-117	Frame, bar, squeeze	1	19	33622	Split lock washer, carbon steel, medium zinc finish, $\frac{3}{8}$ "	4
8	SSFLATSKT 0.375-16x1.25-HX-N		2	20	33008	Flat washer, low carbon, USS, zinc plated, $\frac{3}{8}$ "	4
9	36106	Hex nut, grade A, zinc plated, $\frac{3}{8}$ "-16	4	21	20-110-004	Bearing, ball	300
10	20-113-024	Spacer, plate	2	22	68013	$\frac{5}{8}$ " external retaining ring	2
11	20-016-096	Bracket, tensioning, formed	1	23	20-117-003	External retaining ring, 1" diameter	1
12	20-513-052	Weldment, deck and sprocket	1	24	11005	Bolt, $\frac{1}{4}$ "-20UNCx1", HHCS #2 zinc plated	3

FIG. 6: Electrical system diagram


OVERCURRENT & SHORT-CIRCUIT PROTECTION ARE TO BE PROVIDED BY THE END-USER PER THE NEC (NFPA 70) AND LOCAL CODES.

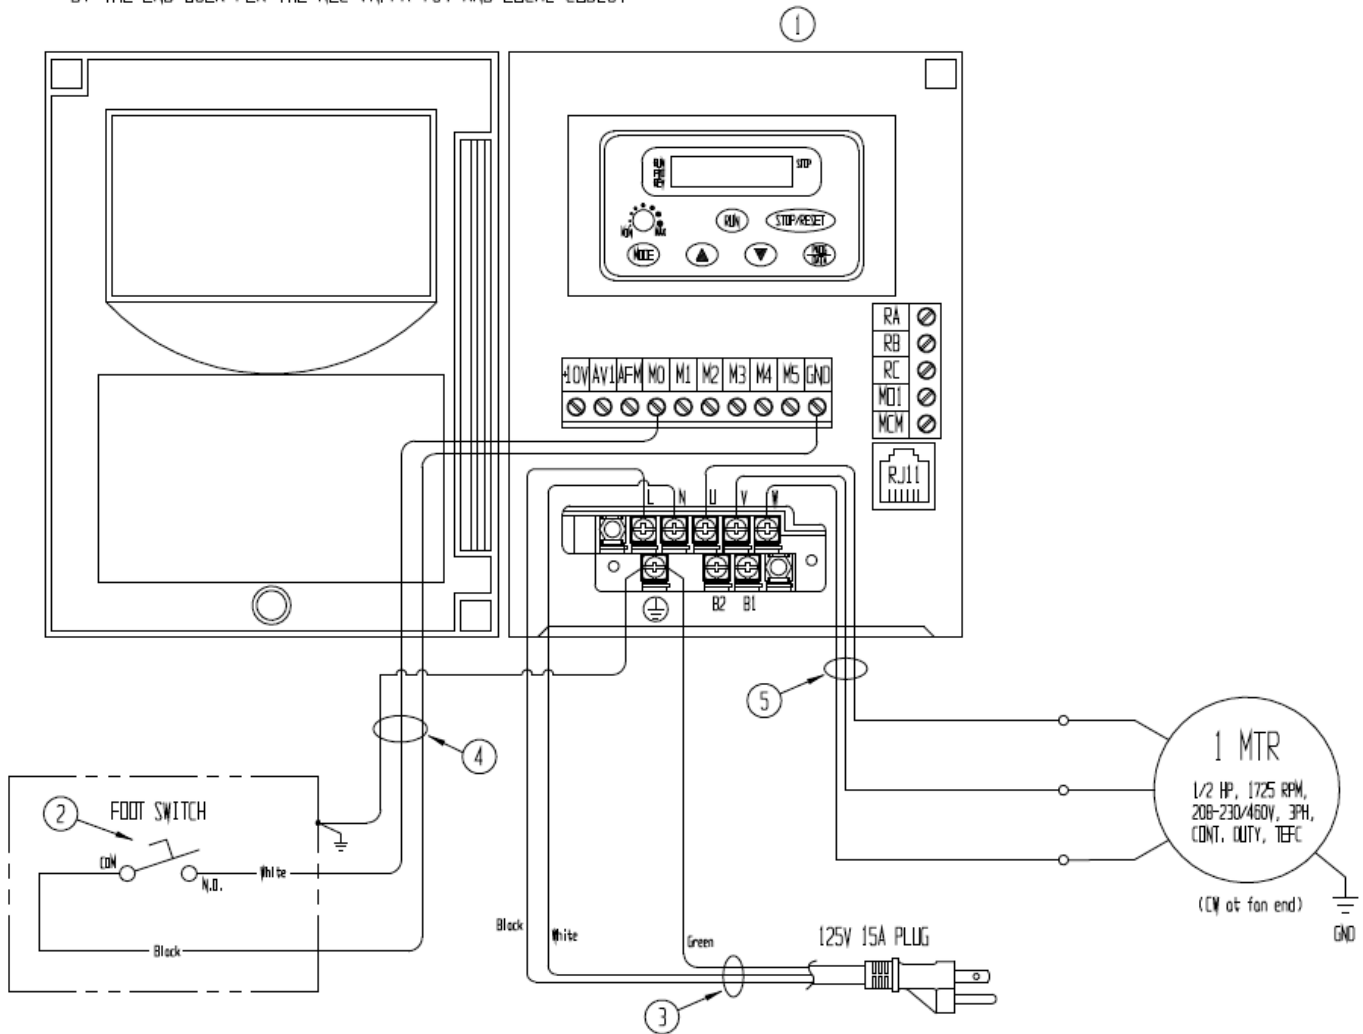

Item no.	Part no.	Description	Quantity
1	VFD004S11B	Delta control, freq. variable, AC	1
2	20-522-001	Switch, single foot, 108in. cord	1
3	01-033-015	Cord, 14/3, 9in. with 15A molded plug	1
4	N/A	Cable, 18/3, pltc gray	1
5	N/A	Cable, 14/3, sjtd, yellow	1

Static electricity is produced when items are stretch wrapped. The static effect can intensify in dry air. To reduce the effects of static electricity on the wrapping machine, always ground the control to the frame of the machine. If significant static electricity is experienced, bond the frame of the machine to a driven ground rod (see National Electrical Code for details of driven grounding electrodes).

FIG. 7: Powered mast electrical diagram

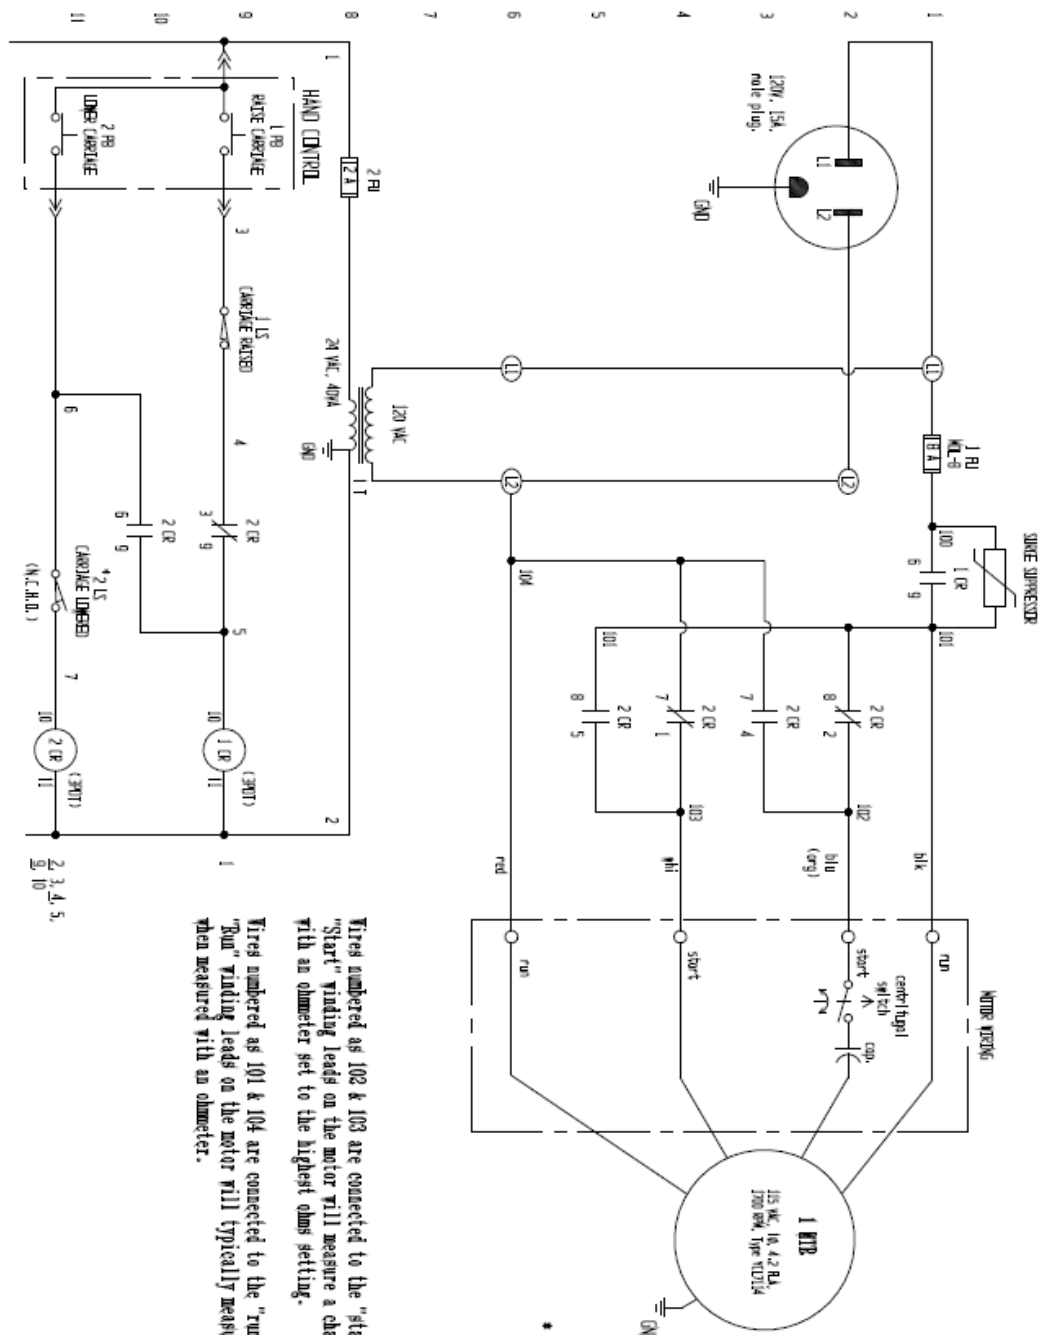


*** ALL COMPONENTS ARE REPRESENTED AS THEY WOULD BE WITH THE CARRIAGE IN ITS "HOME", OR DESTING, POSITION. HOME POSITION IS DEFINED TO BE WHEN THE CARRIAGE IS FULLY LOWERED AND ALL POWER IS OFF.**


NOTES:

Wires numbered as 102 & 103 are connected to the "start" winding on the motor.
 "Start" winding leads on the motor will measure a changing resistance when measured with an ohmmeter set to the highest ohms setting.
 Wires numbered as 101 & 104 are connected to the "run" windings on the motor. The "Run" winding leads on the motor will typically measure about 3 ohms of resistance when measured with an ohmmeter.

RIGHT BASE (TOP VIEW) LAYOUT

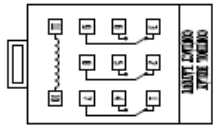

Delta Motor Speed Controller

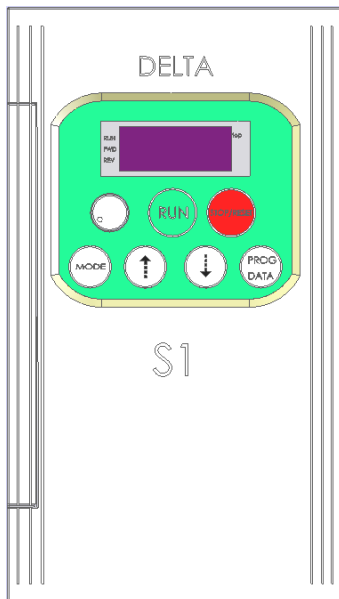

To change the controller parameters, use the buttons on the keypad to select the desired settings (see “Speed controller parameter settings” table below):

- a. PROG/DATA: press the “PROG DATA” button to initiate program mode; then the following screen will appear:

0-

This screen indicates which parameter number is selected (see table below), which in this case is parameter 0. Press the up or down arrow button to select the desired parameter number (0; 1; 2; 6; or 7). Press the PROG/DATA button again to reveal the second set of numbers (on the right side of the dash in the “parameter” column of the table below). Use the arrow buttons to select the desired number. After completing the desired combination of numbers, press the MODE button twice to return to the home screen.

- b. MODE: press the MODE button to display information about the status of the drive. Successively pressing the MODE button displays different information. For example, pressing the MODE button 3 times displays the current speed (in rpm's) of the turntable. (E.g. 12rpm displays as “u 12”.)
- c. Arrow keys: press the up or down buttons to scroll through different parameters. Press the up or down arrow key quickly to change parameter settings in single unit increments.
- d. The following table indicates the controller settings for each model that are required to achieve a minimum rotation speed of 3rpm and an upper rotation speed of 12rpm:


Model	Parameter	Setting	Parameter	Setting
SWA-50	1-08	d10	1-07	d40
SWA-70	1-08	d8	1-07	d35
SWA-51-AR5	1-08	d20	1-07	d65

Speed controller parameter settings:

Parameter	Description of parameter	Setting	Description of setting
0-03	Start-up display selection	d2	Display the content of user-defined unit
0-05	User defined coefficient K	d0.3	Scales frequency so display shows approximate turntable rpm
1-02	Maximum output voltage	d255	Sets maximum voltage to motor
1-07	Upper bound of frequency	d65	Sets maximum rotation speed with speed knob turned fully clockwise (~11 rpm)
1-08	Lower bound of frequency	d15	Sets minimum rotation speed with speed knob turned fully counterclockwise (~3 rpm)
1-09	Acceleration time	d10*	Time to accelerate motor to maximum output frequency in seconds
1-15	Auto accelerate/decelerate	d0*	Allows for linear acceleration of motor
1-16	S-curve in acceleration	d 7	Determines how smoothly drive accelerates
2-00	Source of frequency command	d 3	Allows turntable speed to be controlled by knob on keypad
2-01	Source of operation command	d 1	Makes drive turn on external foot switch
2-02	Stop method	d 1	Allows turntable to coast to stop
6-02	Over-current stall prevention limit	d 150	Sets maximum motor current as percentage of rated output
6-03	Over-torque detection mode	d3	Detection enabled during acceleration & continues until Continuous Output Time Limit
6-04	Over-torque detection level	d 200	Sets maximum output torque as percentage of rated output
6-05	Continuous output time limit	d10	Determines how long (in seconds) drive runs after over-torque detected
7-00	Motor rated current	d 120	Establishes maximum output current as percentage of rated output
7-01	Motor no-load current	d 75	Sets motor slip compensation
7-02	Torque compensation	d 10	Sets maximum startup torque

Installation

NOTE: Record the maximum turntable rotation speed when the machine is first installed.

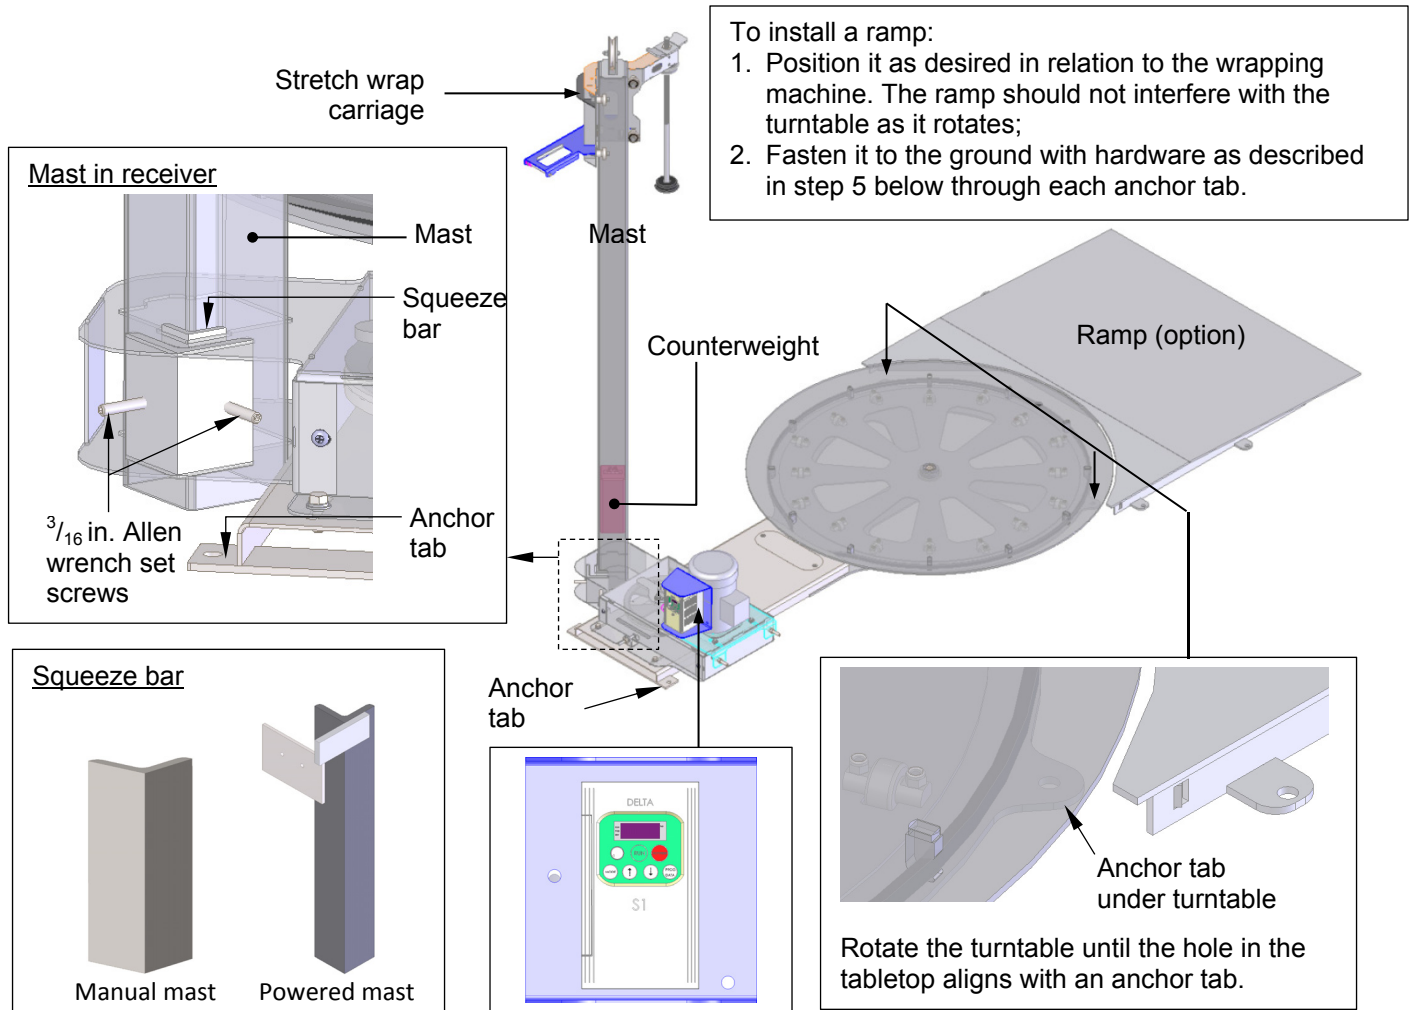

1. Move the machine to the desired installation location. Install the machine only on an even, level surface.
2. Lift the mast into the upright position. Insert the mast through the mast sockets with the stretch wrap carriage pointing towards the turntable.
3. Insert the squeeze bracket into the gap between the mast and the socket as shown below; then tighten the set screws against it using a $\frac{3}{16}$ in. Allen wrench. [NOTE: The mast will wobble due to plate flexion during use even with the squeeze angle firmly secured against the mast.]
4. [Manual models] Manual wrapping machines counterbalance the combined weight of the wrapping material and the material carriage with a counterweight inside the mast. The machine is shipped with the carriage raised to the top of the mast and the counterweight at the bottom of the mast. The retaining screw (through the mast) prevents the counterweight from sliding inside the mast during the shipping process, but must be removed now. The head of the screw is located approximately 12 inches from the base of the mast.
5. Fasten the machine to the floor with anchor bolts. There are 4 anchoring points: 2 in back and 2 under the turntable. Each of the 4 anchor tabs has a $\frac{5}{8}$ in. hole for an anchor bolt. Your building engineer should evaluate the installation site and select $\frac{3}{8}$ in. anchor bolts of a length appropriate for the location.
6. Shim and grout under the frame.
7. Connect the wrapping machine to an AC power source: Insert the turntable power cord into a 15A, 115 VAC receptacle.
 - [Powered mast models] Powered mast models have 2 power cords: one for the turntable and another for the wrapping carriage. The 2 cords can either both be plugged into a power outlet, or be connected and plugged into an outlet. To connect the cords, plug the turntable power

cord into the pigtail cord of the mast control enclosure; then plug the power cord for the mast into a 115 VAC receptacle.



8. Test the powered functions:
 - a. Turntable rotation: press the foot pedal to initiate rotation. The turntable will rotate as long as the pedal is pressed.
 - b. Delta speed controller: refer to the Delta operation manual.
 - c. Powered mast models: raise and lower the stretch wrap carriage with the UP and DOWN buttons on the pendant (hand) controller. Confirm that the carriages moves smoothly and that both the upper and lower travel limit switches function properly.

Stretch Wrap Holder Assembly

The wrap holder accommodates 10-20 inch rolls of stretch wrap.


Loading stretch wrap:

1. Unwind the wing nut (A) sufficiently to remove the lock spacer (6) underneath the bottom retainer (2).
2. Remove the lock spacer.
3. Remove the retainer (5) and bearing (4).
4. Remove the spent roll of stretch wrap and install a new roll.
5. Reinstall the retainer (5) and secure it in place with the lock spacer (6).
6. Tighten the wing nut (A) until the roll is snugly grasped between the tube retainers (2) and (3). Adjust the tightness of the wing nut to achieve the desired degree of material stretch—the material will stretch more the more tightly the roll is grasped.

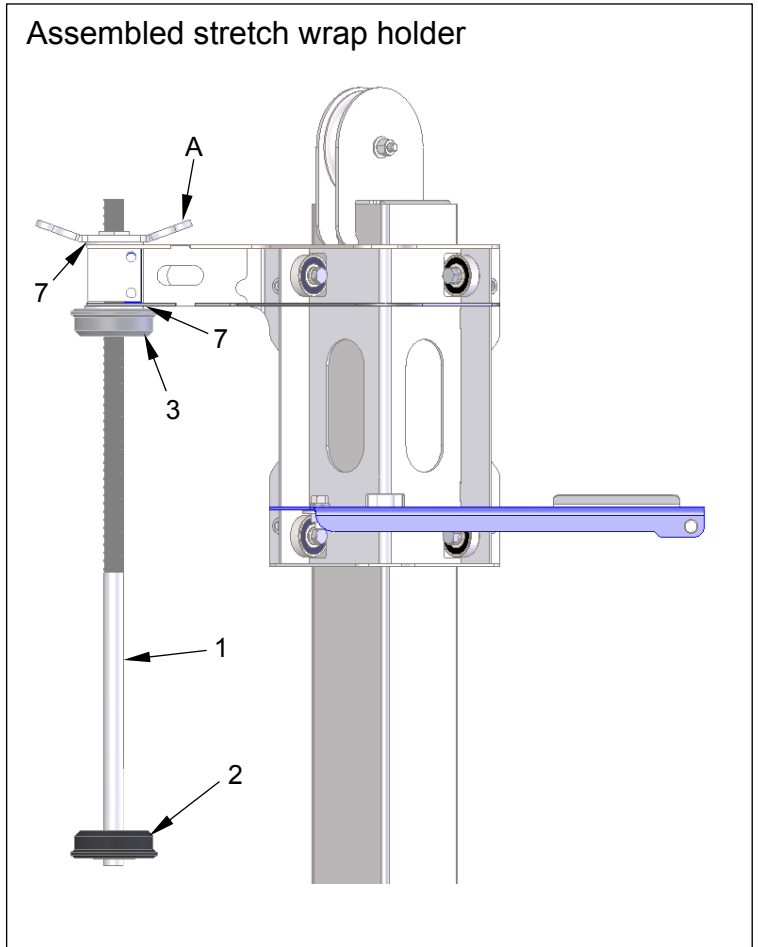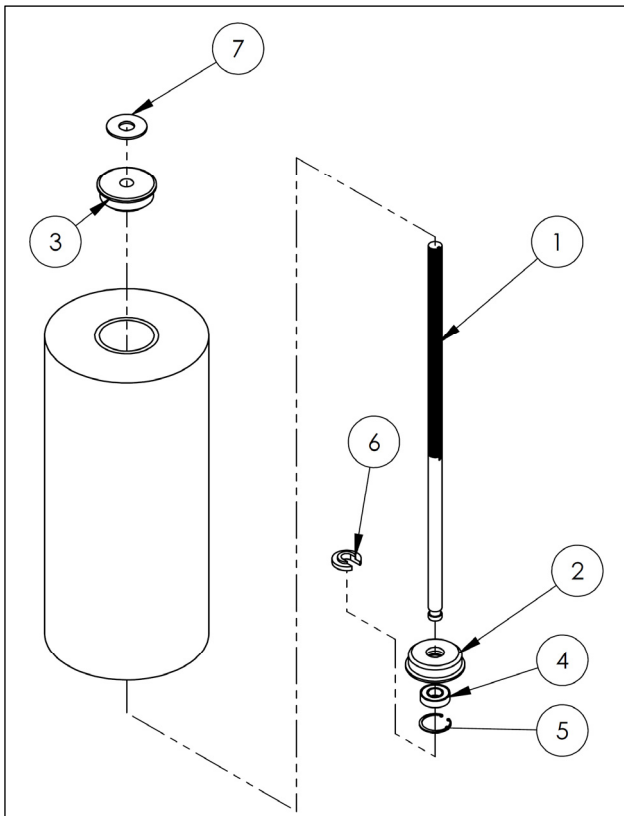

Item no.	Part no.	Description	Quantity
1	20-014-116	Frame, rod, wrap retainer	1
2	20-014-006	Tube retainer (bottom)	1
3	20-014-005	Tube retainer (top)	1
4	20-110-002	Bearing, ball, 3/4 in., shield	1
5	68061	1 5/8 in. retainer ring	1
6	20-113-022	Spacer, lock	1
7	20-113-003	1/8 in. fiber washer	1
*8	SRF-18	20in. plastic wrap (not included)	1

Belt Tensioning Procedure

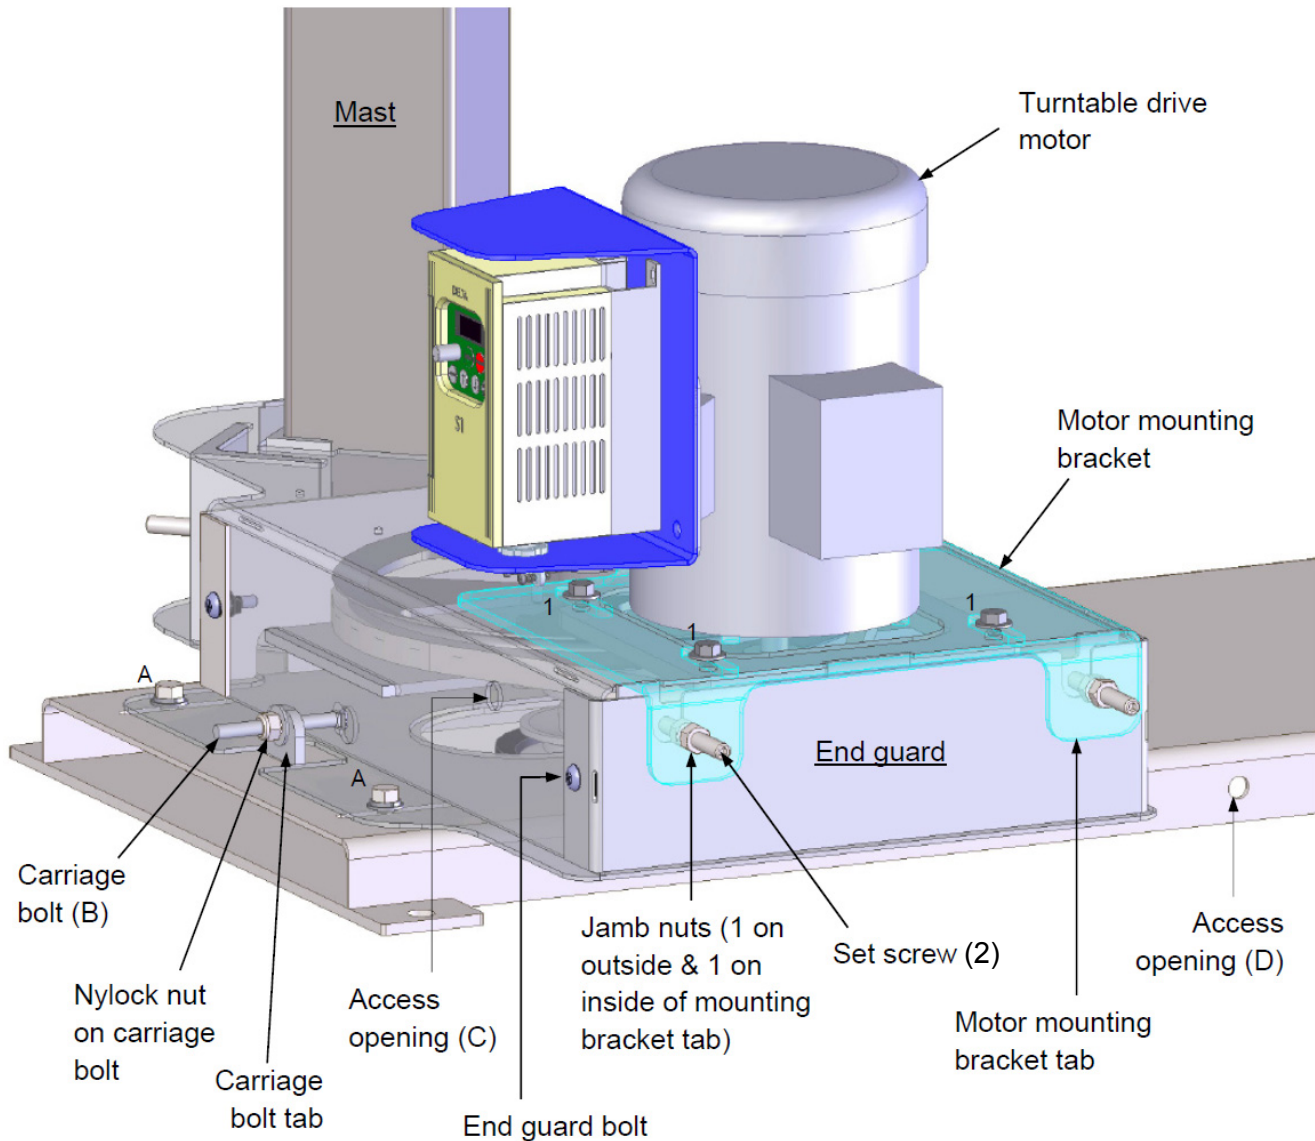

The wrapping machine uses 2 belts to rotate the turntable and the tension of each belt occasionally requires adjustment. For instance, if the turntable vibrates or rattles, the tension of the lower belt needs to be adjusted. Similarly, if the turntable drive motor (or the metal box that supports the motor) vibrates, the tension of the upper belt should be increased.

1. Adjust the tension of the upper (small) belt.

- Loosen all four bolts (1) adequately to allow the motor mounting bracket to slide. [NOTE: Only three bolts are shown in the diagram above.]
- Loosen the jamb nuts on the set screws (2).
- Remove the end guard by removing both end guard bolts.
- Assess the adequacy of belt tension by doing the following:
 - a. Locate the access opening (C); then insert a metal rod approximately 3/8" x 10" long, into the access opening. The rod must have a smooth, flat end without sharp projections that might damage the belt.
 - b. Locate the belt with the end of the rod. Lightly contact the belt at the point approximately halfway between the two pulleys. The rod should be perpendicular to the belt. Do not press the rod against the belt. Make a first mark on the rod that is flush with the top of the access opening (C). Make a second mark 1/8 in. above the first mark.

- c. Using a “pencil type” compression spring scale, measure the force required to push the rod $\frac{1}{8}$ in., that is, the force required to move the rod inwardly so that the second mark is flush with the top of the opening (C).
 - d. If necessary, adjust the tension of the belt. If the belt is new, the force measured by the spring scale should equal 16 lbs. After a belt is broken in, the force required should be between 8-12 lbs. To adjust belt tension, use a $\frac{3}{16}$ in. Allen wrench to turn the set screws (2). To increase tension, turn the screws clockwise. To decrease tension, turn the screws counterclockwise. Turn both set screws the same amount.
- When belt tension is proper, retighten the jamb nuts on both set screws firmly against the bracket tabs; then reinstall the end guard and tighten all four of the motor mounting bracket bolts (1).
2. Adjust the tension of the lower (large) belt.
- Loosen all 4 power unit subassembly bolts (A). [NOTE: Only 2 bolts are shown in the diagram; the other bolts are on the opposite side of the subassembly.]
 - a. Locate the access opening (D); then insert a metal rod approximately $\frac{3}{8}$ ” x 10” long, into the access opening. The rod must have a smooth, flat end without sharp projections that might damage the belt.
 - b. Locate the belt with the end of the rod. Lightly contact the belt at the point approximately halfway between the two pulleys. The rod should be perpendicular to the belt. Do not press the rod against the belt. Make a first mark on the rod that is flush with the top of the access opening (D). Make a second mark $\frac{3}{8}$ in. above the first mark.
 - c. Using a “pencil type” compression spring scale, measure the force required to push the rod $\frac{3}{8}$ in., that is, the force required to move the rod inwardly so that the second mark is flush with the top of the opening (D).
 - d. If necessary, adjust the tension of the belt. If the belt is new, the force measured by the spring scale should equal 16 lbs. After a belt is broken in, the force required should be between 8-12 lbs. To increase tension, use a $\frac{9}{16}$ in. wrench to turn the lock nut on carriage bolt (B) clockwise. To decrease tension, turn the nut counterclockwise.
 - When belt tension is proper, retighten the lock nut firmly against the carriage bolt tab; then tighten all 4 power unit subassembly bolts (A).

Use Instructions

Standard SWA-50 and -70 wrapping machines must be used indoors. They are designed for moderate duty, intermittent cycling and will wrap loads weighing up to 4,000 pounds (1,818.2kg). The net weight of the pallet or skid and the items stacked on the pallet must not exceed 4,000 pounds. The load rating appears on Label 287, which is affixed to the machine as shown in the “Labeling diagram” on p. 17.

Place a load on the turntable

NOTICE DO NOT drop loads onto the turntable, because shock loading will cause the load bearings to fail prematurely. DO NOT exceed the load rating; the drive system might be damaged or fail prematurely.

To protect the load bearings, be careful when loading the turntable and **slowly** apply loads to the turntable. In particular, take care to not drop items on the table or to slam the tines of your fork lift on it.

Wrap the load

Standard model wrapping machines are equipped with a constant-pressure (dead man style) foot pedal control. As long as the pedal is pressed, the table will rotate. When the pedal is released, the turntable will coast to a stop.

Turntable rotation speed is adjustable. To increase or decrease the speed, turn the knob on the Delta controller (see p. 11) clockwise or counterclockwise, respectively. The number displayed on the screen of the control is the approximate number of revolutions per minute.

The tension applied to the roll of stretch wrap determines how much the material stretches as it wraps around a load. Tension is also adjustable. To increase tension, turn the rod tension wing nut (item no. 1, on p. 13) clockwise. To decrease tension, turn the wing nut counterclockwise.

To begin wrapping a load, set the tension to allow the wrap to easily pull off of the roll. Fix the end of the wrap to the load, for example by tying it to the pallet; then press the pedal control to rotate the turntable. Next, tighten the wing nut to achieve the desired material tension after wrapping the material around the load once or twice to prevent it from coming loose. To wrap the load, move the wrap holder assembly up and down as necessary to achieve the coverage desired for the load. Cover the entire load with 2-3 layers of wrapping material. To complete the wrapping process, cut (or tear) the material and press the end against the side of the load.

Inspections & Maintenance

⚠WARNING DO NOT use the wrapping machine until all problems discovered during an inspection have been resolved.

Before each use, inspect the listed components:


1. Wiring: examine the wires for fraying and damage.
2. Mast, turntable, and frame: Handrails: check each structure for bends, warps and cracks.
3. Power transmission and control equipment (particularly the foot pedal): inspect each component and associated guards and cords for damage.
4. Operate the wrapper: observe and listen to the machine as it operates for unusual noise or movement, or binding.
5. Product labels: all labels should be readable and located as shown in the “Labeling diagram” on p. 17. If a label(s) is unreadable or missing, order a replacement.

NOTE: Label appearance and content is subject to change over time, and consequently, replacement labels might differ from labels shown in the manual supplied with the unit.

At least 1 time per month, inspect:

1. Electrical wiring: closely inspect wiring for regions of significant wear, cuts, frays, and other damage.
2. Fasteners (hardware): check fasteners for looseness and damage. Tighten all loose fasteners; replace any that are damaged: Bolts, nuts, washers;
3. Turntable drive belt: inspect the drive belt for significant wear and looseness. If the belt is significantly worn, replace the belt. Operate the turntable and compare the current maximum rotation speed with the speed recorded when the machine was first installed. If the top rotation speed is slower than the initial figure, adjust the tightness of the belt (see “Belt tensioning procedure”, on pp. 14-15).
4. Motor speed control: if the speed control enclosure is broken, then the drive should be replaced.
5. Turntable: examine the turntable for significant wear and impact damage. Sharp projections might develop along the edge of the turntable. Sand or grind off all projections, burrs, etc.
6. Load bearings: operate the turntable and listen for scraping sounds. If the turntable is noisy while it rotates, replace the load bearings.
7. Turntable main bearing: the top of the turntable should be parallel to the supporting frame; it should not wobble (press down and pull up on the edge of the turntable).
8. Carriage slides: inspect the slides for excessive wear.
9. Fiber washer (see item no. 2 on p. 13): check the fiber washer of the (shrink wrap) material holder. Make sure that it is not significantly worn.
10. Anchoring points: check each of the anchor bolts and the concrete. The machine should be solidly fixed to the floor. Tighten bolts, if necessary. Also inspect the concrete around each bolt. It should not be cracked, chipped, etc.
11. Labels: confirm that all labels (shown in “Labeling diagram” on p. 17) are present, undamaged and readable.
12. Overall condition of wrapping machine: the structure should be clean, square and rigid, and free of rust and corrosion. Remove dirt and debris. Do not use the machine if the base is excessively rusted or corroded.

Labeling Diagram

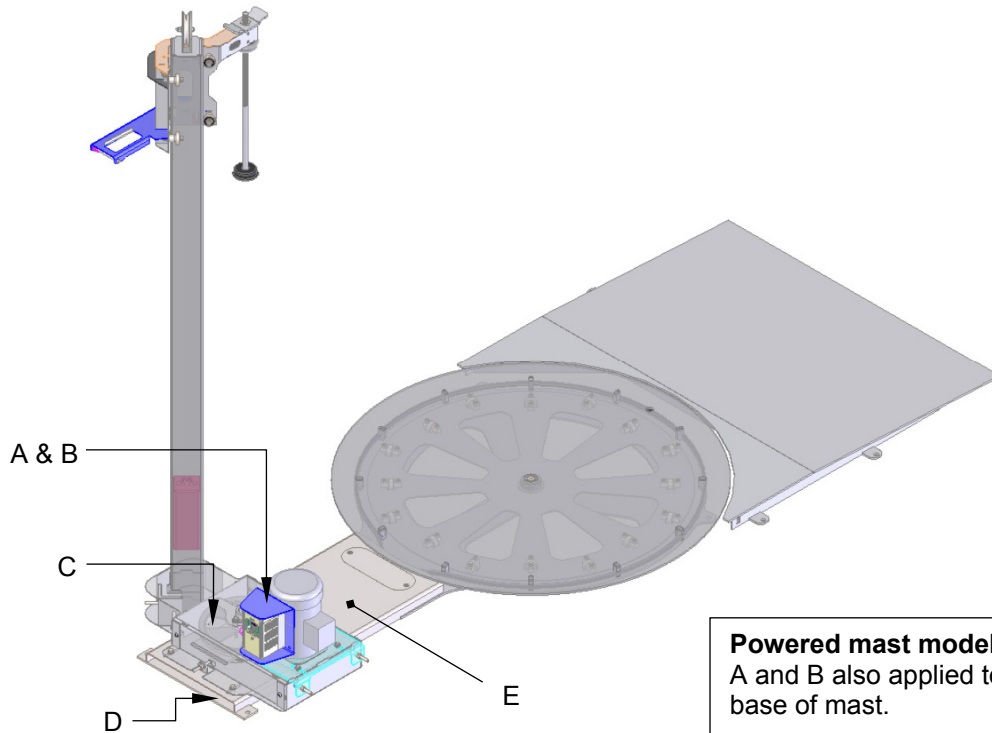

Powered mast models:
A and B also applied to junction box at base of mast.

A (Label 221)

⚠ DANGER	ELECTRICAL SHOCK Shut power off and consult owners manual before working on this equipment.
⚠ PELIGRO	EI GOLPE ELECTRICO Corte la corriente consulte el manual de propietario antes de trabajar en este equipo.
⚠ DANGER	CHOC ELECTRIQUE Couper le courant et consulter le manuel d'utilisation avant de travailler sur cet équipement

221 Rev 0305

B (Label 325)

NOTICE	NOTA	AVIS
POWER SUPPLY: 115 V/1 Phase/60 HZ		
CONTROL VOLTAGE: 115V AC		
CORRIENTE: 115 V/1 Fase/60 HZ		
VOLTAJE DE CONTROL: 115V CA		
ALIMENTATION ÉLECTRIQUE: 115 V/1 Monophasé/ 60 HZ		
VOLTAGE DE CONTRÔLE: 115V AC		

325

C (Label 287)

MODEL/MODELO/MODELE	_____
CAPACITY	_____ lbs.
CAPACIDAD/CAPACITÉ	_____ kgs.
SERIAL/SERIE/SÉRIE	_____
VESTIL MANUFACTURING CORPORATION	
sales@vestil.com • www.vestil.com	

287
REV 0503

D (Label 204)

⚠ WARNING	⚠ ADVERTENCIA	⚠ AVERTISSEMENT
SECURE FRAME TO FLOOR	ASEGURE EL BASTIDOR AL PISO	FIXER SOLIDEMENT LE CADRE AU PLANCHER

E (Label 824)

⚠ DANGER		⚠ PELIGRO
To avoid bodily injury, stand clear while in motion.		Para evitar daños, manténgase alejado cuando en movimiento

824

Troubleshooting:

Issue	Possible Cause	Corrective Action
1) Turntable does not rotate	a) No power supply voltage b) Speed control on lowest setting c) No signal from pedal control d) Motor controller fault or defective motor controller e) Belt is broken or slipping	a) Check outlet for 115V power. If outlet lacks power, determine cause of power loss before restoring power to the wrapping machine. [NOTE: If turntable power cord is plugged into the pigtail cord of the powered mast, confirm that powered mast cord is plugged into a wall socket.] b) Increase turntable speed using the knob on the Delta motor speed controller (see p. 11). c) Check continuity of foot pedal and the cable connected to it. d) Check the display on the Delta motor speed controller for a fault code. If a fault code is displayed, contact Vestil Manufacturing (phone number on cover of this manual). e) If fan of drive motor spins but table does not rotate, release the foot pedal; then inspect the belts.
2) Turntable cannot rotate without assistance, rotates more slowly while loaded, or does not achieve set speed	a) Belt is broken or slipping	a) If fan of drive motor spins but table does not rotate, release the foot pedal; then inspect the belts.
3) Mast motor or control enclosure hums, chatters, or buzzes, and the stretch wrap holder moves slowly or not at all.	a) Excessive voltage drop to motor due to: <ul style="list-style-type: none"> • Inadequate wiring; • Wire run too long; or • Incoming voltage too low. b) Damaged mast or stretch wrap holder c) Low control voltage or bad connection in control circuit	a) Check power supply for adequacy. Check incoming voltage while motor runs. If the voltage is too low, correct by <ul style="list-style-type: none"> • Installing circuit with larger wire; • eliminating extension cord(s); or • installing a buck/boost transformer. b) Examine mast and holder for damage or excessive wear. c) Confirm 24VAC at transformer secondary. Examine all wiring and connections in the mast for looseness, etc.
4) Powered stretch wrap holder does not respond to commands (UP and DOWN)	a) Low control voltage or bad connection in control circuit b) Blown transformer fuse c) No power supply voltage d) Mast limit switch engaged or malfunctioning e) Control relay 1 CR contact is burnt f) Control relay 1 CR is loose	a) Confirm 24VAC at transformer secondary. Examine all wiring and connections in the mast for looseness, etc. b) Test with meter; replace if bad (replace with same fuse type and ampere rating) c) Check outlet for 115V power. If outlet lacks power, determine cause of power loss before restoring power to the wrapping machine. [NOTE: If turntable power cord is plugged into the pigtail cord of the powered mast, confirm that powered mast cord is plugged into a wall socket.] d) Inspect and test switch, Replace if bad. e) Examine contact. Clean contact or replace relay as necessary. f) Verify that the relay is firmly in place.
5) Powered mast stretch wrap holder rises on command but does not lower	a) Control relay 2 CR is loose b) CR 2 is defective c) Bad connection in control circuit d) Physical blockage in mast	a) Confirm that the relay is firmly in place b) Examine and test 2 CR. Replace if necessary. c) Test all parts of circuit with meter d) Determine cause of blockage and remove it from the path of the holder.

LIMITED WARRANTY

Vestil Manufacturing Corporation (“Vestil”) warrants this product to be free of defects in material and workmanship during the warranty period. Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.

Who may request service?

Only a warrantee may request service. *You are a warrantee if* you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.

What is an “original part”?

An original part is a part used to make the product as shipped to the warrantee.

What is a “proper request”?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

<u>Mail</u>	<u>Fax</u>	<u>Email</u>
Vestil Manufacturing Corporation 2999 North Wayne Street, PO Box 507 Angola, IN 46703	(260) 665-1339 <u>Phone</u> (260) 665-7586	sales@vestil.com

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following original dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in original parts that wear under normal usage conditions (“wearing parts”), such as bearings, hoses, wheels, seals, brushes, and batteries.

How long is the warranty period?

The warranty period for original dynamic components is 1 year. For wearing parts, the warranty period is 90 days. The warranty periods begin on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the periods begin when the distributor ships the product. Vestil may, at its sole discretion, extend the warranty periods for products shipped from authorized distributors by *up to* 30 days to account for shipping time.

If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any *covered* part. An authorized representative of Vestil will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
 - Product misuse;
 - Negligent operation or repair;
 - Corrosion or use in corrosive conditions;
 - Inadequate or improper maintenance;
 - Damage sustained during shipping;
 - Accidents involving the product;
 - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

