



Appendix C Bantam™ Self Retracting Lifelines

USER INSTRUCTIONS

Model	Length	Minimum Arrest Distance	Arrest Force	ANSI Standard	Lifeline	Rated Capacity
R430006	6 ft	24"	900 lbs. Avg	Z359.14-2012 Class A	1.00" Nylon Webbing	310 lbs
R430006-R	6 ft	24"	900 lbs. Avg	Z359.14-2012 Class A	1.00" Nylon Webbing	310 lbs
R431006	6 ft	24"	900 lbs. Avg	Z359.14-2012 Class A	1.00" Nylon Webbing	310 lbs
R431006-R	6 ft	24"	900 lbs. Avg	Z359.14-2012 Class A	1.00" Nylon Webbing	310 lbs

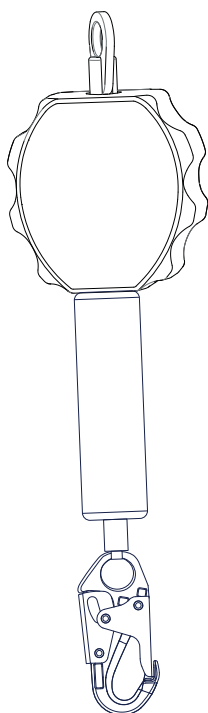

Single Leg

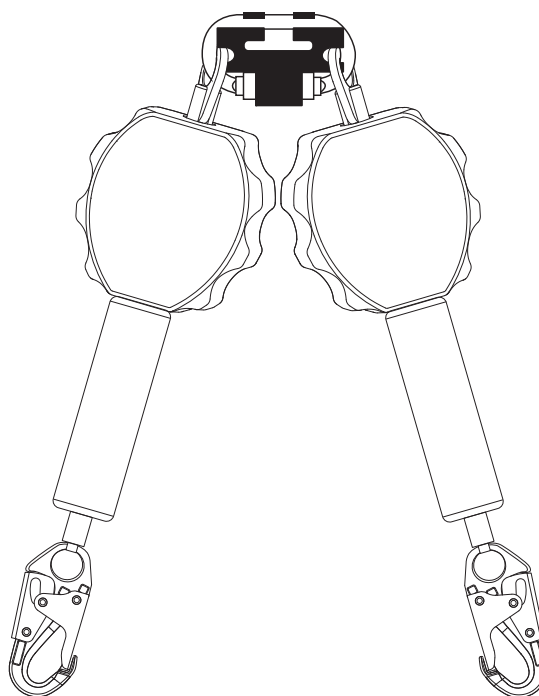

Dual Leg

NOTE: Werner Fall Protection BANTAM™ Self-Retracting Lifeline models must NOT be used in Leading Edge applications. ALWAYS keep lifeline from contacting sharp or abrasive edges and surfaces.

WARNING:


ALL components of the personal fall arrest system must be selected and determined to be suitably compatible with Werner Bantam™ SRL by a Competent Person.

ENGLISH




DUAL-LEG CONFIGURATIONS:


1. When using dual leg SRL configuration, make sure to maintain 100% tie-off at all times. ALWAYS maintain one engaged snap hook or rebar hook attached to an appropriate anchorage connector, while hooking disengaged snap hook or rebar hook.

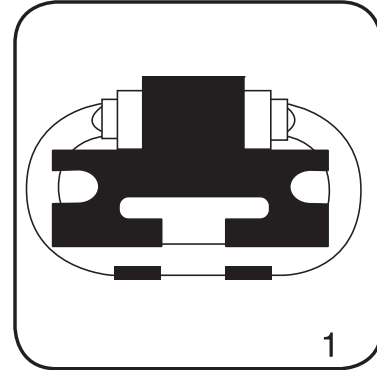


2. Unclip plastic keeper and slip it off gate. See figures 1 and 2.

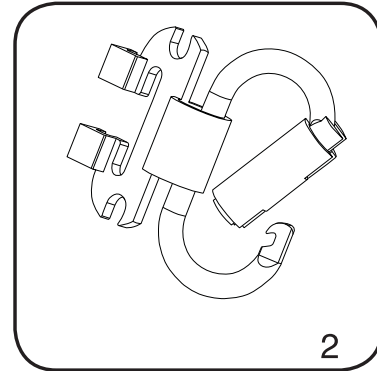

3. Open gate and connect first SRL unit. Move connection point around connector. See figure 3.

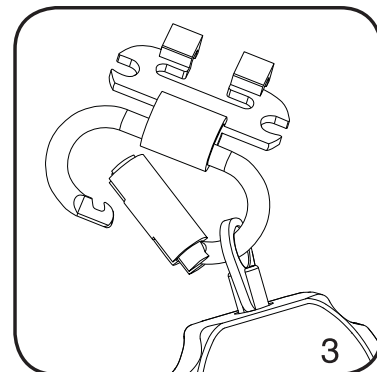


4. Hook connector around both webbing straps on the back plate: follow the path of the back D-ring. See figure 4.

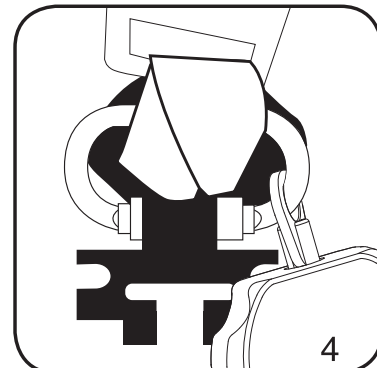


Appendix C Bantam™ Self Retracting Lifelines

USER INSTRUCTIONS

5. With first SRL unit and webbing in place, connect second SRL unit. See figure 5.

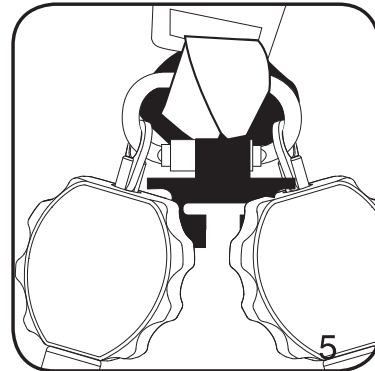

6. Reposition the plastic keeper, locating SRL units and webbing in each respective slot. See figure 6.

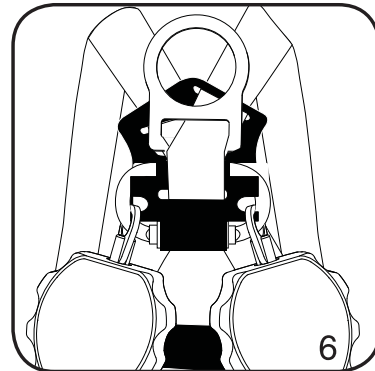

7. **ONLY** use Werner Fall Protection BANTAM™ 6' Self-Retracting Lifelines. **NEVER** use any other fall protection device.

HORIZONTAL SYSTEMS:

Applications where the SRL is used horizontally or with a horizontal system, the SRL and horizontal system components must be compatible. Both the horizontal and vertical distances are required for clearance calculations. Horizontal systems must be designed and installed under the supervision of a qualified person.



Lifeline Material:
Dyneema / Polyester

Maximum
Arrest Distance:
24"

Average
Arrest Force:
900 lbs.

400 lbs. capacity per OSHA 1910 and 1926
Complies with ANSI Z359.14-2012
(Class A, 130 - 310 lbs.)

Model number:
R430006 (R430006-R)

Date of Manufacture:

Serial Number:



Only the harness back D-ring (A) to be used for fall arrest. Verify connectors are compatible (see user manual). Ensure that the anchorage strength is 5,000 lbs. (22kN) or more, or certified by a Qualified Person to take twice the foreseeable load. To minimize swing fall, anchor as directly above work area as possible. Check for unobstructed clearance beneath. Do not permit the lifeline to become slack. Verify that this product is suitable for the chosen fall protection system before beginning work. See instructions for suitability for horizontal use and horizontal lifeline compatibility. If any of the white webbing is outside of the shrink tubing (clear plastic) this indicates that the product has seen a fall and should be removed from service. See the user manual for more details. User must be trained before using this product.

Patent Pending © 2016 Werner Co. P/N107122-02 Rev B 10/16

ENGLISH



Model number: **R430006** Serial #: _____
Mfg. Date: _____

Average Arrest Force:
900 lbs.

Maximum Arrest Distance:
24"

Lifeline Material:
Dyneema / Polyester

WARNING:
Read all warnings and instructions in User Manual prior to use and follow accordingly. If missing, contact Werner Co. for a replacement. Inspect product prior to each use, then at least monthly by a competent person who is not a user. Before use withdraw and retract some webbing and tug sharply to ensure that the pawls engage properly and the unit retracts normally. Avoid exposure to sharp edges, chemicals, or environmental hazards that could weaken the product. User repairs or alterations are **NOT** permitted.

400 lbs. capacity per OSHA 1910 and 1926
Complies with ANSI Z359.14-2012
(Class A, 130 - 310 lbs.)

93 Werner Road,
Greenville, PA 16125
1-888-523-3371

Inspection Log

	1	2	3	4	5	6	7	8	9	10	11	12
Year 1												
Year 2												
Year 3												
Year 4												
Year 5												

Werner Patent Pending


© 2015 Werner Co. P/N107124-01

Anexo C - Cuerdas Salvavidas


Auto-Re retráctiles BANTAM™

INSTRUCCIONES PARA EL USUARIO

Modelo	Longitud	Distancia de detención mínima	Fuerza de detención	Norma ANSI cumplida	Cuerda salvavidas	Capacidad nominal
R430006	6 pies (1.83 m)	24" (61 cm)	900 lbs. (408 kg) Prom.	Z359.14-2012 Clase A	Correa tejida de nylon de 1.00" (2.54 cm)	310 lbs (140.6 kg)
R430006-R	6 pies (1.83 m)	24" (61 cm)	900 lbs. (408 kg) Prom.	Z359.14-2012 Clase A	Correa tejida de nylon de 1.00" (2.54 cm)	310 lbs (140.6 kg)
R431006	6 pies (1.83 m)	24" (61 cm)	900 lbs. (408 kg) Prom.	Z359.14-2012 Clase A	Correa tejida de nylon de 1.00" (2.54 cm)	310 lbs (140.6 kg)
R431006-R	6 pies (1.83 m)	24" (61 cm)	900 lbs. (408 kg) Prom.	Z359.14-2012 Clase A	Correa tejida de nylon de 1.00" (2.54 cm)	310 lbs (140.6 kg)

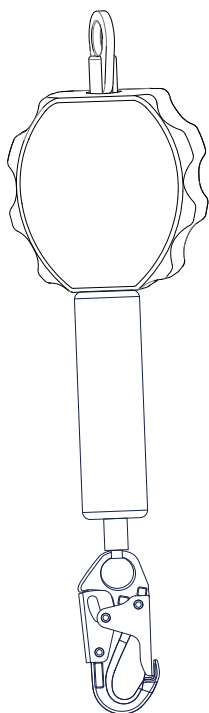

Pata única

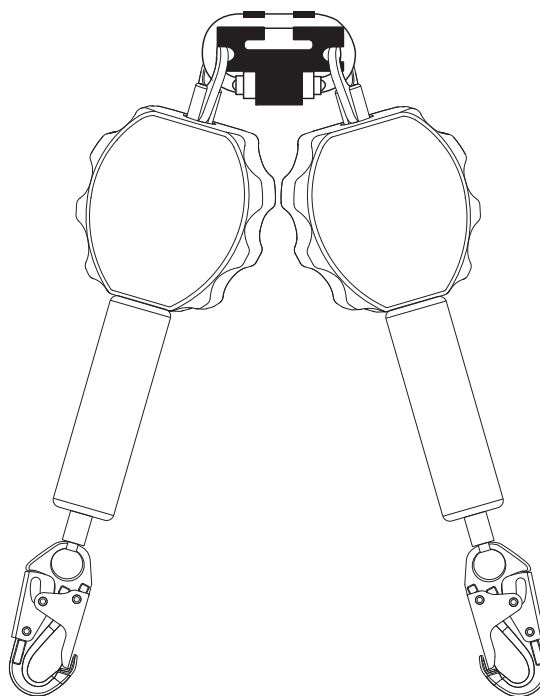

Pata doble

NOTA: Los modelos de cuerdas salvavidas auto-re retráctiles BANTAM™ de protección contra caídas de Werner NO se deben utilizar en aplicaciones de borde delantero. SIEMPRE evite que la cuerda salvavidas haga contacto con bordes y superficies filosos o abrasivos.


ADVERTENCIA:

TODOS los componentes del sistema personal de detención de caídas deben ser seleccionados y determinados como compatibles con la cuerda salvavidas auto-re retráctil Bantam™ de Werner por parte de una persona competente.


ESPAÑOL

CONFIGURACIONES DE PATA DOBLE:


1. Al utilizar la configuración de cuerda salvavidas auto-retráctil de pata doble, asegúrese de mantener el 100% de amarre en todo momento. SIEMPRE mantenga un gancho de cierre resortado o un gancho para barra de refuerzo conectado a un conector de ancladero apropiado, mientras engancha el otro gancho de cierre resortado o gancho para barra de refuerzo.

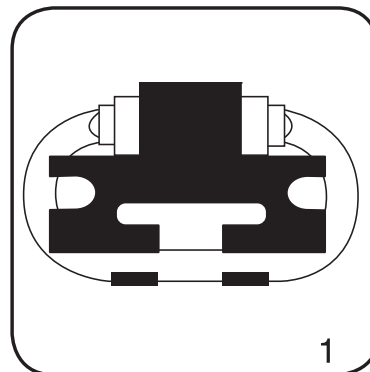


2. Libere la abrazadera plástica y deslícela fuera de la puerta. Vea las figuras 1 y 2.

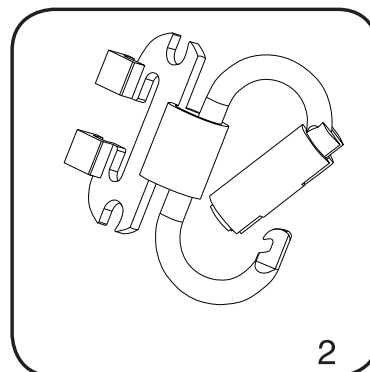

3. Abra la puerta y conecte la primera unidad de cuerda salvavidas auto-retráctil. Mueva el punto de conexión alrededor del conector. Vea la figura 3.

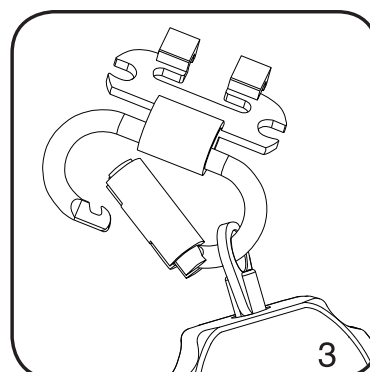

4. Enganche el conector alrededor de ambas correas tejidas en la placa de espalda: siga la trayectoria del anillo en "D" de espalda. Vea la figura 4.

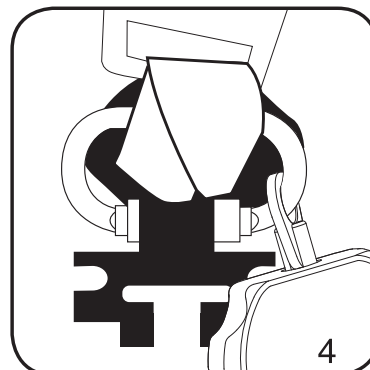


Anexo C - Cuerdas Salvavidas


Auto-Retráctiles BANTAM™

INSTRUCCIONES PARA EL USUARIO

5. Con la primera unidad de cuerda salvavidas auto-retráctil y correas tejidas en su sitio, conecte la segunda unidad de cuerda salvavidas auto-retráctil. Vea la figura 5.

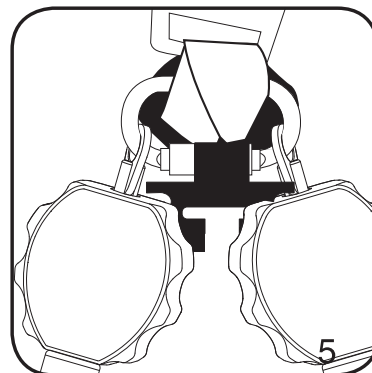

6. Posicione nuevamente la abrazadera plástica, colocando las unidades de cuerdas salvavidas auto-retráctiles y correas tejidas en cada ranura respectiva. Vea la figura 6.

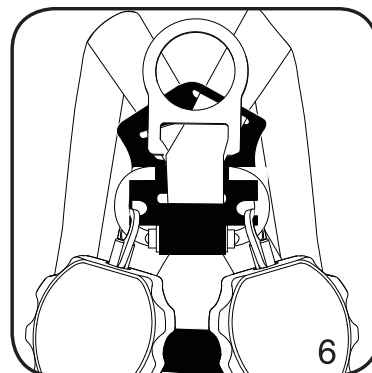

7. **SÓLO** utilice cuerdas salvavidas auto-retráctiles BANTAM™ de 6' para protección contra caídas marca Werner. **NUNCA** utilice ningún otro dispositivo de protección contra caídas.

Sistemas horizontales

Aplicaciones donde se utiliza el SRL horizontalmente o con un sistema horizontal, el SRL y los componentes del sistema horizontal deben ser compatibles. Las distancias horizontal y vertical, ambas son requeridas para los cálculos de espacio libre. Sistemas horizontales deben ser diseñados e instalados bajo la supervisión de una persona cualificada.

