



## Wall Mount Hardware Kit Installation Instructions


1. Drill the proper size hole into the cavity of the hollow base material.

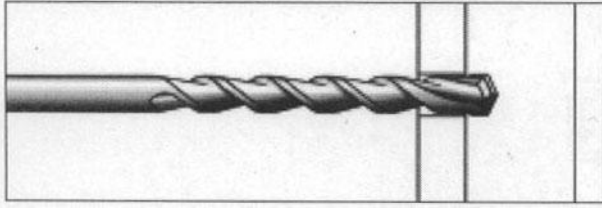


2. Position the wing parallel to the plastic legs and slide the anchor through the drilled hole into the hollow cavity.

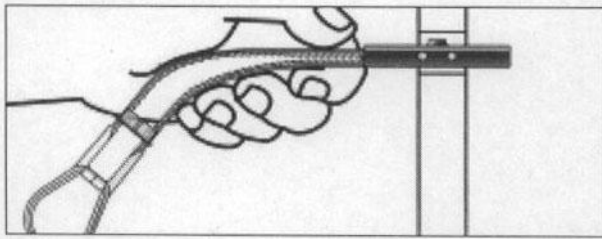

3. Pull the wing firmly against the inside wall of the hollow material using the ring, then slide the plastic cap forward until the flange is seated flush against the work surface.

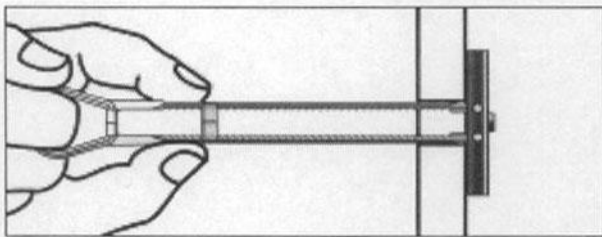

4. Place your thumb between the plastic straps and snap the straps off.

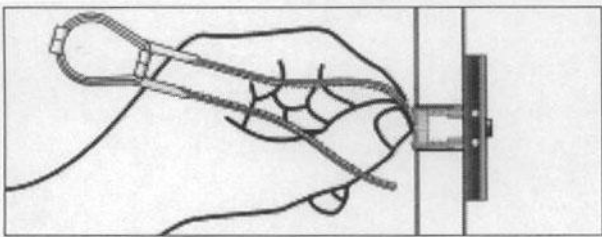

5. Position the fixture. Insert the bolt through the fixture and tighten. The minimum bolt length should be at least  $\frac{1}{2}$ " longer than the combined wall and fixture thickness.

