



RECTANGLE PLUS

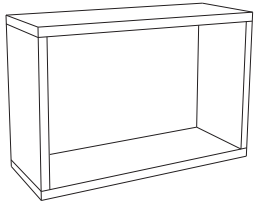


Included




8 Pins



2 Vertical zBoards
adhesive strips on 2 edges




1 Backer Board
thin and has no adhesive



2 Horizontal zBoards
with grooves

WARNING: CHOKING HAZARD
Small parts NOT for children under 3 years

Important

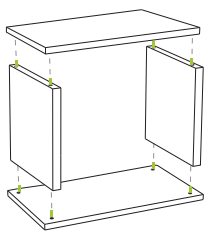

THIS SIDE UP


Tip Start assembly from bottom to top.

DO NOT place unit on its side or back as it will compromise its structural integrity.




- Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only


- When moving your Way Basics furniture, lift from the bottom
- Make sure zBoard surfaces are clean and dry

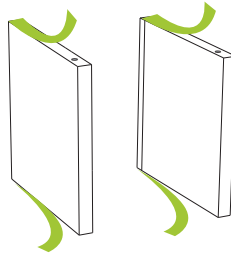


- 1** Carefully remove the 3M protective layer from adhesive.

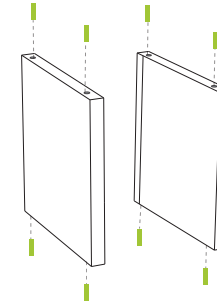

- 2** Place alignment pins in vertical zBoards.

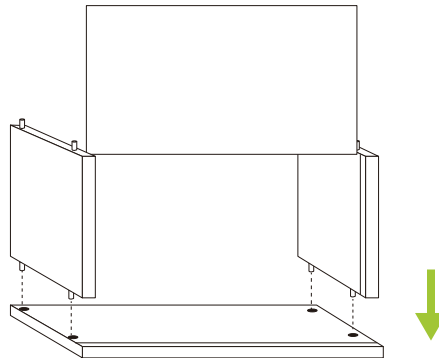

- 3** Align vertical zBoards and backer board to horizontal zBoard.

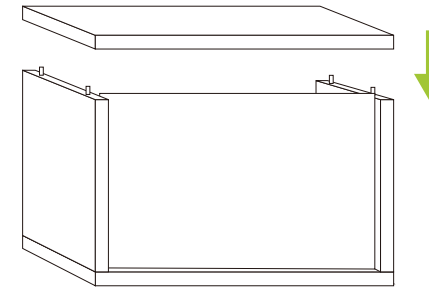

- 4** Align horizontal zBoard and press firmly to secure unit together. Visit links below for more details. Enjoy building possibilities!

