
TRIPLE CUBE PLUS





Included



24 Pins

6 Vertical zBoards adhesive strips on 2 edges



3 Backer Boards thin and has no adhesive

2 Horizontal zBoards with grooves



2 Middle zBoards with grooves on 2 sides



Important



Tip Start assembly from bottom to top.

DO NOT place unit on its side or back as it will compromise its structural integrity.



- · Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only



· Make sure zBoard surfaces are clean and dry




Carefully remove the

adhesive.


3M protective layer from


1

Place alignment pins in vertical zBoards.

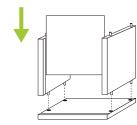









4

Align middle zBoard.

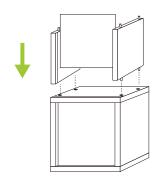




Align vertical zBoards and backer board to horizontal zBoard.

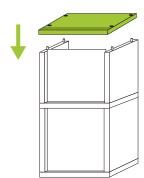


6 Align middle zBoard.

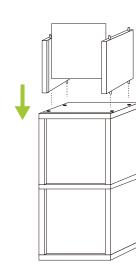



Align vertical zBoards and backer board to horizontal zBoard.

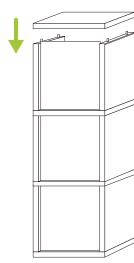

8

Align horizontal zBoard. Visit links below for more details. Enjoy building possibilities!

