

ASSEMBLY INSTRUCTIONS FOR CHECKERETTE / CHAIR CADDY #84

PARTS

- (2) "T" Bars — PART A
- (2) Crossbeams w/chair hangers — PART B
- (1) Base crossbeam — PART C
- (12) Bolts with nuts
- (24) End Caps

Optional CHECKERETE parts:

- (2) Removable coat rods — PART D

Optional TABLE-TRUCK parts:

- (1) Extra Base crossbeam — PART C

Optional EXTENDER bar:

- (2) Two small side bars

ASSEMBLY TIPS

All assembly should be done on a clean protected surface, such as carpet or the like. Assembly is easy and should take no more than 10 minutes.


ASSEMBLING THE UNIT

See other side of sheet for assembling unit with EXT-8 extender bars

- STEP 1) Make sure that there are NO missing or damaged parts.
- STEP 2) While holding up one of the side "T" bars (Part A), bolt crossbeam (Part B) into the middle set of holes. NOTE: This set of holes has three holes. Use the two lower holes. When using the optional EXT-8 extender bars (to use for higher chairs) use upper two holes.
- STEP 3) Take the other side "T" bar (Part A), and bolt it to crossbeam (Part B) in the middle set of holes. NOTE: This set of holes has three holes. Use the two lower holes. When using the optional EXT-8 extender bars (to use for higher chairs) use upper two holes.
- STEP 4) Take the other crossbeam (Part B), and bolt it to the top sets of holes on both side "T" bars (Parts A).
- STEP 5) Finally, bolt crossbeam (Part C), into the bottom sets of holes on both side "T" bars (Parts A).
- STEP 6) Remove the end caps from the bag, and using a rubber mallet, attach them to the ends of the chair hangers.
- STEP 7) Ascertain that each and every nut and bolt is securely tightened to its maximum!

OPTIONAL

- STEP 8) Attach coat rods (parts D) to the chair hanging rods (on parts B), use as coat rack when chairs are out.

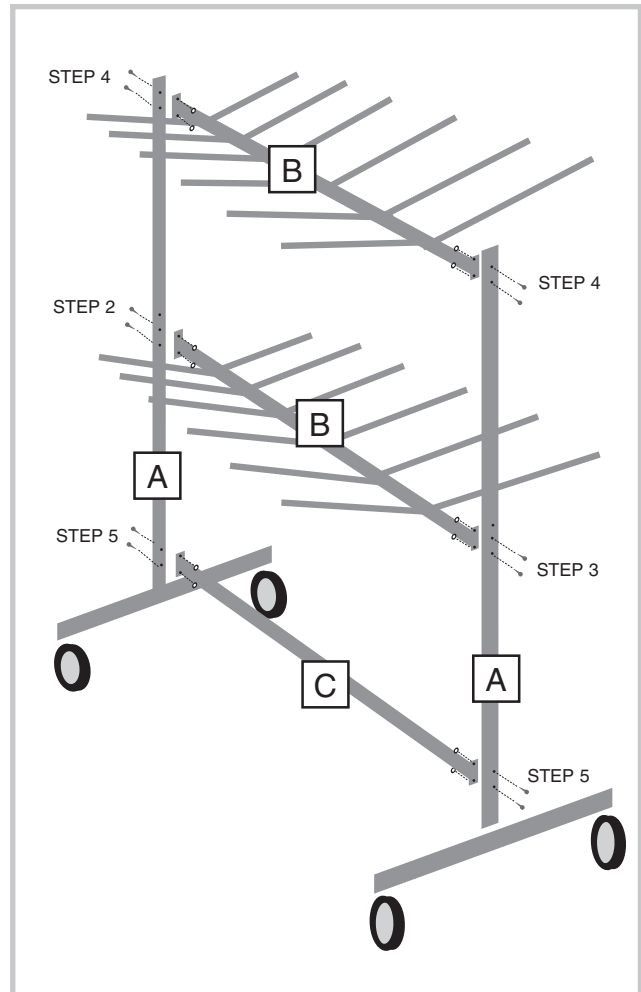


ASSEMBLING UNIT WITH OPTIONAL EXT-8 EXTENDED BAR*

ASSEMBLY

- STEP 1) Ascertain that there are NO missing or damaged parts.
- STEP 2) While holding up one side of the "T" side-bar (Part A), bolt crossbeam (part B) into the middle set of holes. NOTE: There are three holes. Use the upper two holes.
- STEP 3) Take the other side "T" bar (Part A), and bolt it to crossbeam (part B) in the middle set of holes.
- STEP 4) Take one EXT-8 bar (Part D) and place the wider part over the top of the "T" bar (Part A). Align the two holes of the EXT-8 bar with the holes of the "T" bar and bolt them in.
- STEP 5) Take the other EXT-8 bar (Part D) and do the same to the other "T" bar.
- STEP 6) Take the other crossbeam (Part B), and bolt it to the set of holes on top of the EXT-8 bar.
- STEP 7) Finally, bolt crossbeam (Part C), into the bottom sets of holes on both "T" side-bars (Parts A).
- STEP 8) Remove the end caps from the bag, and using a rubber mallet, attach them to the ends of the chair hangers.

*The EXT-8 Extender Bar should be used to accommodate the following NPS chairs:
3200 Series; 1000 Series; Model 602

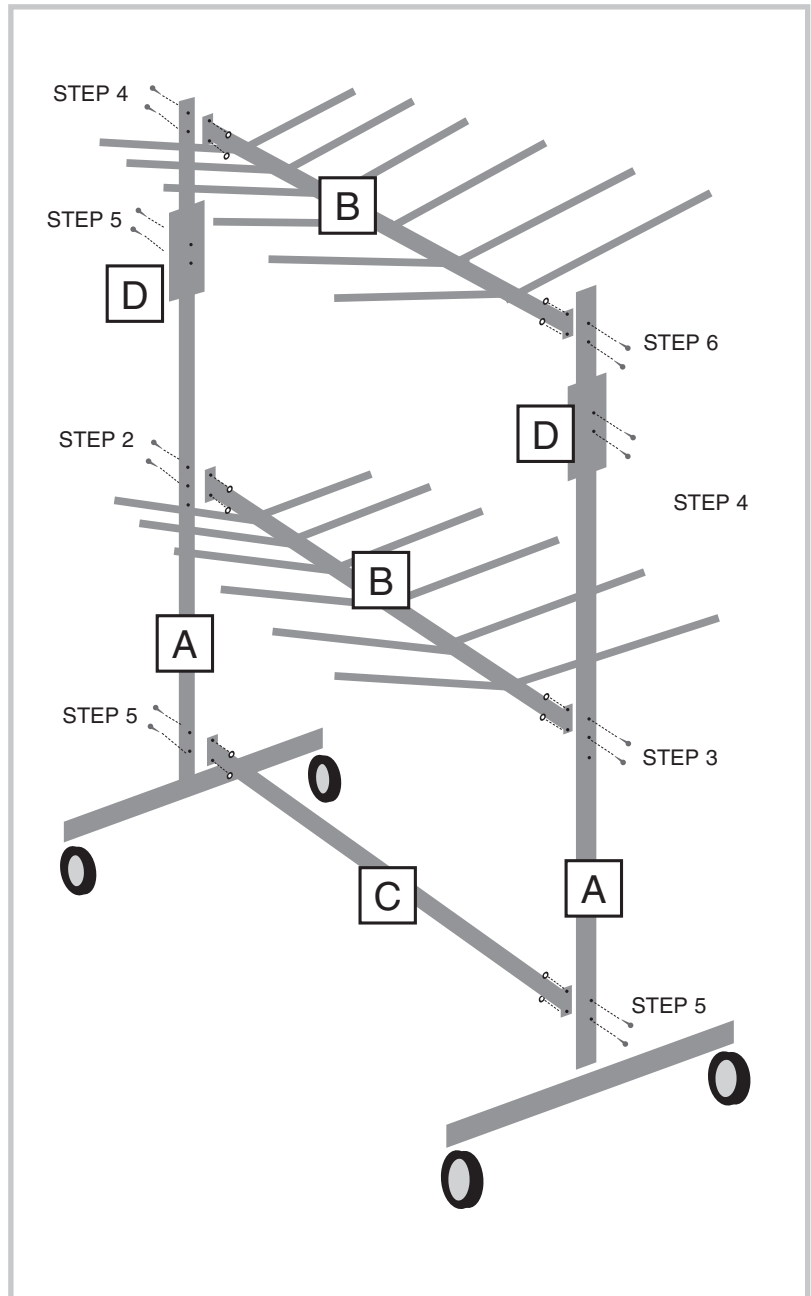

If you encounter any difficulties assembling your caddy, call Customer Service at 973-594-1100
CAUTION: Children under 12 are prohibited from using this product without the supervision of an adult.

***National Public
SEATING Corp.***

e-mail: info@NationalPublicSeating.com