

VP6 Assembly Instructions

- Cordless drill with Phillips bit (or standard Phillips screwdriver)
- Adjustable wrench


Recommended Tools



Step #1 Remove the Partition from the box.




Step #2: There are 4 tubes, two equal length, one without plastic ends, one with.

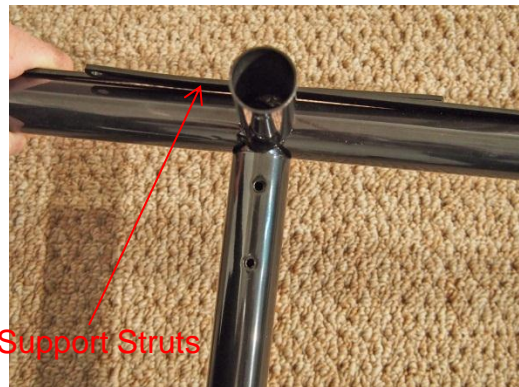

Step #3: Install the longer tube without plastic ends to the caster base as shown. Note the location of the support struts



Step #4 Install screws as shown, repeat for opposite end.

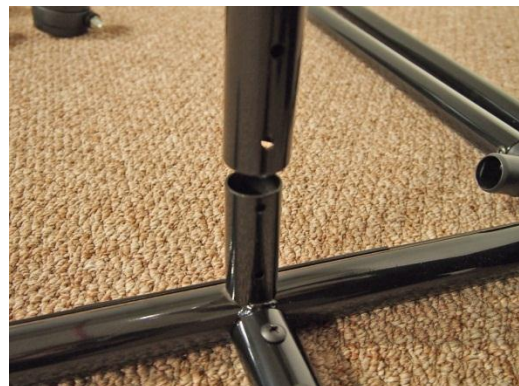

Step #5 Insert one of the two shorter tubes as shown.

VP6 Assembly Instructions



Step #6: Install screws, and repeat for opposite side.



Step #7: Add tube with plastic ends to the two standing tubes as shown.



Step #8: Install screw as shown, repeat for opposite side..



Step #9: Install 4 casters to the bottom of the caster base as shown, tighten with wench.



Step #10: Drape over partition panel, tension and hold in place with Velcro.



Step #11: Install support struts as shown above, repeat for opposite side.