


Installation Instructions and Surface Preparation for PERMALIGHT® self-adhesive Wall- and Corner Guards

PERMALIGHT® self-adhesive Wall- and Corner Guards come with a strong self-adhesive backing. Even if an installation surface looks clean, it may have accumulated a layer of dust or grimy sheen over time generated by age, wear and dirt in the installation environment. Here are a few easy **Surface Preparation** steps that assure a long-term adhesive bond.

1. We recommend wiping over the installation surface with water on microfiber cloth.
2. For rather dirty, grimy surfaces, next wipe installation surface a second time, now with isopropyl alcohol applied to a different microfiber cloth. Once that is evaporated, the surface is excellently surface-prepped for the adhesive-backed polyurethane foam guard to stick durably and reliably.
3. If you want to cut the polyurethane foam guard to a specific length, hold it in place with the adhesive still protected by its silicone paper. Cut the foam guard to your desired length, using a utility knife with a fresh blade. ! Careful – do not cut yourself!
4. Remove the silicone paper from the adhesive backing withOUT touching the adhesive itself. Hold the foam guard along its sides to keep the strong adhesive free of finger prints.
5. Firmly press-apply the foam guard in place. Do NOT pull it off to re-align or re-adjust. The self-adhesiveness is its strongest when it is pressed in the right spot with the first application. Any removing and re-applying will lessen the initial strongest bond.

08-2016

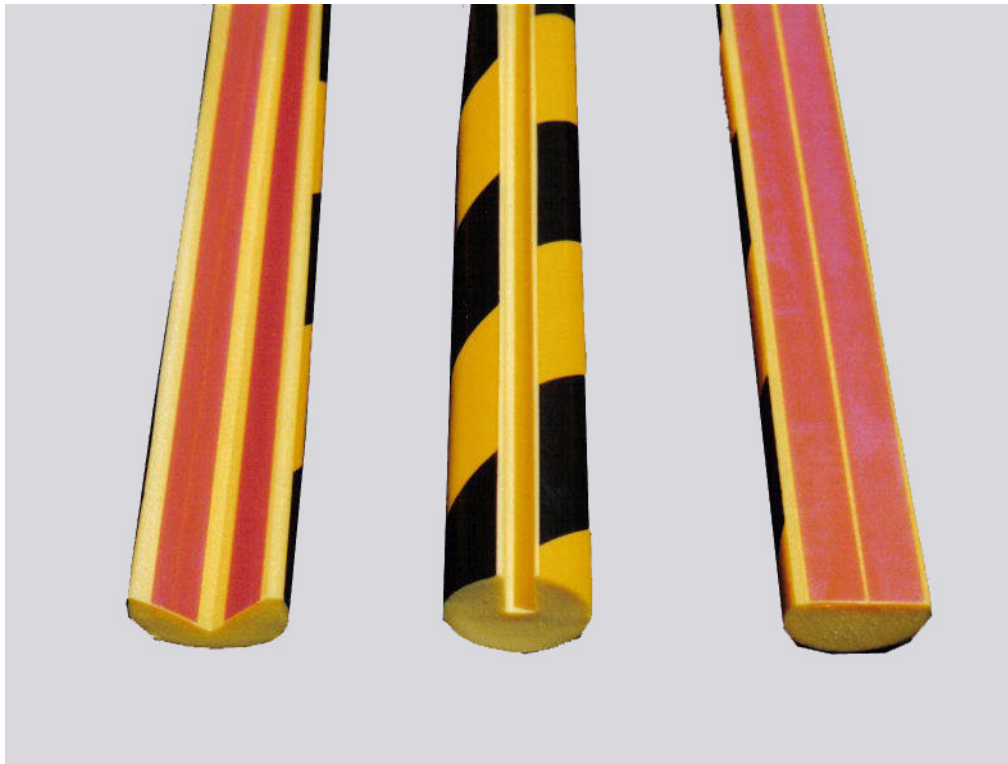

shown here:

A with 90° cut-out: self-adhesive

B = NON-adhesive

C flat surface with self-adhesive backing