

Assembly & Installation Instructions for LetterSentry Locking Mailbox LSLM - 2000

READ ALL INSTRUCTIONS PRIOR TO ASSEMBLY AND INSTALLATION.

Important Note:


Customers are required to contact their local post office before installing the mailbox to ensure its correct placement and height at the street. As a general rule, most mailboxes are installed at a height of 41" to 45" from the bottom of the incoming door and 6 - 8" set back from front edge of curb. These measurements can vary per your local postal requirements, so check with your local post office before installation.

Assembly:

To attach the mailbox box to the pole first align the mounting holes on the mounting plate with the holes in the bottom of the mailbox. Insert and hand tighten supplied bolts. Make sure that the post and mailbox are aligned before tightening mounting bolts with a wrench.

Installation:

Dig a hole approximately 16" deep (this will vary due to local postal codes) with post hole digger or small shovel. Install completely assembled post into hole and check for fit. Mix quick set style concrete and pack it in around the post in the hole. Place a spirit level on the round pole and level the mailbox post front to back and side to side. Some temporary supports may be necessary until the concrete dries.

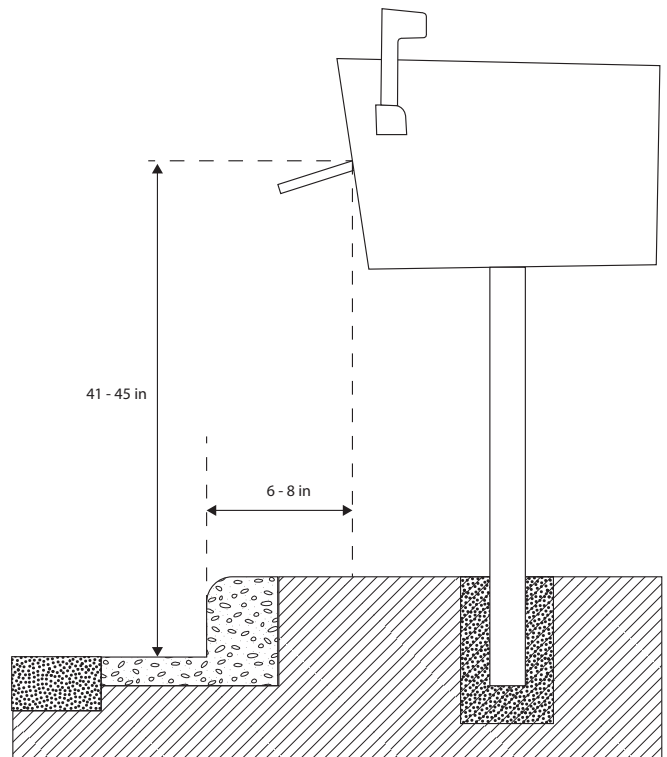

QualArc
11300 Trade Center Dr., Ste. A
Rancho Cordova, CA 95742
916-273-1576
Fax 916-635-0228
www.qualarc.com

