



www.globalindustrial.com

1-800-645-2986



MOBILE COMPUTER CABINET

ASSEMBLY INSTRUCTION



MODEL 694561 (27" x24" x49-1/4")



CONTENTS

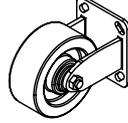REF	QTY	DESCRIPTION	REF	QTY	DESCRIPTION
1	1	BACK PANEL	H1	8	M6X20mm ROUND PHILLIP HEAD SCREW 
2	1	LEFT SIDE PANEL	H2	8	6.5mm PLATE WASHER 
3	1	RIGHT SIDE PANEL	H3	8	6.5mm SPLIT WASHER 
4	1	TOP	H4	2	HINGE PIN 
5	1	BASE	H5	4	PLASTIC HINGE CAP 
6	1	FRONT FRAME	H6	4	SHELF CLIP 
7	1	DOOR	H7	2	SHEET METAL SCREW 
8	1	MIDDLE SHELF	H8	2	KEY 
9	1	ADJUSTABLE SHELF	H9	2	OUTLET HOLE COVER RING 
10	1	CONNECTING PLATE	H10	16	HEXAGON SCREW M10X25 mm 
11	1	KEYBOARD TRAY	H11	16	10.5mm PLATE WASHER 
			H12	16	10.5mm SPLIT WASHER 
			H13	4	WHEEL 
			H14	1 SET	GUIDE RAIL 





WARNING.

- 1.USE 2 PEOPLE TO ASSEMBLE.
- 2.LAY PARTS ON SOFT SMOOTH NON-SCRATCH SURFACE.
- 3.DO NOT OVERLOAD SHELVES.
- 4.LOAD LOWER SHELF FIRST.
- 5.DO NOT CLIMB OR STAND ON SHELVES.

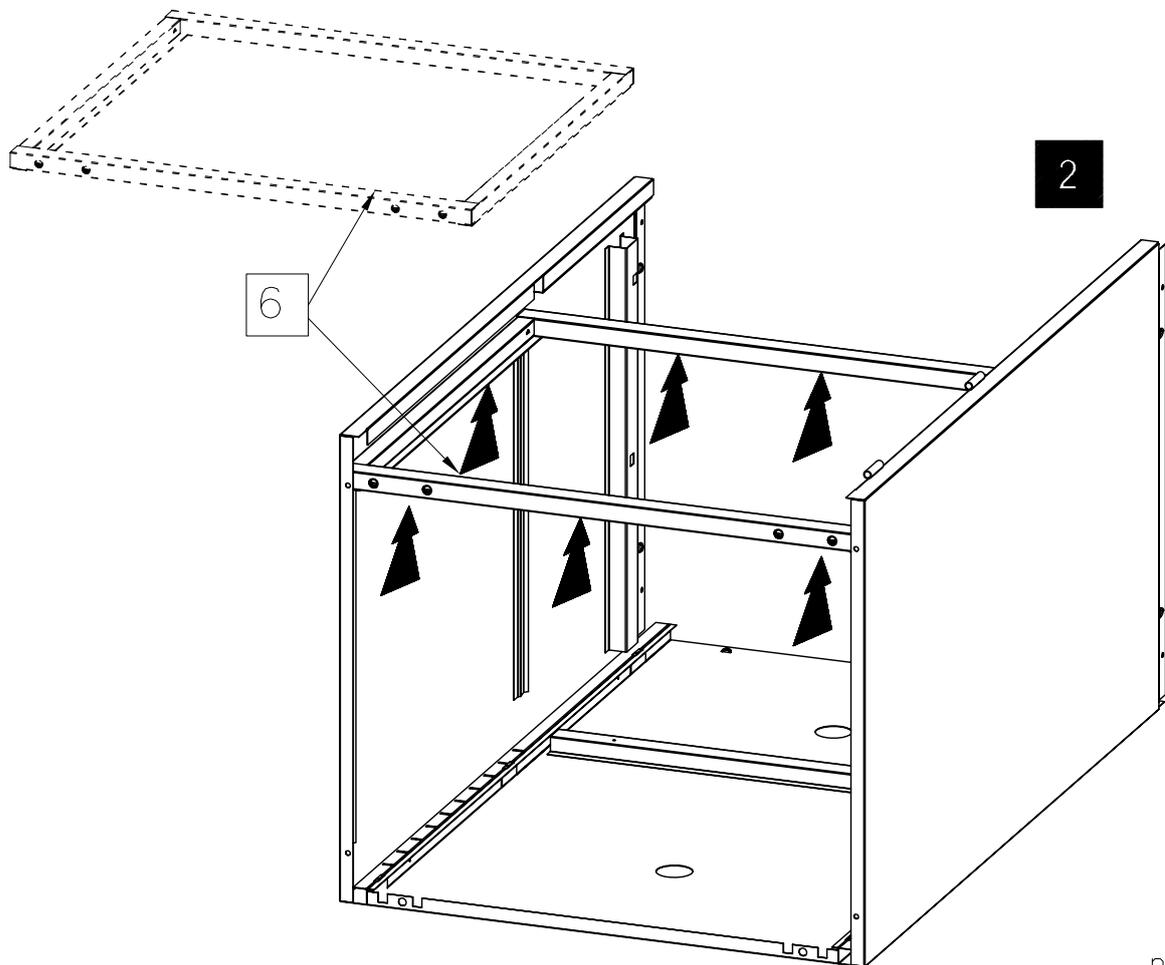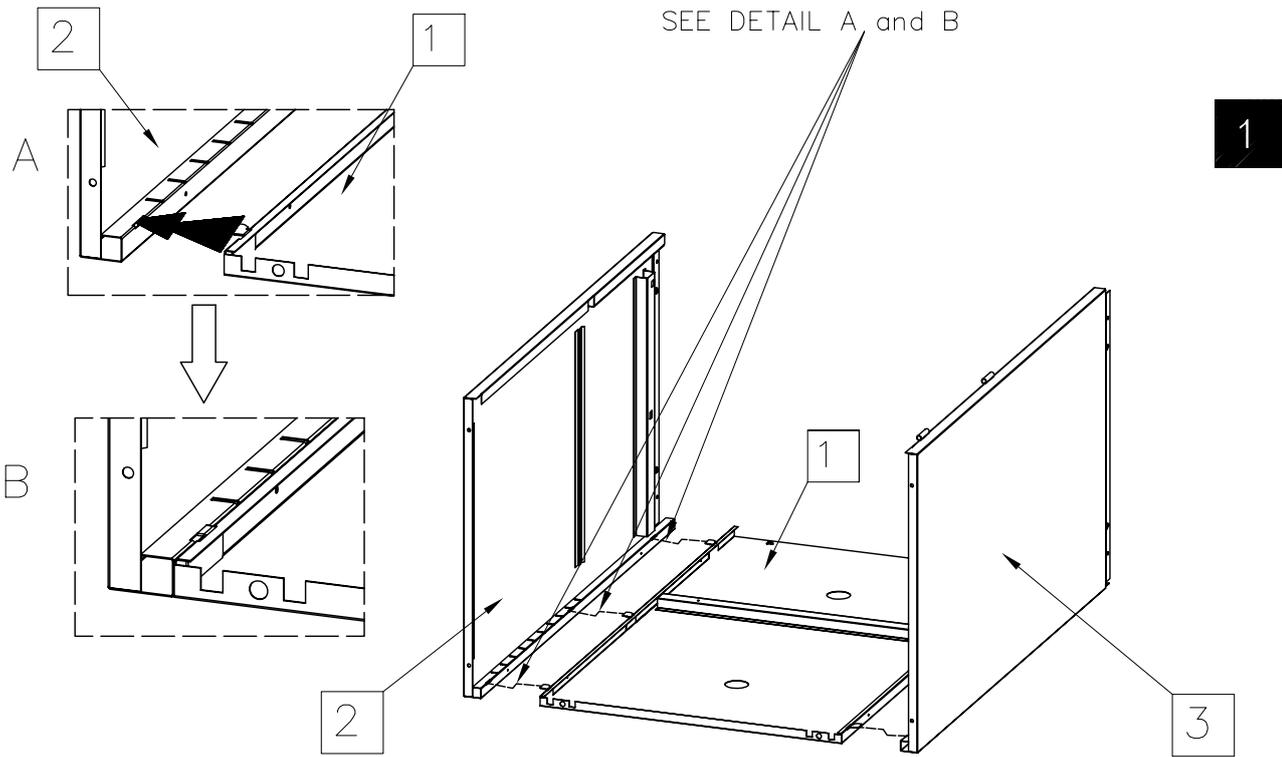

3




4

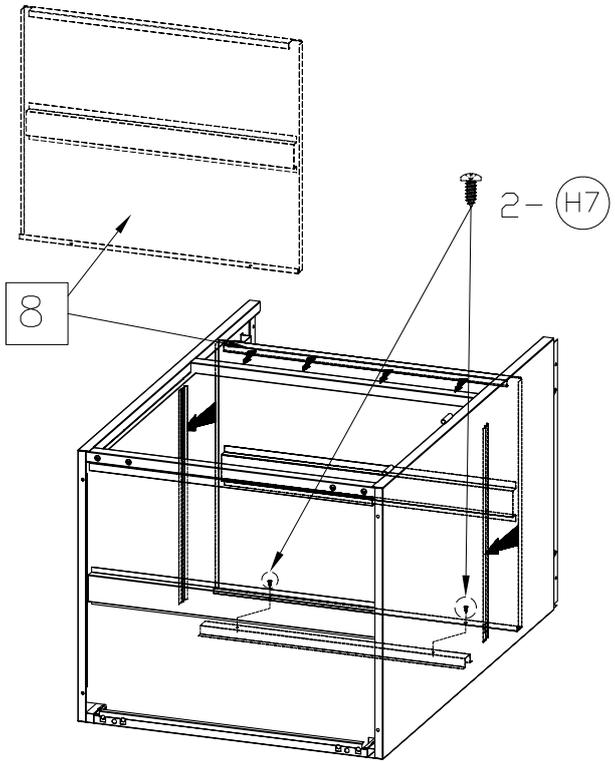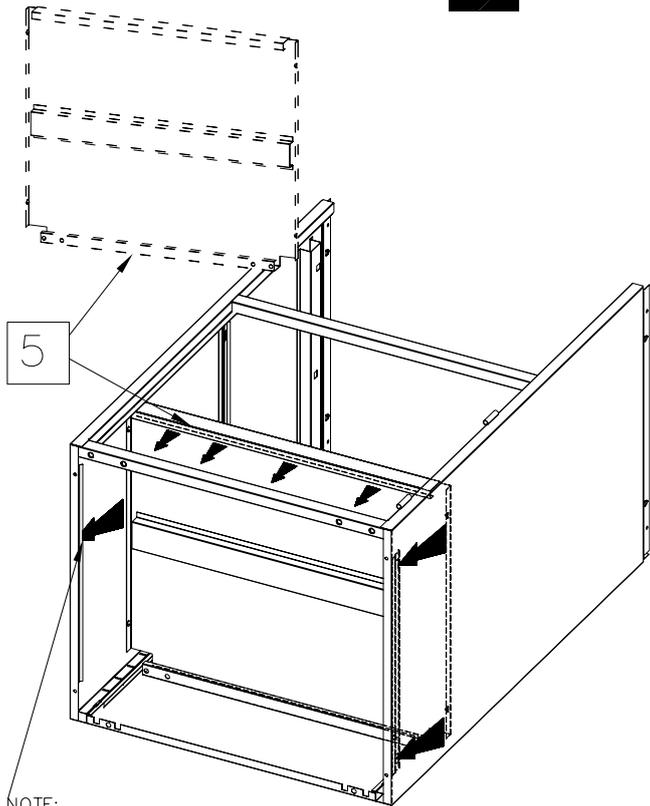


NOTE:
FULLY SEAT BASE EDGE
BEHIND
Z-CHANNELS

6


5

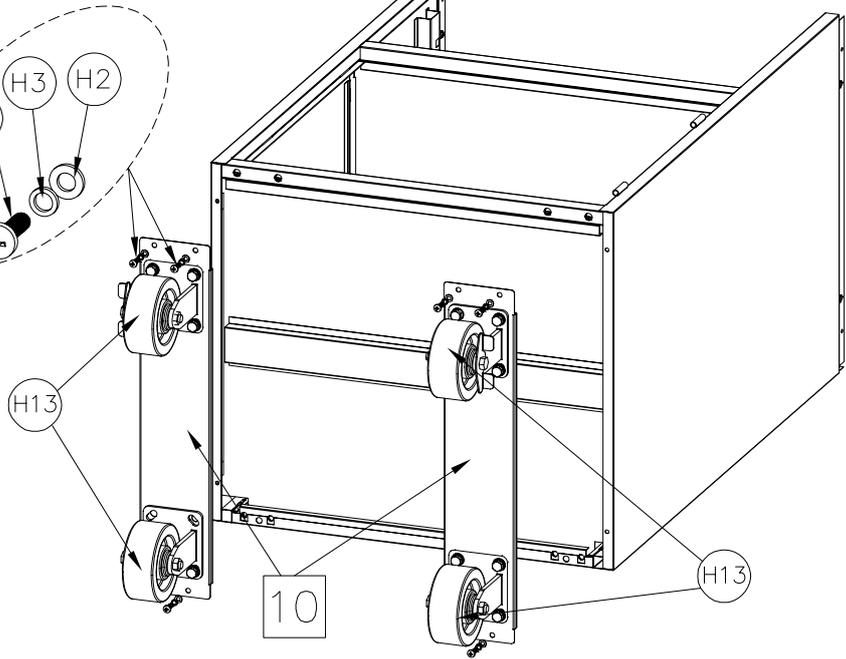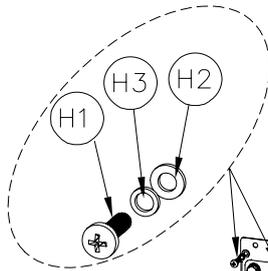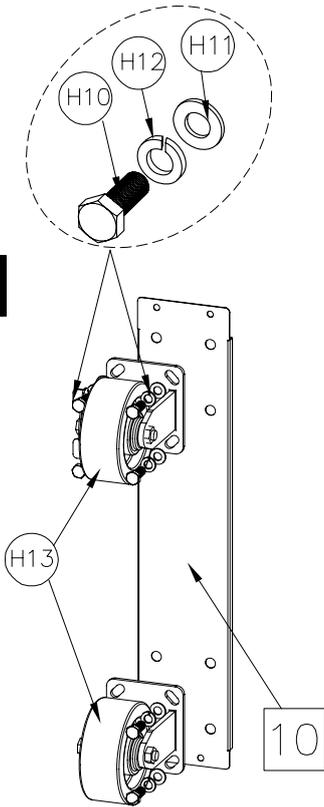

7

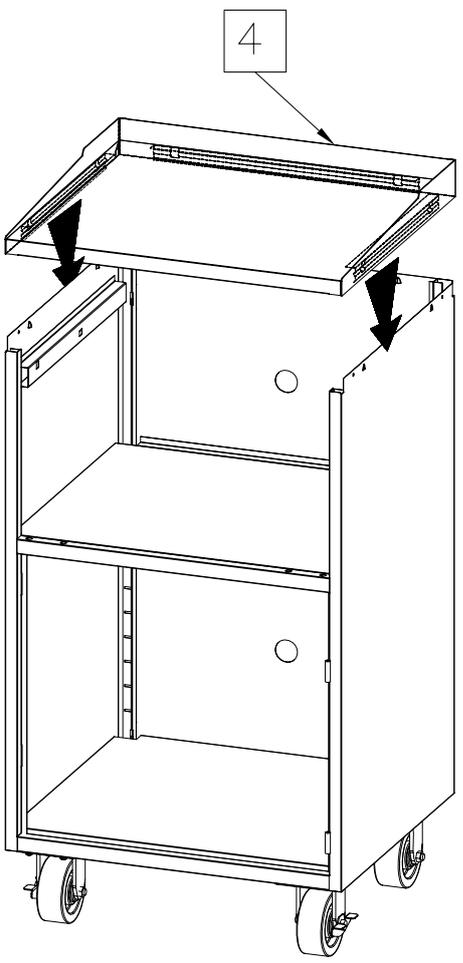


DETAIL

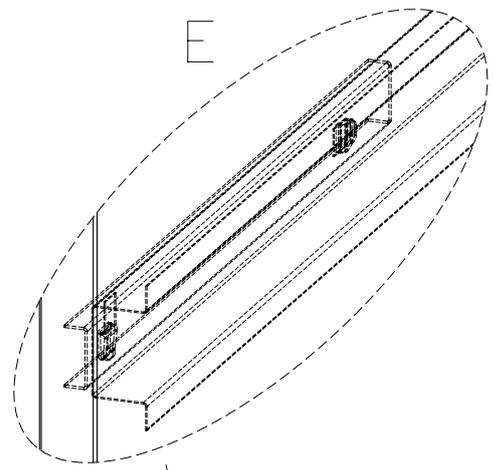

SEE DETALL D

8



11

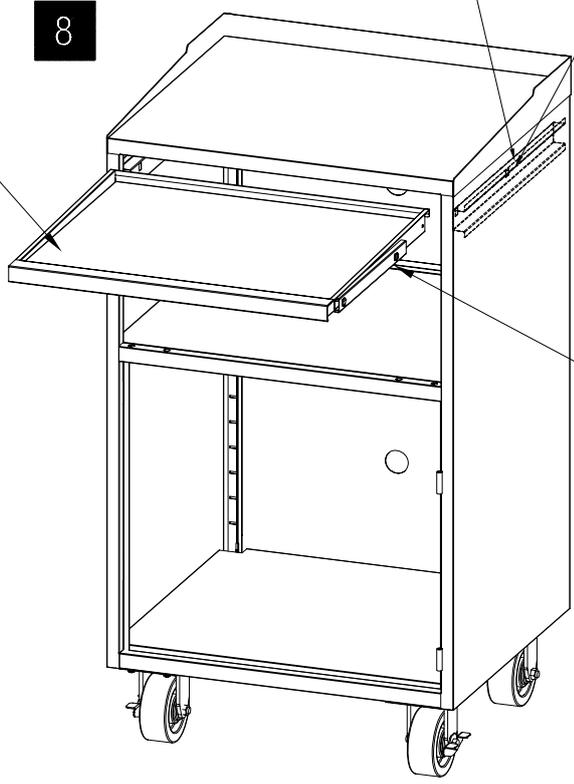

11
SEE DETALL C


H14

SEE DETALL D

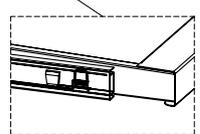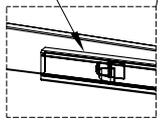

DETAIL

9

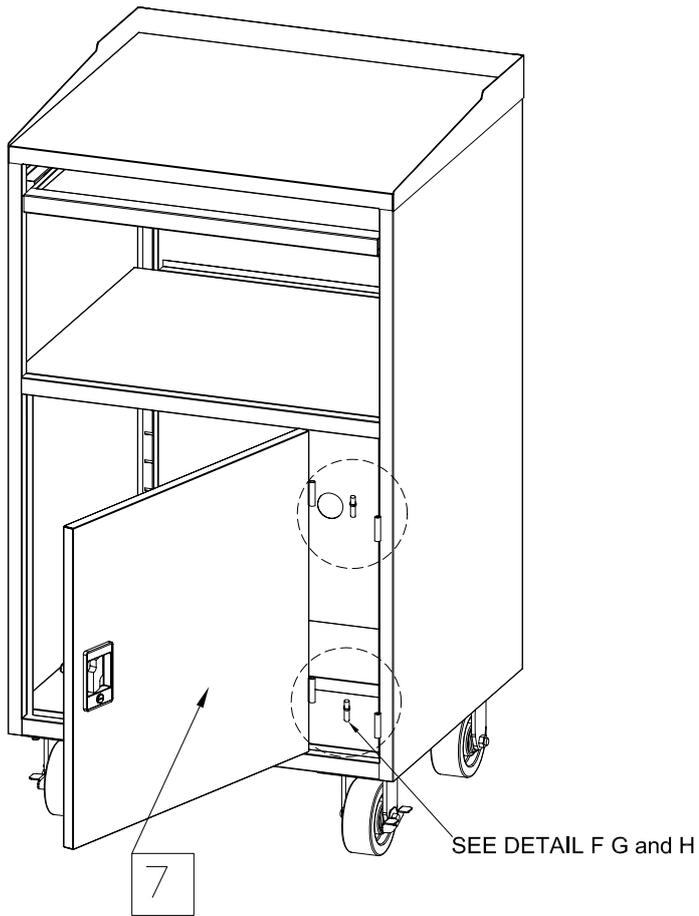

10

