



# SUPER CUBE

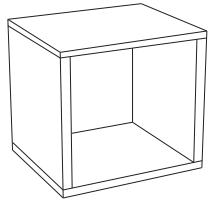


## Included




8 Pins



2 Vertical zBoards  
adhesive strips on 2 edges




1 Backer Board  
thin and has no adhesive



2 Horizontal zBoards  
with grooves

 **WARNING: CHOKING HAZARD**  
Small parts NOT for children under 3 years

## Important

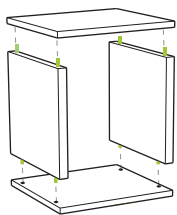

THIS SIDE UP


**Tip** Start assembly from bottom to top.

**DO NOT** place unit on its side or back as it will compromise its structural integrity.




- Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only

- When moving your Way Basics furniture, lift from the bottom
- Make sure zBoard surfaces are clean and dry

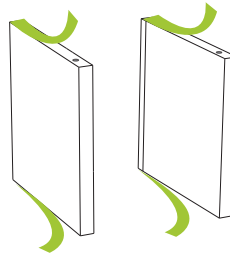


1

Carefully remove the 3M protective layer from adhesive.

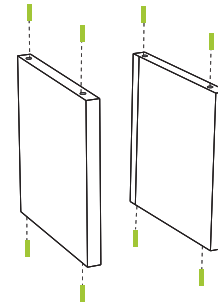


2

Place alignment pins in vertical zBoards.

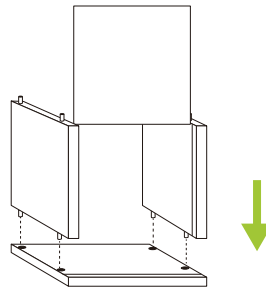

3

Align vertical zBoards and backer board to horizontal zBoard.

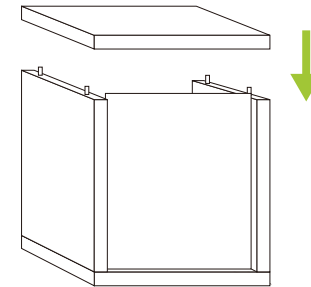

4

Align horizontal zBoard and press firmly to secure unit together. Visit links below for more details. Enjoy building possibilities!

