


Model 695293BL / 695295BL
695293GN / 695295GN
695293BK / 695295BK

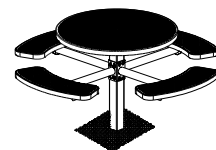

www.globalindustrial.com
US: 888-628-3466
Canada: 888-645-2986
Mexico: 01.800.681.6940

Model 695292BL / 695294BL
695292GN / 695294GN
695292BL / 695294BK





IN-GROUND PICNIC TABLE

ASSEMBLY INSTRUCTION

CONTENTS


REF.	QTY.	DESCRIPTION
1	1	POST
2	1	SUPPORT BRACKET
3	1	TOP
4	4	SEAT ARM
5	4	SEAT
H1	4	3/8-16 x 1" Lg Carriage Bolt
H2	4	3/8 Flat Washer
H3	4	3/8-16 Kep Nut
H4	20	5/16-18 x 1" Lg Hex Bolt
H5	40	5/16 Flat Washer
H6	20	5/16-18 Kep Nut
H7	8	7/16-14 x 5 3/4" Hex Bolt
H8	16	7/16 Plain Washer
H9	8	7/16-14 Hex Bolt

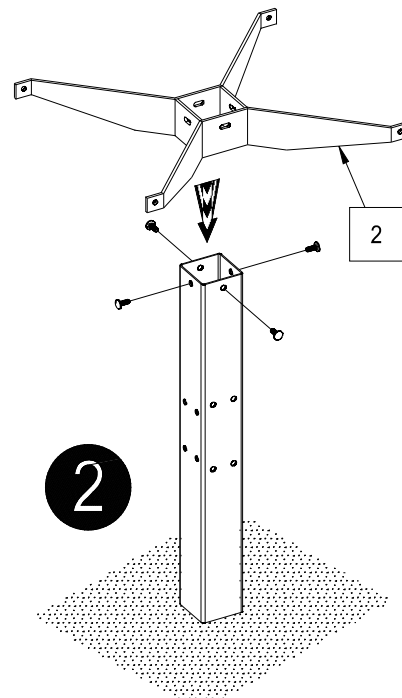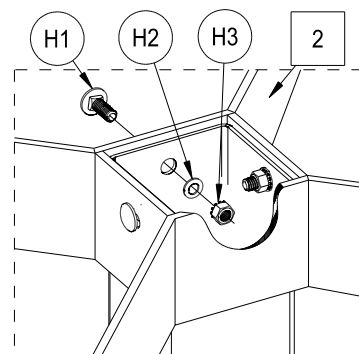


2

NOTE:



Assemble unit after cement is cured


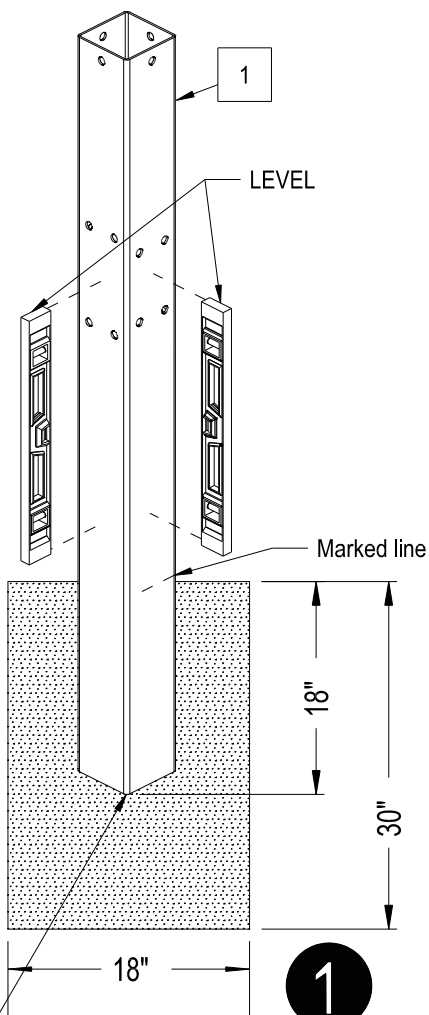


1. Dig hole approximately 18" x 18" x 30" as shown.
2. Mix concrete using the proper ratio of sand and cement.
3. Pour concrete into hole flush to surface.
4. Mark a line on the Post 18" up from the bottom.
5. Insert Post into freshly mixed concrete until marked line is flush with surface.
6. Align post using a Level as shown.


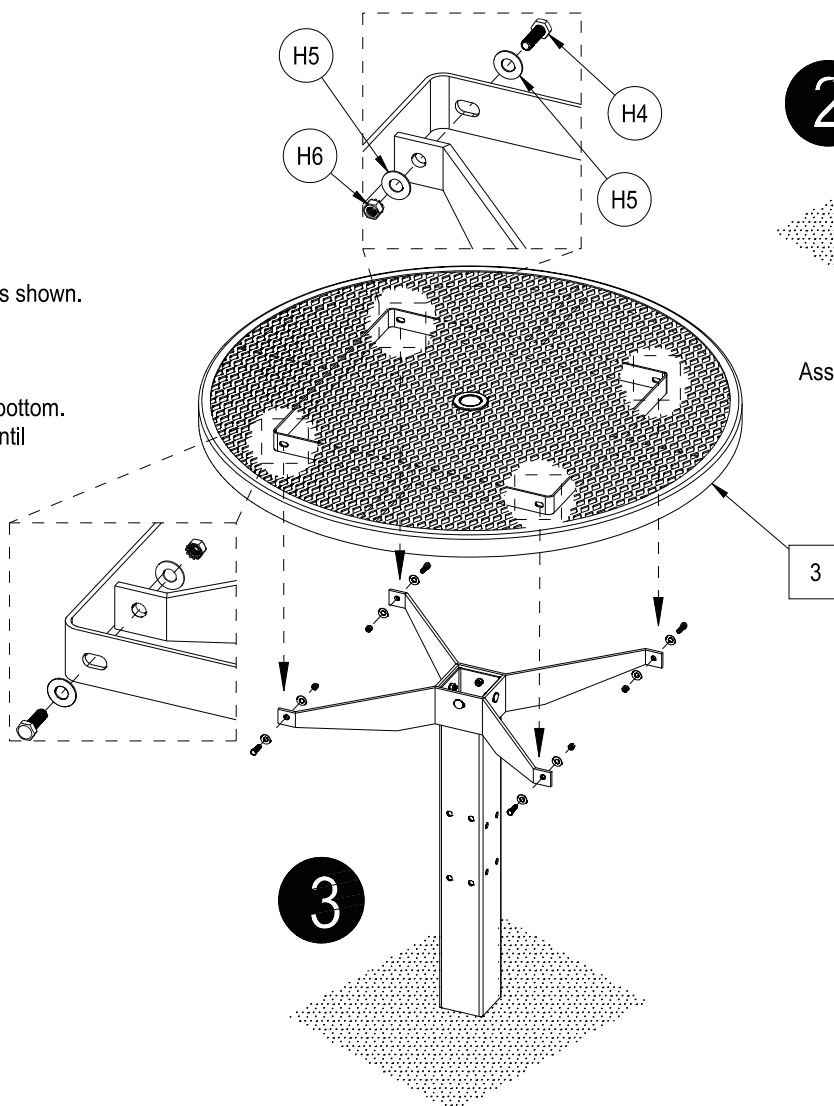



3

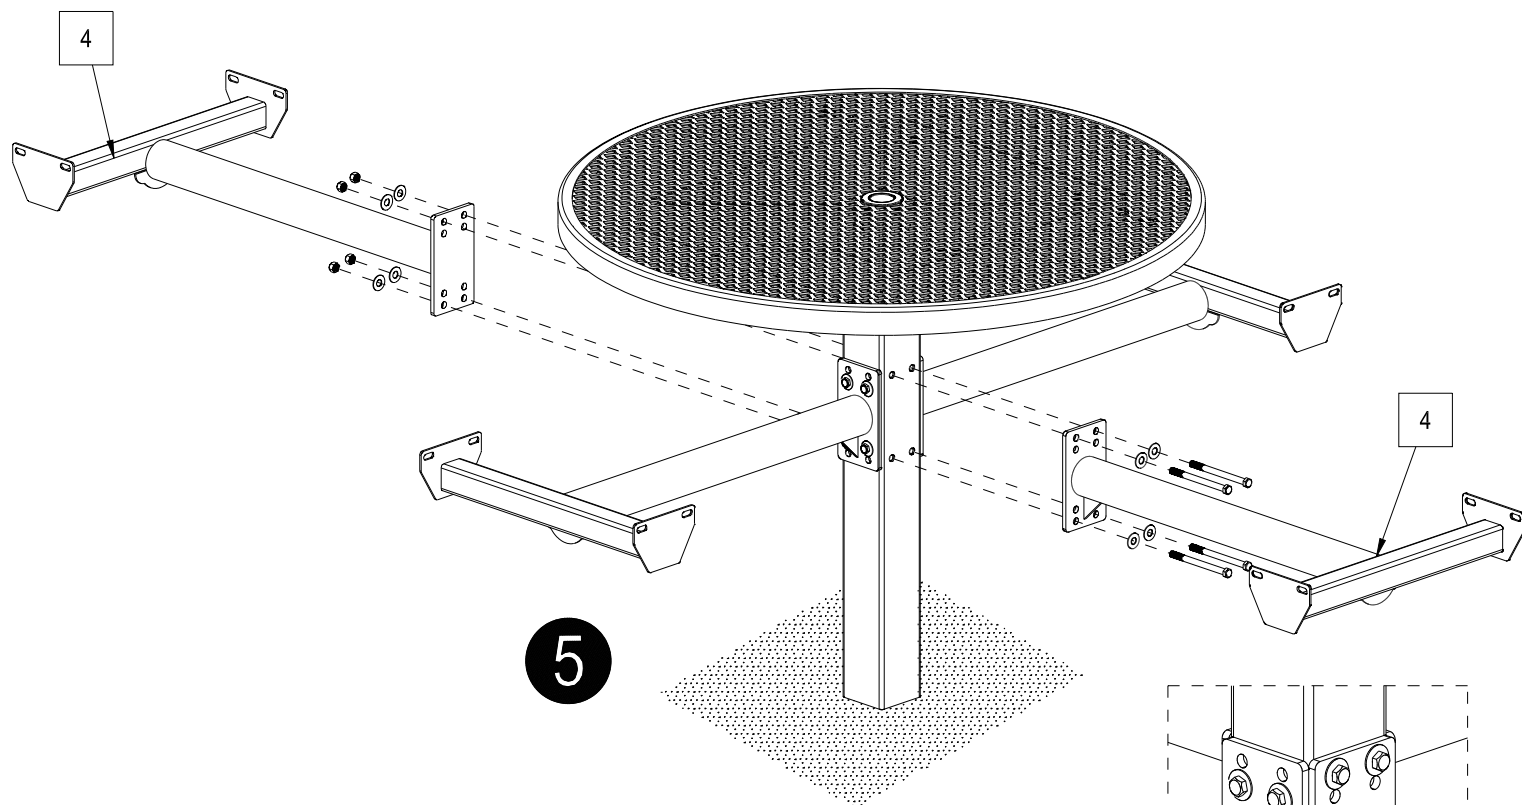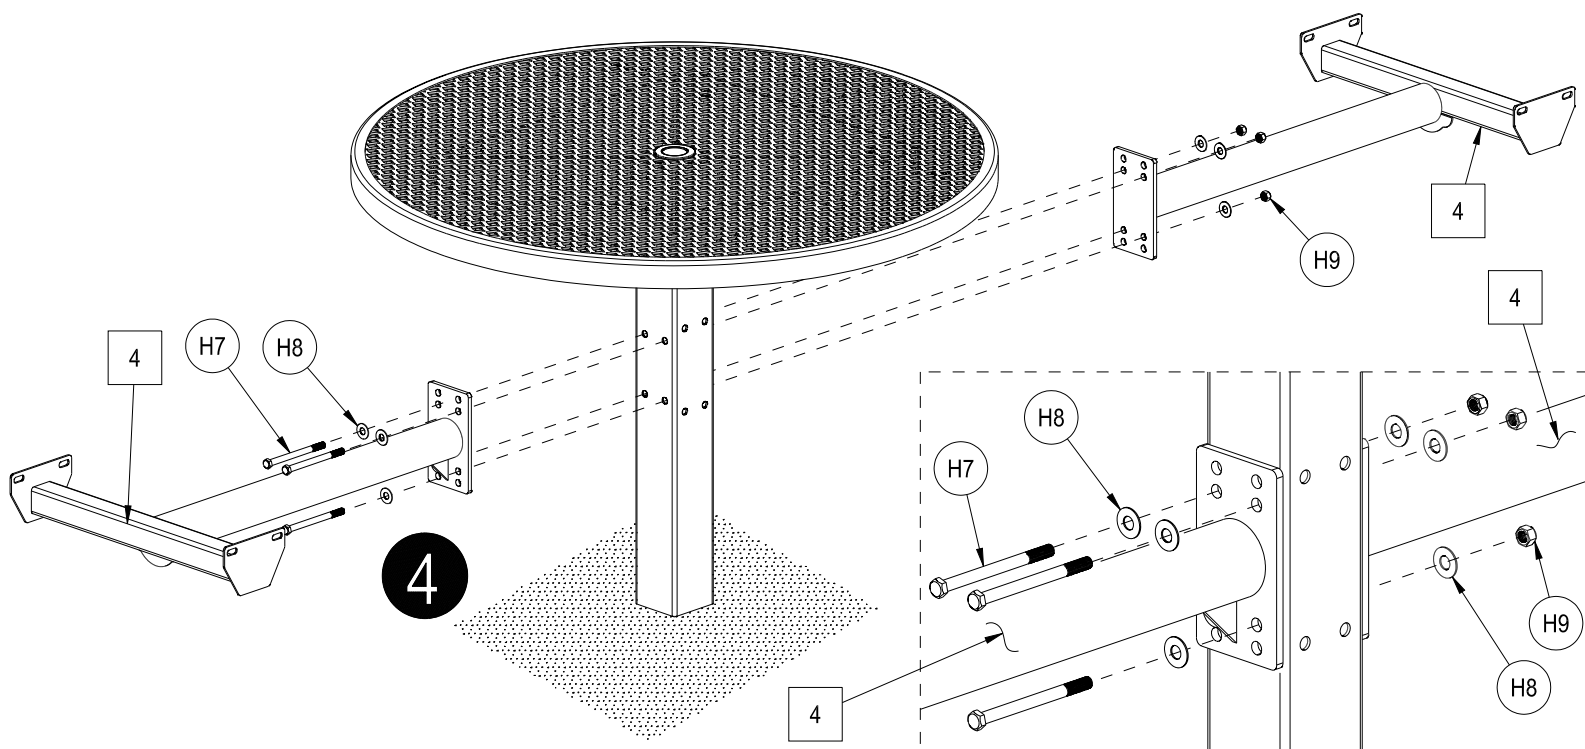

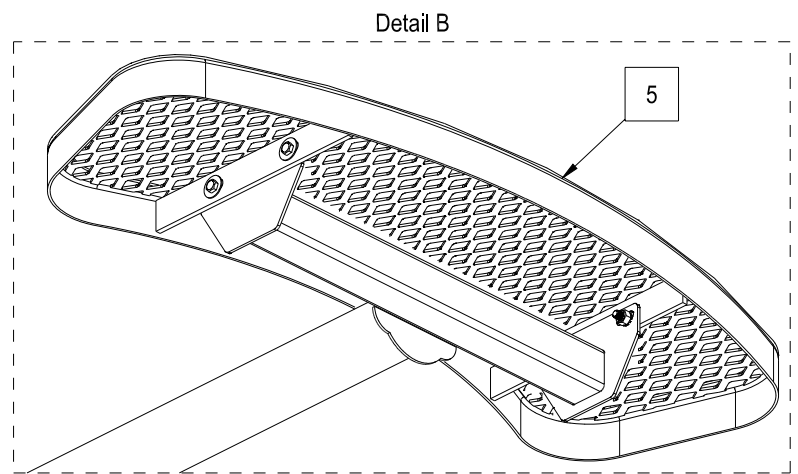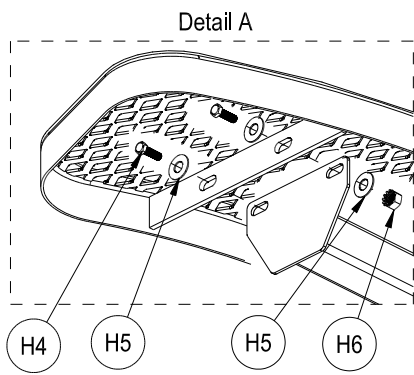

See detail A and B

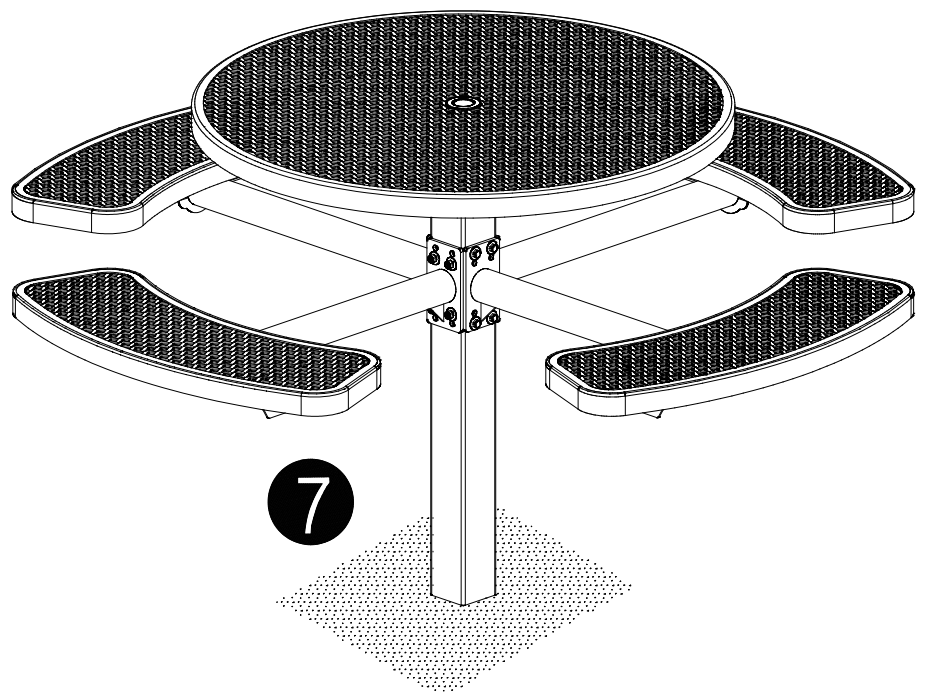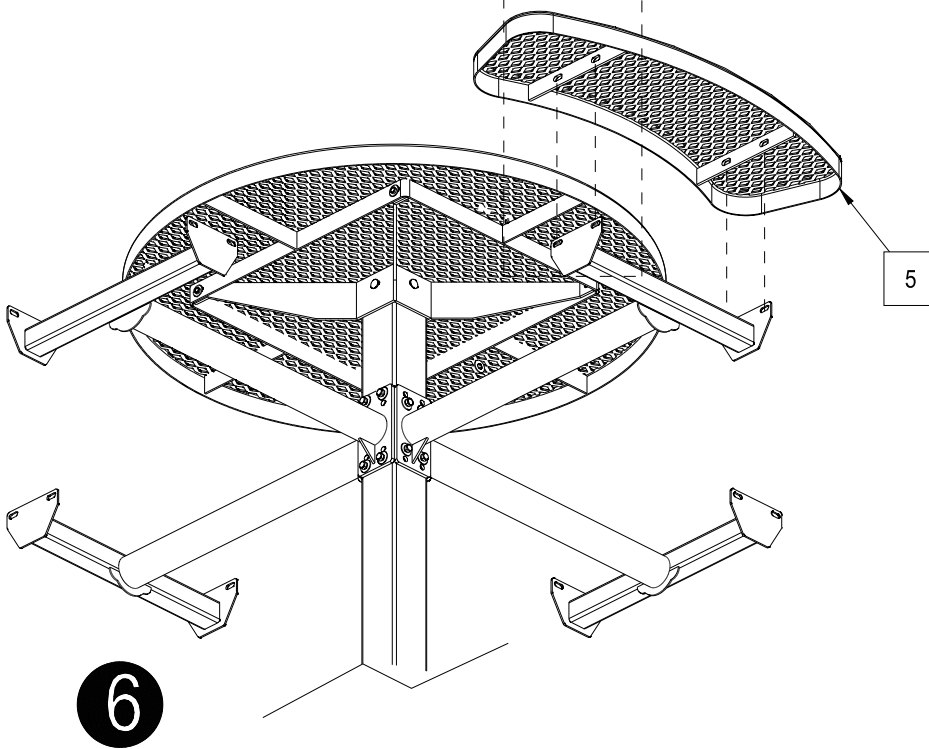

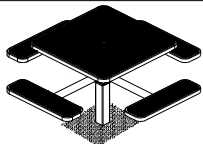

Modelo 695293BL / 695295BL
695293GN / 695295GN
695293BK / 695295BK




www.globalindustrial.com

EUA: 888-628-3466

Canadá: 888-645-2986

México: 01.800.681.6940

Modelo 695292BL / 695294BL
695292GN / 695294GN
695292BL / 695294BK


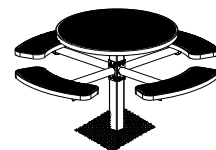


MESA DE PICNIC EMPOTRADA

INSTRUCCIÓN DE ENSAMBLAJE

CONTENIDO


REF.	CANT.	DESCRIPCIÓN
1	1	POSTE
2	1	MÉNSULA DE SOPORTE
3	1	TAPA
4	4	BRAZO DE ASIENTO
5	4	ASIENTO
H1	4	Perno de Carruaje 3/8"-16 x 1" Lg
H2	4	Arandela Plana 3/8"
H3	4	Tuerca de Seguridad 3/8"-16
H4	20	Tornillo Hexagonal 5/16"-18 x 1" Lg
H5	40	Arandela Plana 5/16"
H6	20	Tuerca de Seguridad 5/16"-18
H7	8	Tornillo Hexagonal 7/16"-14 x 5 3/4"
H8	16	Arandela Plana 7/16"
H9	8	Tuerca Hexagonal 7/16"-14

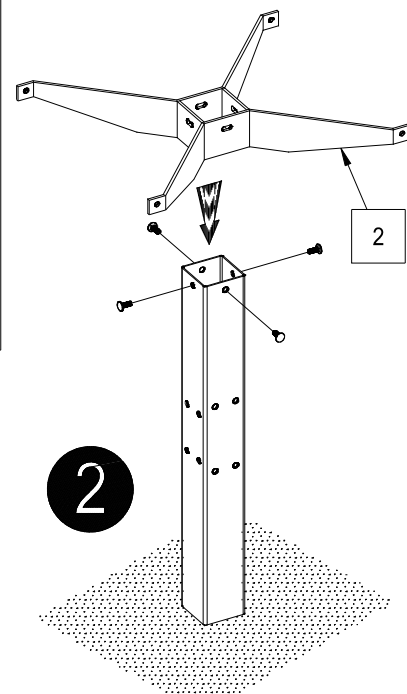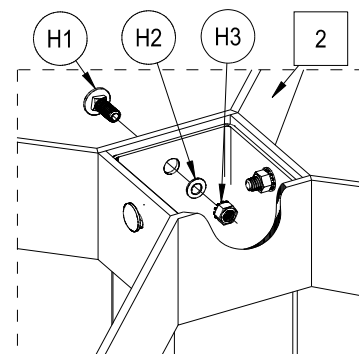


2

NOTA:




Monte la unidad después de que el cemento esté curado.


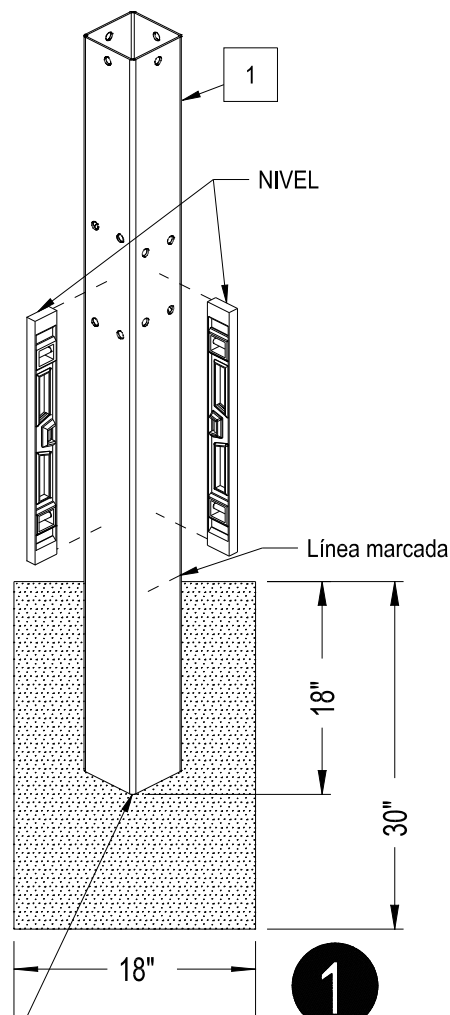


1. Escave un agujero de aproximadamente 18" x 18" x 30" como se muestra.
2. Mezcle concreto usando la proporción apropiada de arena y cemento.
3. Vierta el concreto en el agujero a ras de la superficie.
4. Marque una línea en el poste a 18" de la parte inferior.
5. Inserte el poste en la mezcla fresca de concreto hasta que la línea marcada quede al ras de la superficie.
6. Alinee el poste usando un nivel como se indica.

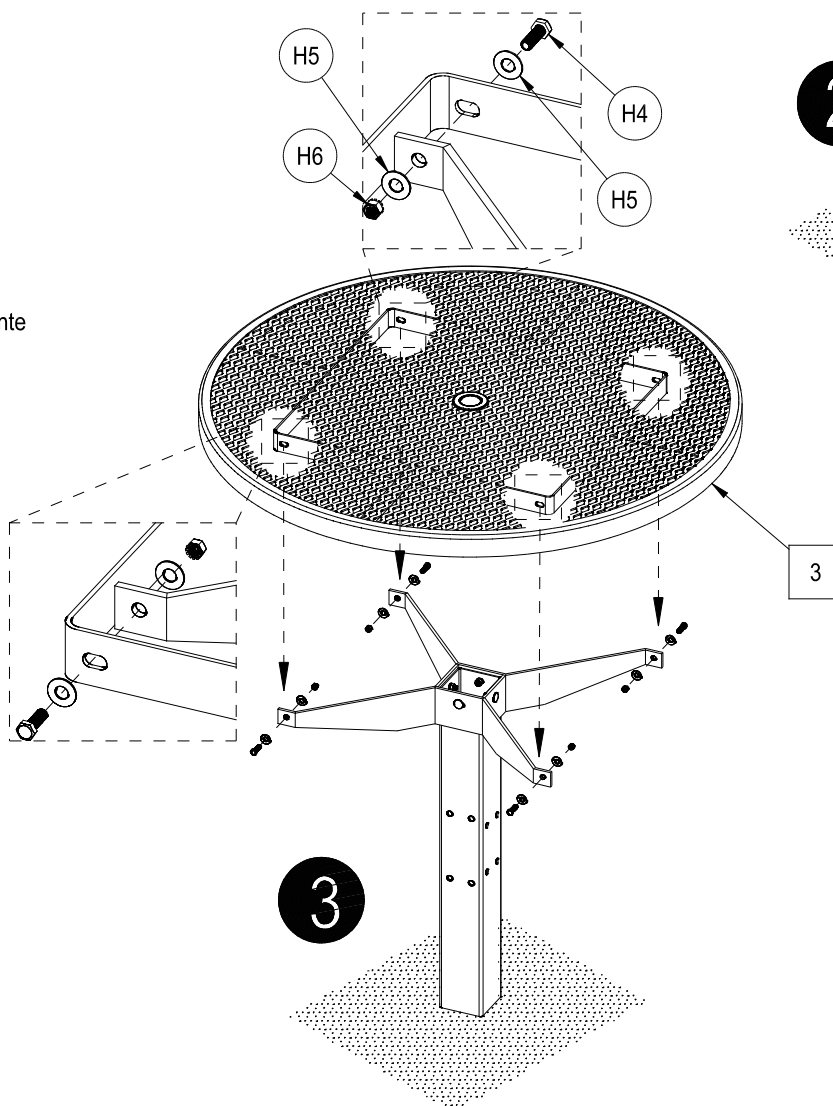

3

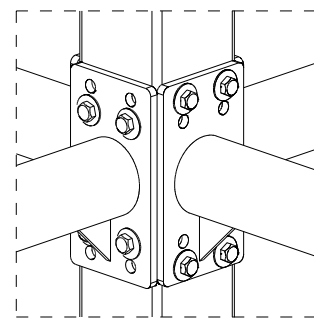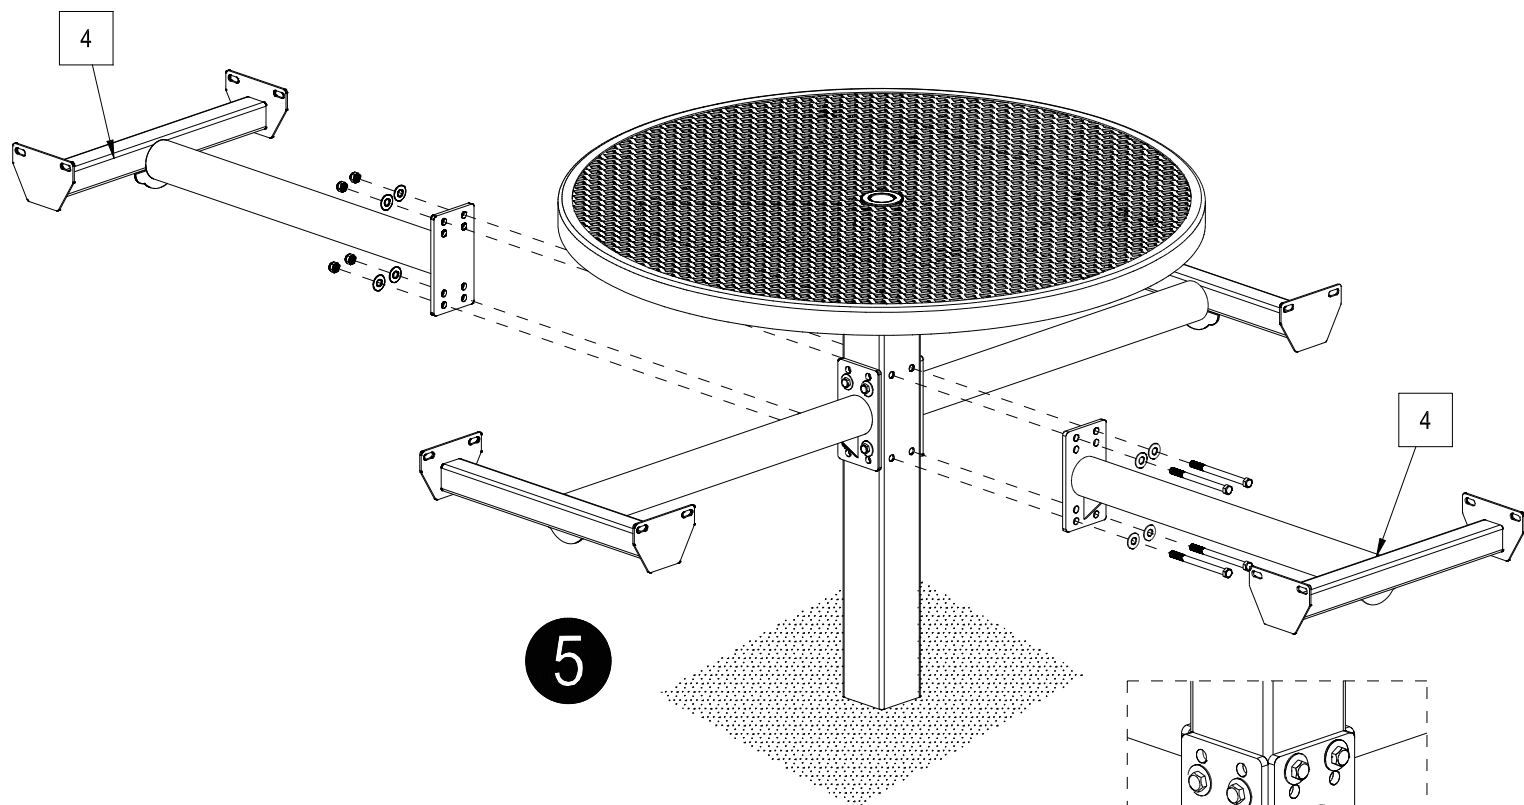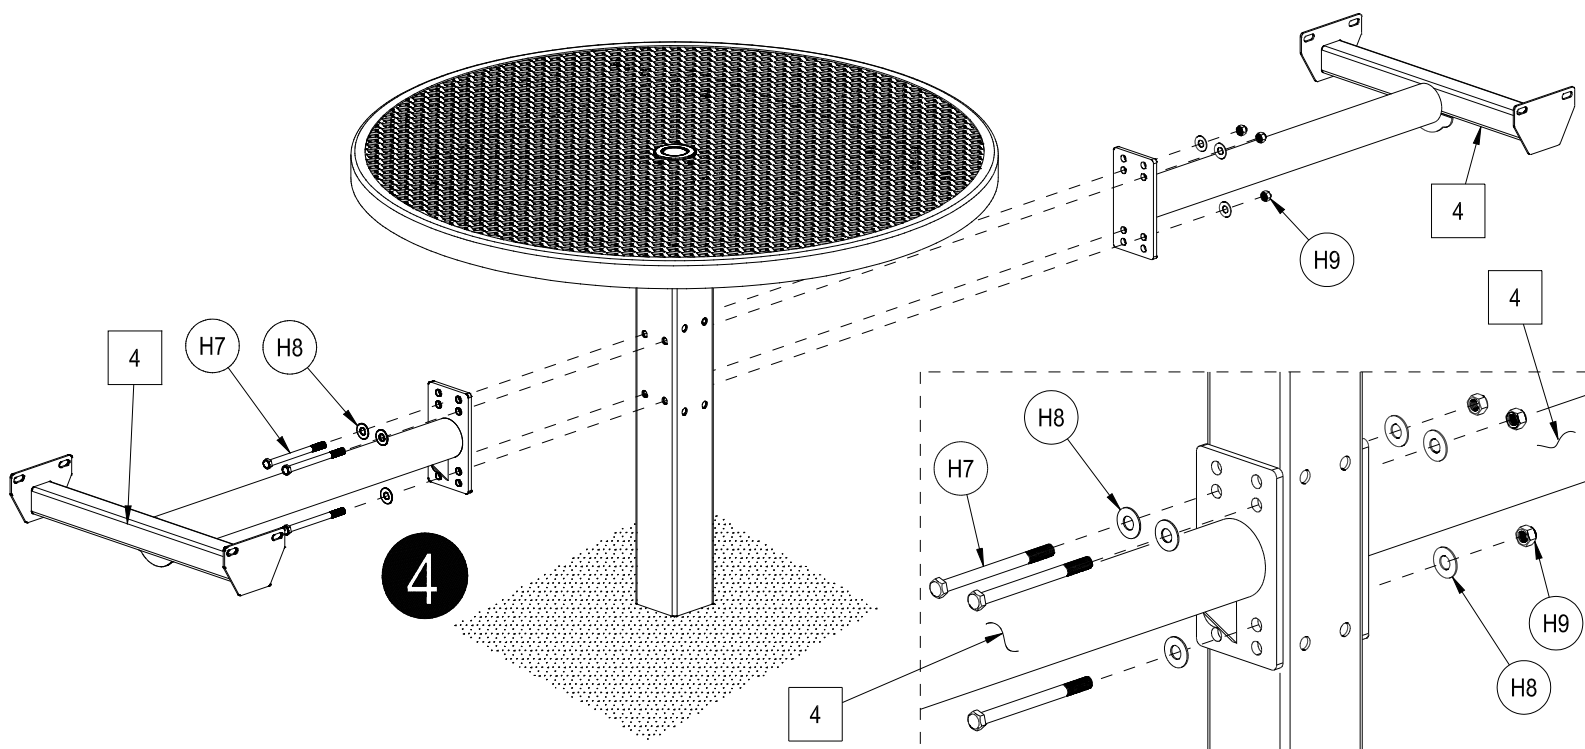

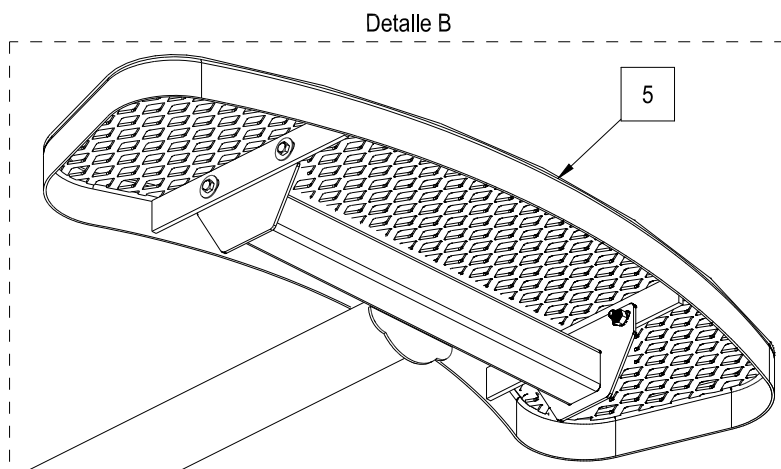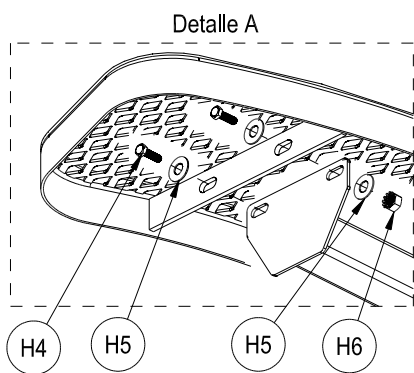

Vea detalle A y B

