




GOOD DIRECTIONS, INC.

ASSEMBLY INSTRUCTIONS - YARD AND GARDEN POLE COTTAGE SIZE WEATHERVANES

WEATHERVANE ASSEMBLY




- 1.** Position brass ring over rod.




- 2.** Slide large ball down rod to brass ring.

- 3.** Interlock directionals... slide on rod.

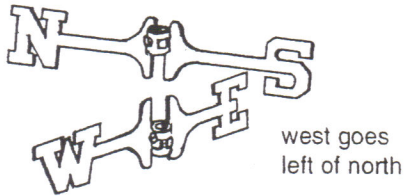

- 4.** Slide small ball on rod...rest on directionals.

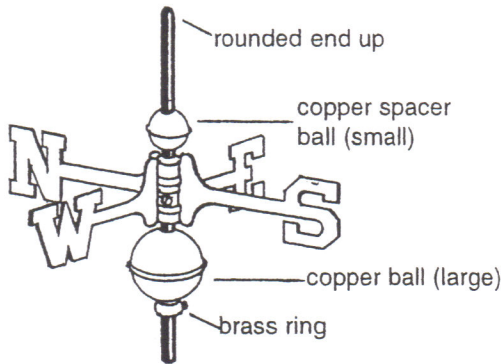


copper bottom of weathervane



- 5.** Slide weathervane onto rod.

Slide weathervane and retaining hook* onto rod simultaneously.


copper bottom of weathervane



Tighten set screw.

retaining hook

*Retaining hook included with and required for 3-dimension figures only.

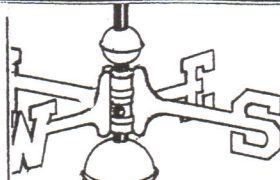

- 6.** Slide weathervane rod into pole and lock using wing nut.

Section C

- 7.** Thread section C into Section B. (See note →)

Section B

- 8.** Thread* section B into section A for full 55' height. (See note →)


*Pliers may be required to tighten.

Section A

Press into ground for final installation.

YOUR PACKAGE INCLUDES

- 1 Weathervane Figure
- 1 Set of Brass Directionals
- 1 Weathervane Rod
- 1 Set of Copper Balls (one large, one small)
- 1 Retaining Hook (if required)
- 1 3-Piece Yard & Garden Pole

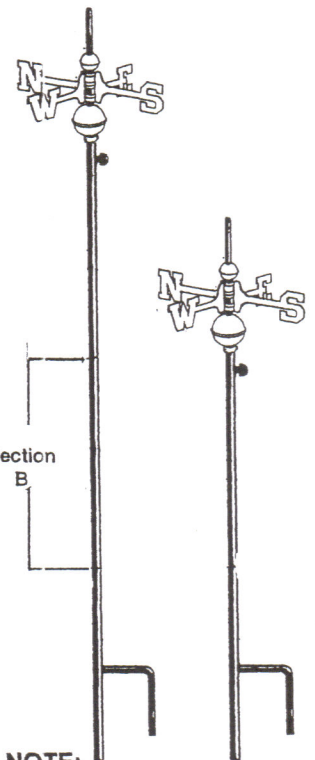

NOTE:
For less height (37" overall) Section B can be eliminated. A shorter pole may better suit your landscape.