Your Package Contains the following:

One Weathervane Figure Plus...

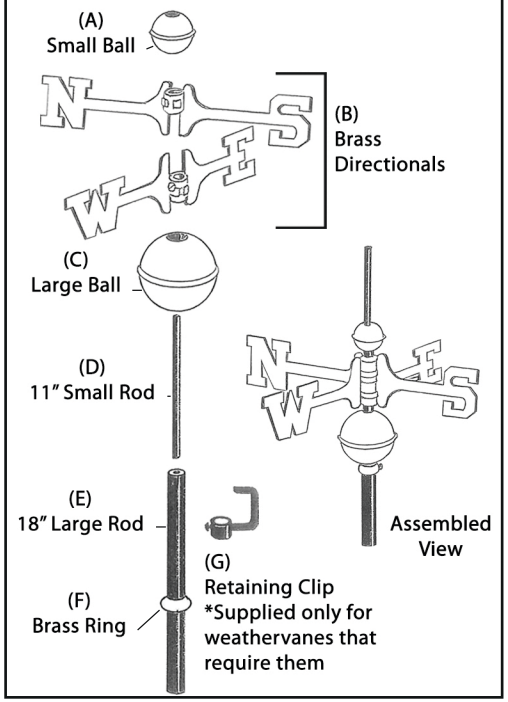

1

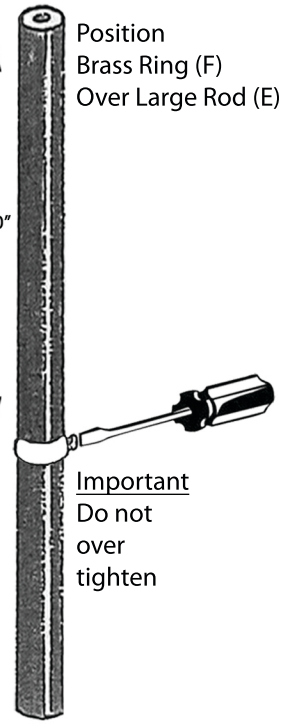

Position
Brass Ring (F)
Over Large Rod (E)

Important
Do not
over
tighten

2

Thread
Small Rod (D)
into Large Rod (E),
Position wrenches
on flat spots,
Tighten Firmly.

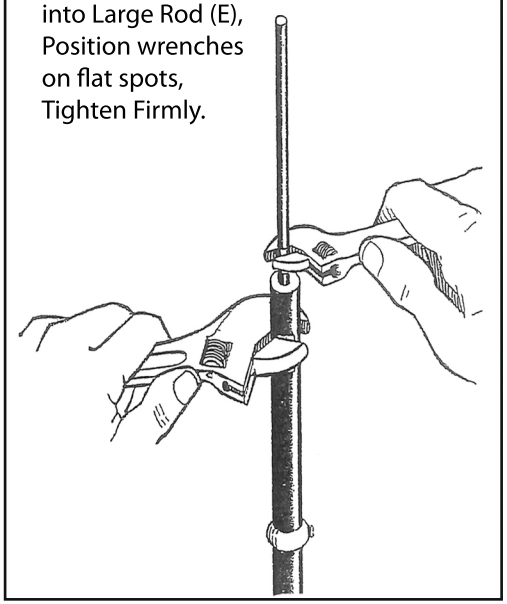

3

Slide Large Ball (C) down
rod to Brass Ring (F).

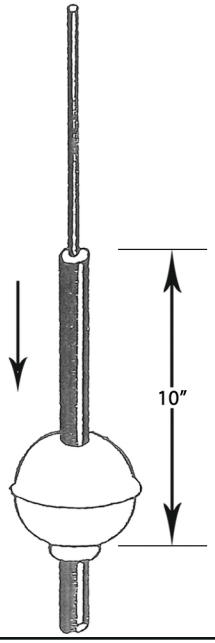

4

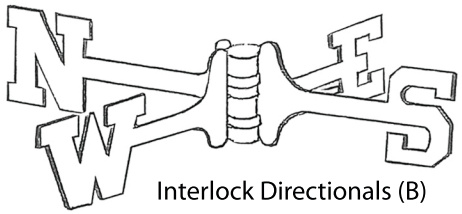

Interlock Directionals (B)

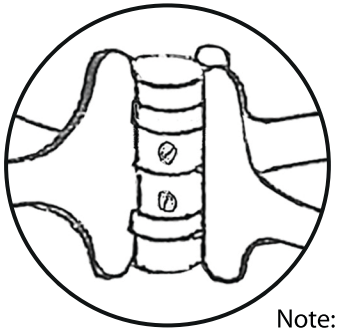

Note: NS+EW
position is correct
when both screws
are aligned.

5

Slide Directionals (B)
onto rod and tighten
set screws.

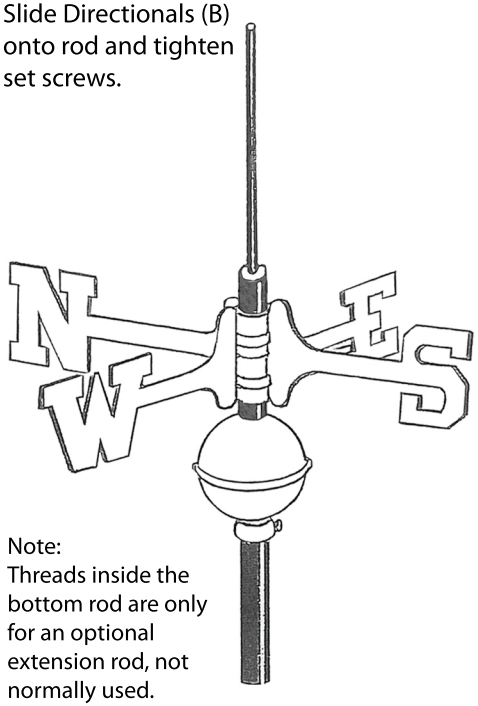

Note:
Threads inside the
bottom rod are only
for an optional
extension rod, not
normally used.

6

Adding a Retaining Clip

Supplied only for weathervanes
that require them (to prevent
windlift).
E.G. Eagle, heron,
duck, or any
weathervane with
extended wings.



Bottom of
Weathervane

When clip is in
position, tighten
set screw.

Add Small Ball (A) to
Rod, Note: Smaller
hole goes on top
(ball fits loose)

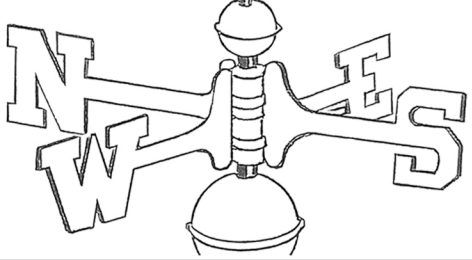

7

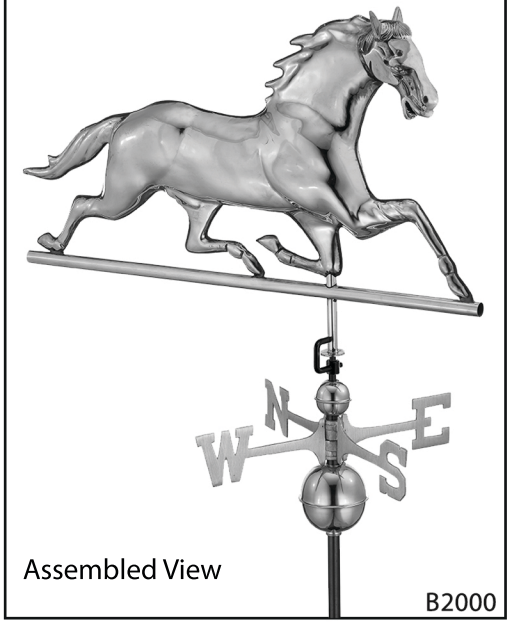

Assembled View

B2000