

# Dustie™


Dustless Technologies®

## Installation Instruction


FOR RIGHT ANGLE GRINDERS



- Includes:
- Dustie™ shroud
  - Band clamp
  - Releasable zip tie

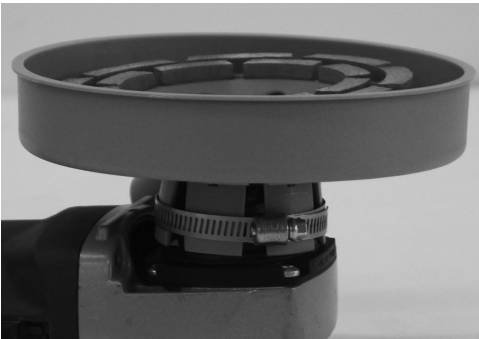


**1. UN-PLUG GRINDER.** Slip shroud on grinder, flanges should be flush with attachment.

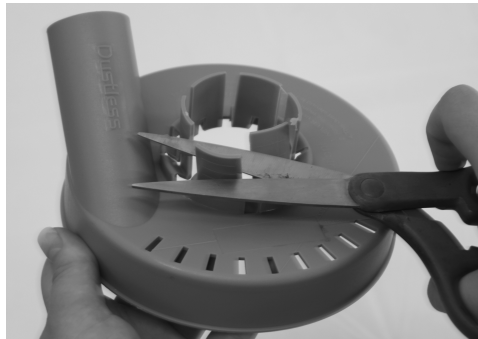


**2. Cut flanges to adjust height of shroud.** For best dust control, grinding wheel should be 1/4 inch below shroud.



**3. Install grinding wheel.** See #2 for height.

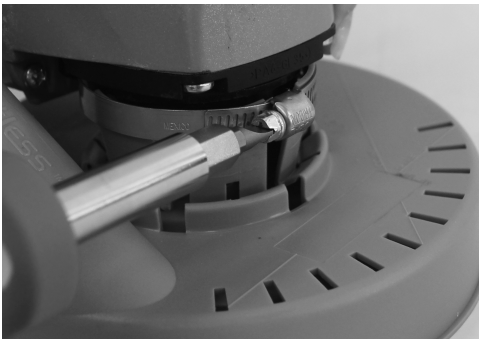

**4. Tighten band clamp.**

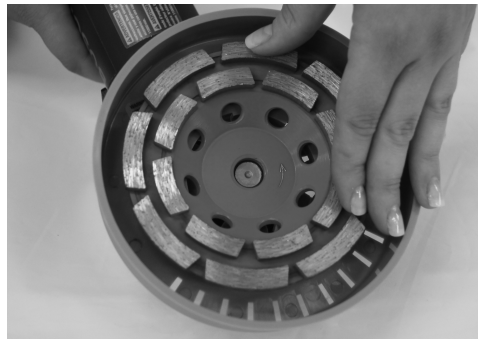

**5. Install Grinding wheel.** For best dust control, wheel should be 1/4 inch below shroud.



**6. Insert hose to port.**



**7. Secure other end of hose to the electric cord with releasable tie provided.**

### Instructions for Crack Chasing/Tuckpointing Application

1. Trim Flanges to adjust cutting wheel in middle of shroud.
2. Cut the Dustie on "CC Line" or "TP Line" depending on your desired opening angle. Follow instructions 2-7 above.
3. Snap on Cover Plate\* over open face.

\*Not Included with all kits

*This product was inspected and packaged carefully before being shipped from the factory. If you should happen to need assistance during assembly or operation, call 1-800-568-3949 for our customer service department.*

**WARNING** Always make sure grinder is UNPLUGGED when removing or attaching front noseclip. Before use, refer to your tool manual for warnings and instructions.

**Dustless**  
TECHNOLOGIES

800.568.3949

dustlesstechnologies.com

OM013\_0713

# DUSTLESS™

WET/DRY

## DUSTLESS™ EPA Lead-Safe Compliance Kit

### Kit #16500 Includes:

- 1 - 16006 HEPA Wet/Dry Vacuum
- 1 - 13141 Micro Pre Filters (2 pkg)
- 1 - 13242 HEPA Floor Tool
- 1 - 61000 ChipBuddie
- 1 - D1836 5" Dustie
- 1 - D5160 6' Adapter Hose



**HEPA Vacuum** - Complete owners manual enclosed with vacuum.

**Assembly** - To install the legs and accessory tray, undo the clips holding the intermediate cover in place and set the cover and lid assembly aside. Turn tank upside down. Front legs are on either side of the drain port opening. These front legs do not have the small hooks on either side. The back legs do have the hooks. These hooks are for the hose to rest on when in storage.

Align legs with openings provided on bottom of the canister and slide into place. The holes will only align in proper position for front and back legs. Insert black support screw into hole and tighten screw with a Phillips screwdriver.

Turn cleaner tank right side up.

### Attach Accessory Tray

Align the three slots on the edge of the accessory tray with the three guides on the rear side of the tank and press the accessory tray toward the tank as you push the tray down. The two locking tabs will slide under the rim of the tank and catch. By pushing the tray down and toward the tank it will lock into place.

Place intermediate cover and lid assembly right side up and set on top of the tank. Attach the yellow clips from the tank onto the intermediate cover.

The Lid Assembly with the vacuum controls, motor, and filters are all preassembled at the factory for your

convenience. Maintenance and replacement of filters is described later in this manual.

### Attach hose, wands and cleaning accessories

Hose and accessories are stored on the unit. The hose will loop through the two outside holes of the accessory tray and rest on the hooks of the back legs as shown below. For convenience, additional accessories can be stored on tray when not in use.

### To Use Accessories

Push hose into tank port; twist hose to tighten or loosen connection. The wands and cleaning accessories attach to hose in the same manner.



**HEPA Floor Tool** - The HEPA Floor Tool features a beater bar as specified by EPA to meet renovation contractor certification requirements. Fit easily into HEPA Vacuum attachments.



**ChipBuddie** - Hook it to a hose with the 6' hose adaptor and scrape. Change blade by using a Phillips screwdriver. Works on both sides of the blade for collecting debris in both directions. Use for scraping paint or popcorn ceilings.



**Adapter Hose** - Attaches easily to HEPA Vacuum hose.

### Micro Pre-filter

To install the Micro Pre-filter, flip back the lid tabs and remove the lid. Put the Micro Pre-filter inside the canister and slide the opening of the cardboard mounting collar over the input port on the inside of the canister. Press firmly around all edges to ensure a snug fit and air tight seal. Spread the Micro Pre-filter out, making sure no part of it gets trapped under the edge of the lid. Reinstall the lid and flip the locking tabs back to the down position.

