






ACUDOR Products Inc.

(Address 1) 80 Little Falls Rd. Fairfield NJ 07004 USA
 (Address 2) 4216 N. Pecos Rd, Ste. 104 Las Vegas, NV 89115
 Tel : 800-722-0501 Fax : (973) 575-5160
 www.acudor.com e-mail : info@acudor.com

TSP-1

SAFETY POST

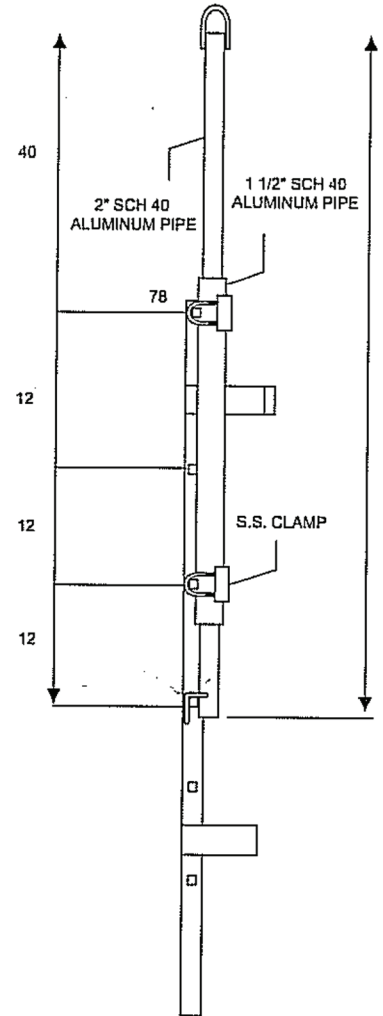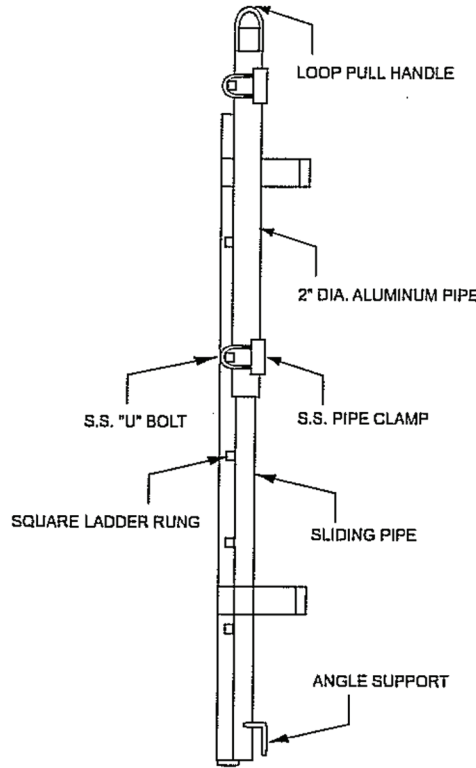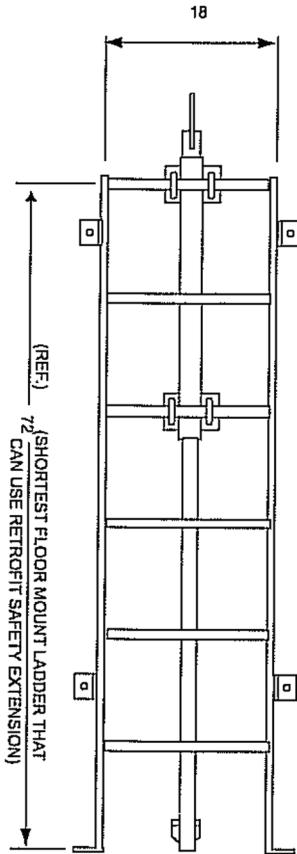

INSTALLATION INSTRUCTIONS:

1. PLACE THE LADDER ON A FLAT SURFACE WITH THE STANDOFFS FACING UP. LAY THE SLIDING PIPE ASSEMBLY IN THE CENTER OF THE SQUARE LADDER RUNGS WITH THE PULL LOOP AT THE LADDER.
2. PLACE THE (2) PIPE CLAMPS OVER THE 2" DIAMETER PIPE CENTERED ON THE FIRST AND THIRD RUNGS OF THE LADDER.
3. PLACE THE (4) "U" BOLTS OVER THE SQUARE RUNGS AND THROUGH THE HOLES IN THE PIPE CLAMPS.
4. TIGHTEN ALL THE "U" BOLT NUTS APPLYING 10-15 FT. LB. TORQUE TO EACH
5. VERIFY THAT THE EXTENSION ASSEMBLY IS ATTACHED SECURELY TO THE LADDER.

OPERATION INSTRUCTIONS:

1. TO ENGAGE THE SAFETY LADDER EXTENSION, GRASP THE LOOP HANDLE AT THE TOP OF THE SLIDING PIPE ASSEMBLY AND PULL STRAIGHT UP UNTIL THE ANGLE AT THE BOTTOM OF THE SLIDING PIPE PASSES THE SQUARE LADDER RUNG ON WHICH YOU WANT IT TO SEAT
2. ROTATE THE SLIDING PIPE 180 DEGREES AND LOWER THE ANGLE UNTIL IT SEATS SECURELY ON THE SQUARE LADDER RUNG.
3. VERIFY THAT THE EXTENSION IS SECURELY SEATED BEFORE STEPPING ONTO THE LADDER

JOB NAME:
 CUSTOMER:

APPROVED BY:
 DATE: