1

# COLUMBIA PRODUCTS SANI-LAV

Operating Manual for Hands-Free Floor Mounted Sinks Models 5241, 5241-1.0 and 5241-0.5



Columbia does not recommend use with harsh chemicals. NSF/ANSI Standard 2 - Food Equipment and NSF/ANSI 372 low-lead.

# **COLUMBIA SPECIFICATIONS**

# Parts List

(1) Floor mount sink
(1) Leg assembly set
(4) Washers and nuts for connection sink to leg assembly set
(1) Single foot pedal valve (bottom mount) with 2 nuts
(1) Swivel gooseneck spout with aerator
(1) Connecting tube for valve to spout connection
(2) Fittings, brass, 0.375" male compression and 0.375" male NPT
(1) Mixing check valve
(1) Strainer assembly with basket

# Installation Instructions

#### Step 1

- 1. Attach upper and lower leg support brackets to legs with hardware (provided).
- 2. Place wash station sink on leg assembly and secure with hardware (provided).
- 3. Establish sink location.
- 4. Mark the floor where the four holes are at the base as shown in illustration A.
- 5. Drill holes as required for mounting hardware. (Hardware not included).

### Step 2

- 1. Install spout assembly to the sink.
- 2. Install elbow fitting (provided) to the spout assembly.
- 3. Connect one side of the supply line (provided) to the spout assembly.
- 4. Install strainer assembly.

#### Step 3

- 1. Install mixing check valve and elbow fitting to valve.
- 2. Install foot pedal valves under the leg assembly cross bar if not mounted already.
- 3. Attach connecting tube from the spout to the foot pedal valve.

#### Step 4

- 1. Secure wash station to floor.
- 2. Connect waste line to strainer assembly.
- 3. Connect water supplies (hot and cold) to the mixing check valve.

#### Step 5

- 1. Remove aerator from the spout assembly and flush water line by pressing pedal for 30 seconds.
- 2. Check connections for leaks. Replace aerator onto the spout assembly.
- 3. Seal gap between bowl and leg assembly as shown in illustration B.
- 4. When mounting against wall, we recommend sealing top of backsplash to wall as shown in illustration C.

# HANDS-FREE FLOOR MOUNTED SINKS

2

## **Tools Required**

Tape Measure
Adjustable Wrench
Drill Motor and Drill Bits
Pipe Wrench
Level
Safety Glasses
Screw Drivers: 1 Phillips & 1 Standard
Pencil
Socket Wrench



Illustration A



Illustration B



Illustration C

COLUMBIA PRODUCTS

1622 Browning • Irvine, CA • 92606-4809 • Phone: 949.474.0777 • Toll Free: 800.626.2117 • Fax: 949.474.1191 • www.columbiasinks.com • email: info@columbiasinks.com

# **COLUMBIA SPECIFICATIONS**

# HANDS-FREE FLOOR MOUNTED SINKS

3

# **Trouble Shooting Guide**

Problem	Possible Cause	To Diagnose	Remedy
Water drips from spout or valve stem assembly.	Flat washer on the stem/plunger is worn.	To determine if the leak source is from the hot or cold side shut cold water source off. See if water still leaks from the spout. If leak continues then repair hot side if not repair cold side.	We recommend installing valve repair kit.
Water leaks from the front of the valve.	O-Rings on the plunger are worn out.	Visually determine whether the cold or hot side is leaking.	We recommend replacing threaded insert, plunger assembly & spring. See illustrations below.

# **Valve Repair Instructions**

Note: Valves are designed to be repaired without having to be disconnected from mount or plumbing.

- 1. Turn off water source. Do not remove valve from sink.
- 2. Remove pedal assembly using a 15/16" open end wrench or socket wrench. As shown in illustration A.
- 3. Using a 1" deep socket wrench remove insert assembly parts as show in illustration B.
- 4. Replace with new repair kit as shown on illustration C.
- 5. Reinstall pedal assembly and turn water source on.



Illustration A





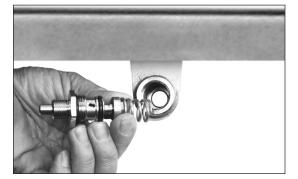


Illustration C


COLUMBIA PRODUCTS

1622 Browning • Irvine, CA • 92606-4809 • Phone: 949.474.0777 • Toll Free: 800.626.2117 • Fax: 949.474.1191 • www.columbiasinks.com • email: info@columbiasinks.com

# **COLUMBIA SPECIFICATIONS**

HANDS-FREE FLOOR MOUNTED SINKS

4

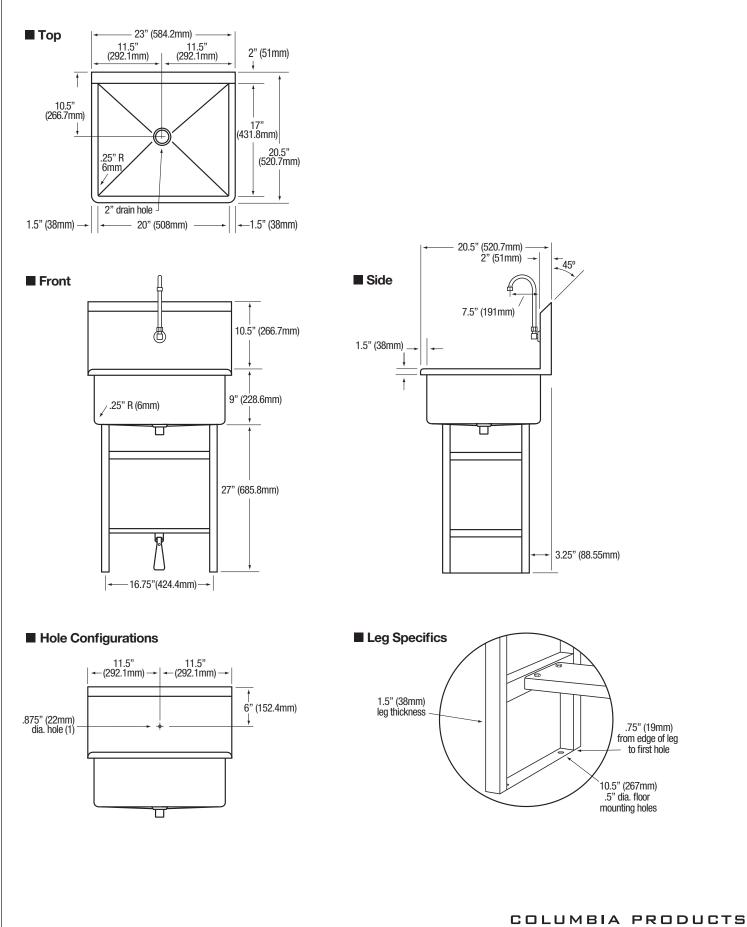

1622 Browning • Irvine, CA • 92606-4809 • Phone: 949.474.0777 • Toll Free: 800.626.2117 • Fax: 949.474.1191 • www.columbiasinks.com • email: info@columbiasinks.com