

HOSHIZAKI COUNTER SHOWCASE

MODEL HNC-120BA-L/R-S HNC-150BA-L/R-S HNC-180BA-L/R-S HNC-210BA-L/R-S

SERVICE MANUAL

IMPORTANT .

Only qualified service technicians should install, service or maintain the product. No service or maintenance should be undertaken until the technician has thoroughly read this Service Manual. Failure to service and maintain the equipment in accordance with this manual may adversely affect safety, performance, and warranty coverage.

Hoshizaki provides this manual primarily to assist qualified service technicians in the maintenance and service of the product.

Should the reader have any questions or concerns which have not been satisfactorily addressed, please call, write, or send an e-mail message to the Hoshizaki Technical Support Department for assistance.

HOSHIZAKI AMERICA, INC. 618 Highway 74 South Peachtree City, GA 30269

Attn: Hoshizaki Technical Support Department

Phone: 1-800-233-1940 Technical Support (770) 487-2331 Fax: 1-800-843-1056

- (770) 487-3360
- E-mail: techsupport@hoshizaki.com

Web Site: www.hoshizaki.com

- NOTE: To expedite assistance, all correspondence/communication MUST include the following information:
 - Model Number ______
 - Serial Number ______
 - Complete and detailed explanation of the problem.

IMPORTANT -

This manual should be read carefully before the showcase is serviced or maintenance operations are performed. Only qualified service technicians should install, service, and maintain the showcase. Read the warnings contained in this booklet carefully as they give important information regarding safety. Please retain this booklet for any further reference that may be necessary.

CO	N٦	٢EI	NT	S
----	----	-----	----	---

PAGE

1. SAFETY INSTRUCTIONS	1
2. MODEL NAME	3
3. OPERATING INSTRUCTIONS	
4. SPECIFICATIONS	5
5. DIMENSIONS	7 8 8 9 10 11 12 13
6. REFRIGERATION CIRCUIT	15
7. WIRING DIAGRAM	16
8. CONSTRUCTION	18
9. REMOVAL AND REPLACEMENT [a] SIDE COVER [b] TOP COVER [c] FRONT GLASS [d] SIDE FRAME [e] CENTER FRAME [f] HOLDER - EVAPORATOR PIPE [g] UNIT	
10. REFRIGERANT SERVICE INFORMATION	21

11.	CONSTANT PRESSURE EXPANSION VALVE AND REFRIGERANT CHARGE	22
	[a] SPECIFICATIONS	22
	[b] FUNCTION	22
	CONSTRUCTION	
	[d] REPLACEMENT	
12.	SERVICE DIAGNOSIS	24

1. SAFETY INSTRUCTIONS

The following instructions contain important safety precautions and should be strictly observed. The terms used here are defined as follows:

- **WARNING**: There is a possibility of death or serious injury for the service person and a third party or the user due to improper service operations or defects in serviced products.
- **CAUTION**: There is a possibility of injury for the service person and a third party or the user or damage to their property* due to improper service operations or defects in serviced products.
- * The term "damage to their property" here refers to extensive damage to household effects, houses and pets.


- 1. Always ask the user to keep children away from the work area. They may be injured by tools or disassembled products.
- 2. When there is no need to energize the unit during disassembly or cleaning, be sure to unplug the unit or disconnect the main power supply before servicing the unit to prevent electric shocks.
- 3. If the unit must be energized for inspection of the electric circuit, use rubber gloves to avoid contact with any live parts resulting in electric shocks.
- 4. Keep the following in mind when servicing the refrigeration circuit:
 - (1) Be sure to recover the refrigerant. Do not discharge it into the atmosphere. It will affect the environment.
 - (2) Check for any flames in the vicinity, and ensure good ventilation.
 - (3) If the refrigerant should leak in servicing, immediately put out any fire used in the vicinity.
 - (4) When unbrazing the refrigeration circuit connections, check that the circuit is completely evacuated. The refrigerant may produce a poisonous gas when coming in contact with an open flame.
 - (5) Do not braze in an enclosed room to prevent carbon monoxide poisoning.
 - (6) In case of a refrigerant leak, locate and repair the leaking part completely. Leaked refrigerant may produce a poisonous gas when coming in contact with an open flame.

- (7) Before servicing, check the surface temperature of the refrigeration circuit to prevent a burn.
- 5. Keep the following in mind when making electrical connections:
 - (1) Check for proper grounding connections, and repair if necessary to prevent electric shocks.
 - (2) Always use service parts intended for the applicable model for replacement of defective parts. Use proper tools to secure the wiring. Otherwise abnormal operation or trouble may occur and cause electric leaks or fire.
 - (3) Check for proper part installations, wiring conditions and soldered or solderless terminal connections to avoid fire, heat or electric shocks.
 - (4) Be sure to replace damaged or deteriorated power cords and lead wires to prevent fire, heat or electric shocks.
 - (5) Cut-off lead wires must be bound using closed end connectors or the like, with their closed ends up to avoid entrance of moisture that could lead to electric leaks or fire.
 - (6) After servicing, always use a megohmmeter (500V DC) to check for the insulation resistance of at least 1 megohm between the live part (attachment plug) and the dead metal part (grounding terminal).
 - (7) Do not service the electrical parts with wet hands to prevent electric shocks.
 - (8) The capacitors used for the compressor and other components may be under high voltage and should be discharged properly before servicing.

CAUTION

- 1. After servicing, follow the instructions below:
 - (1) Check for water leaks in the water supply and drain pipes to prevent damage to the vicinity including household effects.
 - (2) Always check the unit for proper operation before finishing services.
 - (3) Be sure to reassemble the parts completely. Loose assembly of such parts as control box cover may cause entrance of vermins resulting in a short circuit between terminals and possible ignition.

2. MODEL NAME

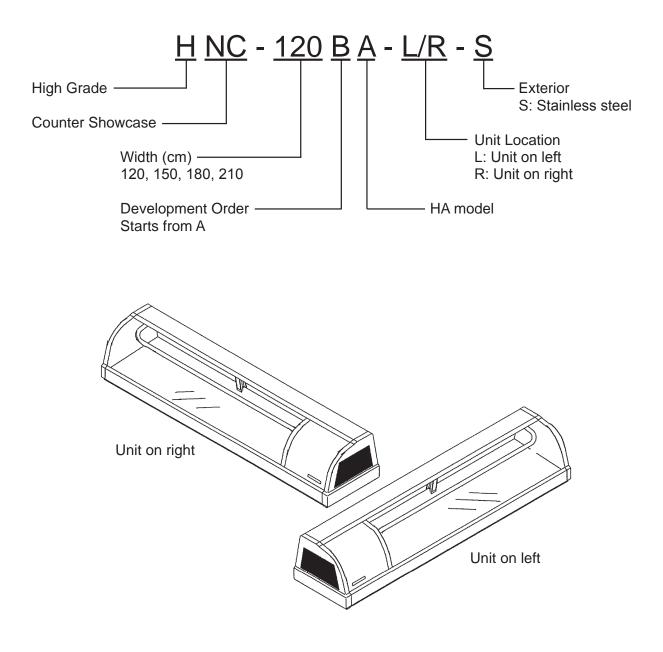

3. OPERATING INSTRUCTIONS

IMPORTANT

Hoshizaki Counter Showcase is intended for temporary food display. Constructed with much glass, this showcase gives relatively insufficient heat insulation and poor cooling performance compared with refrigerators in general. For safe and efficient operation, be sure to follow the instructions below.

- 1) Do not leave foods in the showcase after service hours, or they may dry or spoil. Foods that should not dry must be covered or wrapped up in a plastic film.
- 2) Store only pre-refrigerated items in the showcase. It takes longer for foods to cool in the showcase than in a refrigerator.
- 3) Do not leave the doors open or open them too frequently. The interior temperature may rise, resulting in food deterioration.
- Do not pack the showcase with foods. The cooling performance may reduce, resulting in food deterioration.
- 5) The showcase should not be exposed to direct sunlight or located next to ovens, grills or other high heat producing equipment. The interior temperature may rise, resulting in food deterioration.
- 6) The ambient temperature should not exceed 80°F (27°C). The cooling performance may reduce, resulting in food deterioration.
- 7) The food mount can be used on either side. The food temperature is controllable by turning over the food mount to change the distance from the interior bottom.

When food temperature is too low

Normal condition

For more intensive cooling

8) The maximum safe height for displaying food products is 3.5" (9 cm) above the interior bottom. Food products should not be placed above this height as they may not remain cold enough to avoid spoilage.

4. SPECIFICATIONS

Auxiliary code: C0 or earlier

MODEL	HNC-120BA-L-S -R-S	HNC-150BA-L-S -R-S	HNC-180BA-L- -R-	
PRODUCT CODE	L: S041 R: S042	L: S043 R: S044	L: S045 R: S046	L: S047 R: S048
AC SUPPLY VOLTAGE POWER SUPPLY CAPACITY RATED AMPERAGE STARTING AMPERAGE ELECTRIC CONSUMPTION POWER FACTOR	1 Phase 115V 0.47kVA (4.7A) 3.2A 13A 195W 56%	60Hz		
PULL DOWN TIME (10°C) SATURATION TEMPERATURE		mbient Temp. 27°C, ent Temp. 27°C, No	Load) food	asured 20 mm above the a mount(normal position) ted at the interior bottom ter
NET CAPACITY	42 L	57 L	72 L	87 L
EXTERIOR DIMENSIONS (W)	1200 mm	1500 mm	1800 mm	2100 mm
(D) (H)	345 mm 270 mm			
INTERIOR DIMENSIONS (W)	845 mm	1145 mm	1445 mm	1745 mm
(D) (H)	288 mm (bottom) 157 mm			·
EXTERIOR INTERIOR	Glass, ABS Plastic, PVC Plastic, Stainless Steel Glass, ABS Plastic, Stainless Steel Polyurethane Foam			
INSULATION DRAWING NO. (DIMENSIONS)	L : D04762 R : D04763	L : D04764 R : D04765	L : D04766 R : D04767	L : D04768 R : D04769
REFRIGERATION SYSTEM DEFROST SYSTEM	Convection Coolin None	•		
COMPRESSORHermetic 130WModel CE56Y-1ZUCONDENSERFin and Tube Type,Cooling Fan Motor x 1EVAPORATOR(UPPER) Bare Tube Type,(LOWER) Pipe on Sheet TypeREFRIGERANT CONTROLConstant Pressure Expansion Valve			Туре	
REFRIGERANT TYPE / CHARGE	R134a / 110 g	R134a / 130 g	R134a / 160 g	R134a / 180 g
ELECTRIC CIRCUIT PROTECTION COMPRESSOR PROTECTION	Ground Fault Circu Motor Protector	uit Interrupter, Gro	und Wire	
SLIDING DOOR	2 pcs.		4 pcs.	
NET WEIGHT / GROSS WEIGHT	32 kg / 39 kg	37 kg / 46 kg	42 kg / 53 kg	47 kg / 60 kg
PACKAGE	Carton	1 (0 0	4000	00000
SHIPPING DIMENSIONS (W) (D) (H)	1300 mm 430 mm 473 mm	1600 mm	1900 mm	2200 mm
CERTIFICATION	To be NSF and UL	certified		
ACCESSORIES FOOD MOUNT	3 pcs.	4 pcs.	5 pcs.	6 pcs.
VINYL HOSE JOINT	1 pc. 2 pcs.		<u></u>	1 <u>0 600</u> .
AMBIENT TEMP. VOLTAGE VARIATION	10 - 27°C Rated voltage ±10	%		

* The electrical specifications were determined at an ambient temperature of 27°C according to the electrical appliance technical standards.

* The food temperature is controllable by turning over the food mounts.


Auxiliary code: C1 or later

MODEL	HNC-120BA-L-S -R-S	HNC-150BA-L-S -R-S	HNC-180BA	A-L-S -R-S	HNC-210BA-L-S -R-S
PRODUCT CODE	L: s041 R: S042	L: s043 R: s044	L: s045 R: s046		L: s041 R: s042
AC SUPPLY VOLTAGE POWER SUPPLY CAPACITY RATED AMPERAGE STARTING AMPERAGE ELECTRIC CONSUMPTION POWER FACTOR	1 Phase 115V 0.44kVA (3.9A) 2.4A 15A 175W 63%	60Hz		<u>,</u>	11.3012
PULL DOWN TIME (10°C) SATURATION TEMPERATURE	Approx. 30 min. (Ambient Temp. 27°C, No Load) Measured 20mm above the food mount (normal position) located at the interior bottom center				
NET CAPACITY	42 L	57 L	72 L		87 L
EXTERIOR DIMENSIONS (W)	1200 mm	1500 mm	1800 m	าท	2100 mm
(D) (H)	345 mm 270 mm				
INTERIOR DIMENSIONS (W)	845 mm	1145 mm	1445 m	nm	1745 mm
(D) (H)	288 mm (bottom) 157 mm		•		
EXTERIORGlass,ABS Plastic,PVC Plastic,Stainless SteelINTERIORGlass,ABS Plastic,Stainless SteelINSULATIONPolyurethane Foam					
DRAWING NO. (DIMENSIONS)	L: D04762 R: D04763	L: D04764 R: D04765	L: D047 R: D047		L: D04768 R: D04769
REFRIGERATION SYSTEM DEFROST SYSTEM	Convection Cooling None				
COMPRESSOR CONDENSER EVAPORATOR REFRIGERANT CONTROL		Model FL1152-PD , Cooling Fan Moto e Type, (LOWER) Expansion Valve	or x 1	et Type	
REFRIGERANT TYPE / CHARGE		R134a / 115 g	R134a / 1	145 a	R134a / 165 g
ELECTRIC CIRCUIT PROTECTION COMPRESSOR PROTECTION	0	it Interrupter, Grou		5	
SLIDING DOOR	2 pcs.		4 pcs	j.	
NET WEIGHT / GROSS WEIGHT	35 kg / 42 kg	40 kg / 49 kg	45 kg / 5		50 kg / 63 kg
PACKAGE	Carton			<u> </u>	
SHIPPING DIMENSIONS (W)	1300 mm	1600 mm	1900 m	าท	2200 mm
(D) (H)	430mm 473 mm				
CERTIFICATION	To be NSF and UL	certified			
ACCESSORIES FOOD MOUNT	3 pcs.	4 pcs.	5 pcs	i	6 pcs.
VINYL HOSE JOINT					
AMBIENT TEMP.	10 - 27°C				
VOLTAGE VARIATION	Rated voltage ±109	%			
* The electrical specifications were			10 of 27°C	aaaardi	ing to the cleatrice


* The electrical specifications were determined at an ambient temperature of 27°C according to the electrical appliance technical standards.
 * The food temperature is controllable by turning over the food mounts.


5. DIMENSIONS

[a] HNC-120BA-L-S

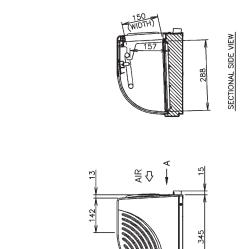

GL SZ

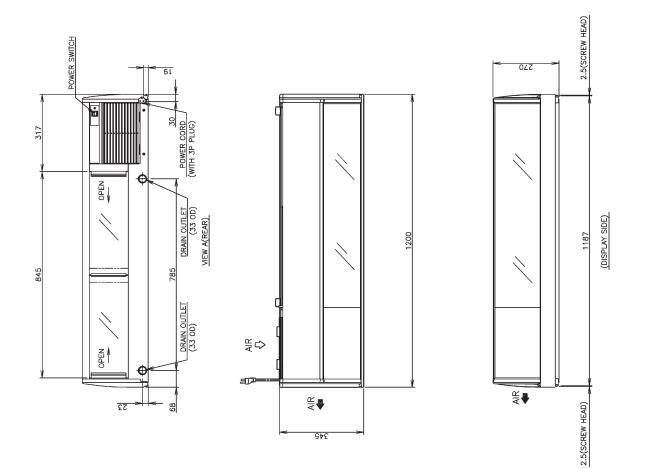

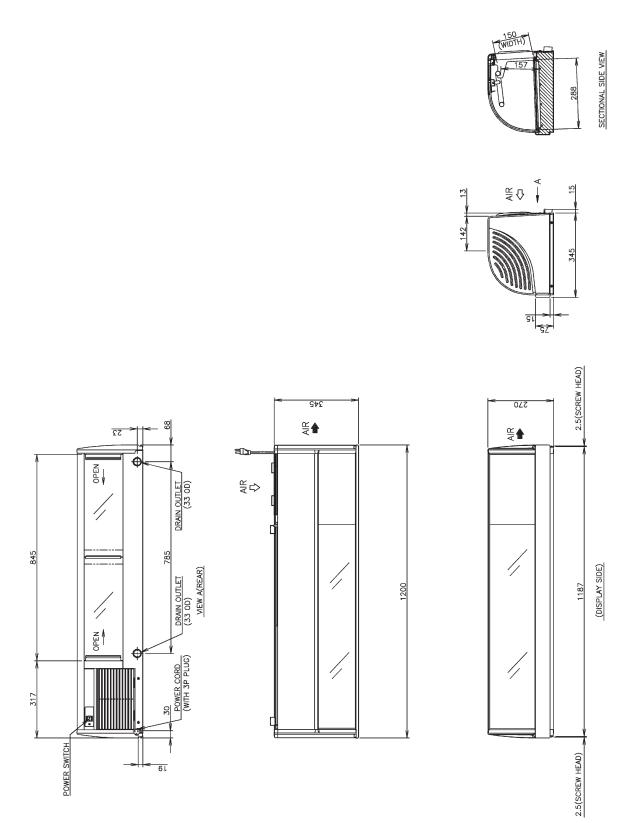



POWER SWITCH

317

558

ନ୍ମ

558

OPEN

OPEN


OPEN

OPEN

¢

53

¢

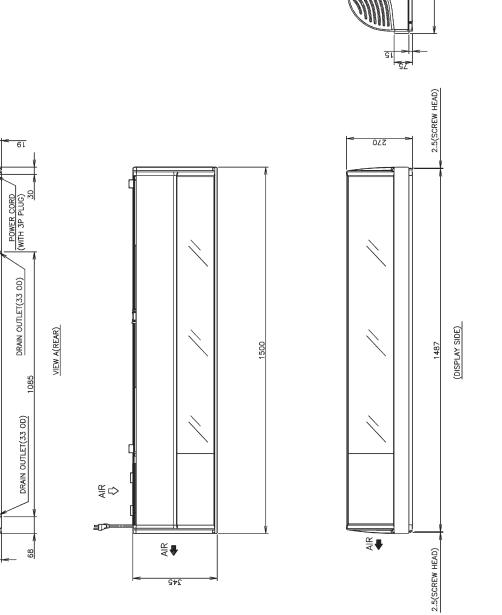

150 (WIDTH)

> RA L A A

13

142


SECTIONAL SIDE VIEW


288


15


345



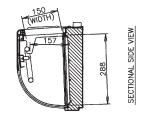


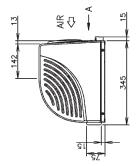


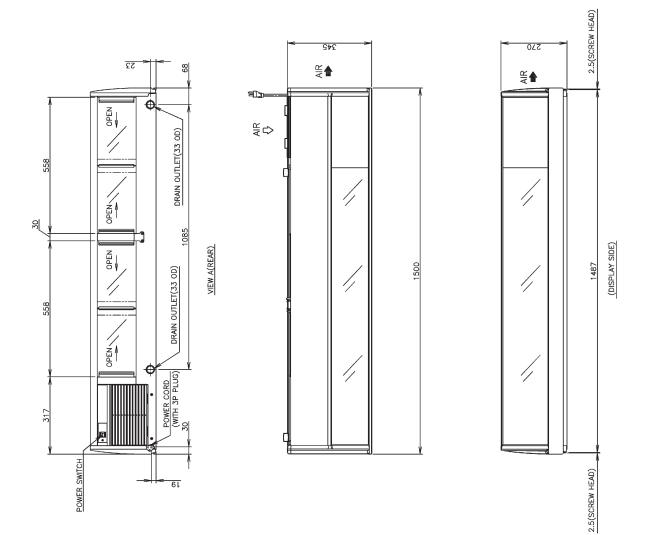


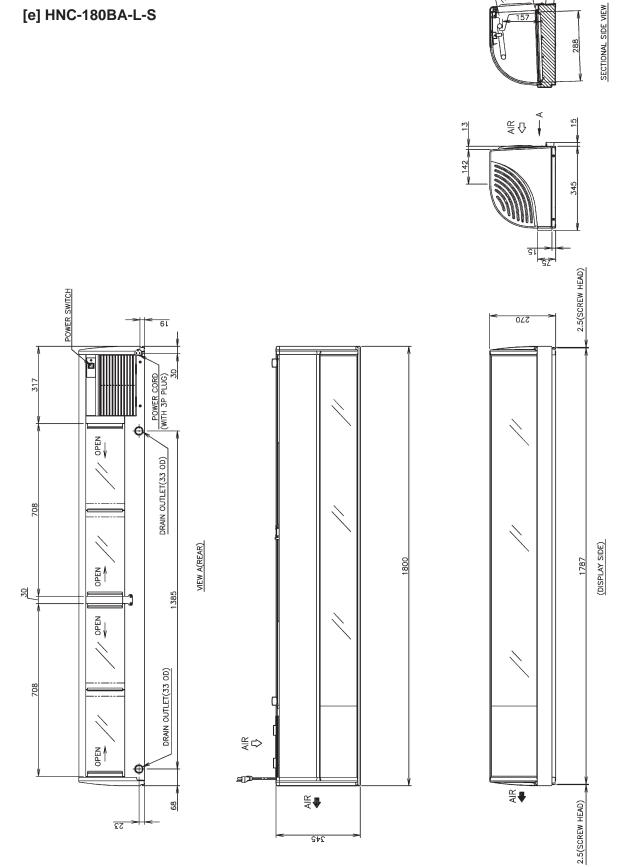



(WIDTH)



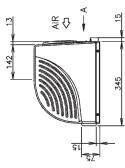

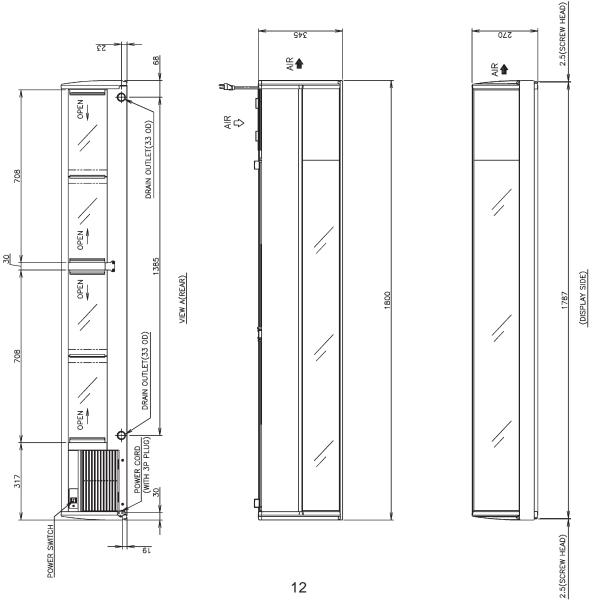



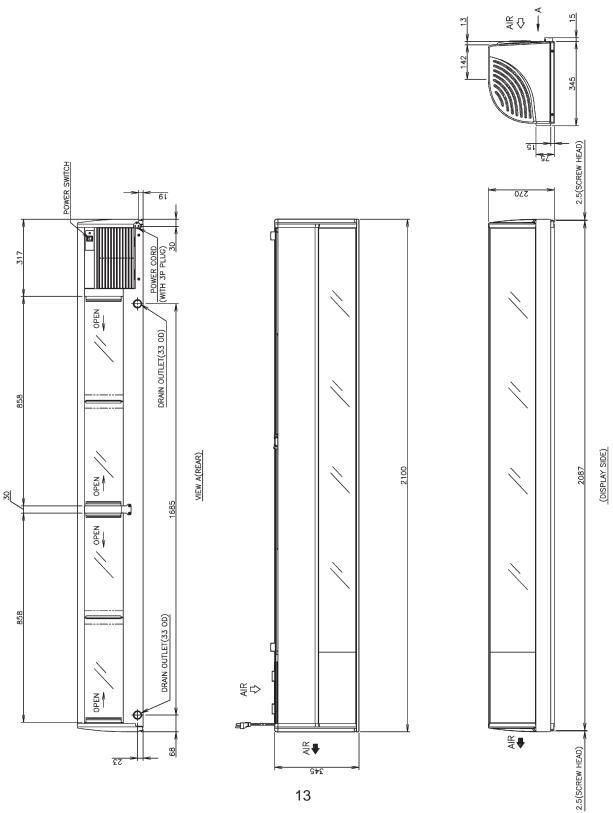

(WIDTH)

SECTIONAL SIDE VIEW

[h] HNC-210BA-R-S

23

OPEN

//

OPEN

OPEN

//

OPEN //

DRAIN OUTLET(33 OD)

POWER CORD (WITH 3P PLUG)

¢

858


<u>S</u>

858


317

POWER SWITCH

¢

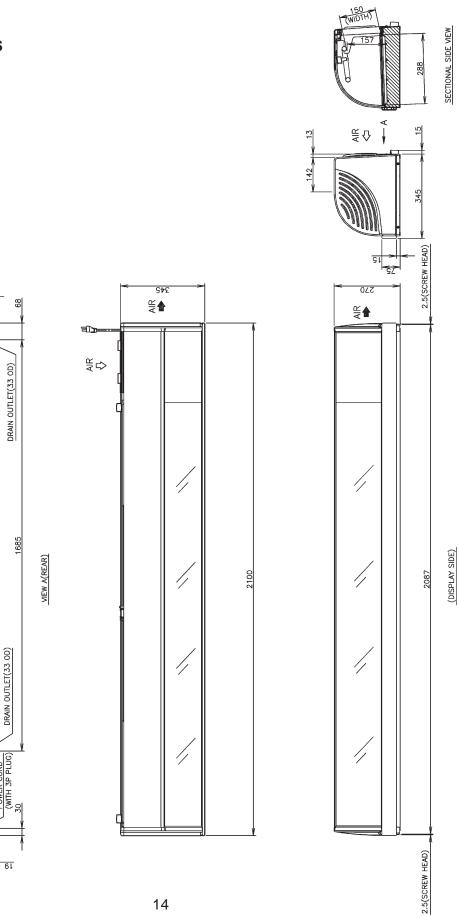


6. REFRIGERATION CIRCUIT

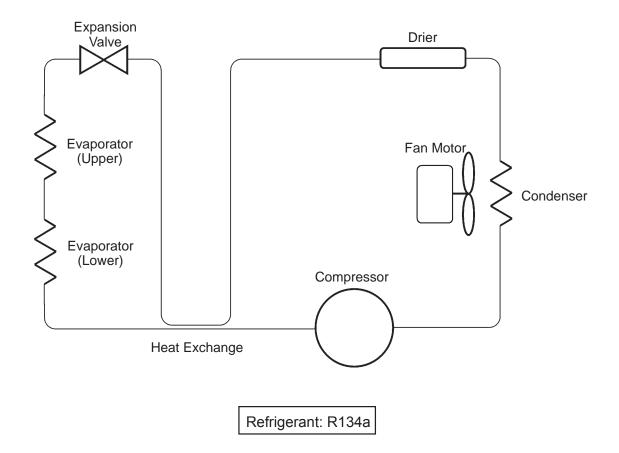


7. WIRING DIAGRAM

Auxiliary code: C0 or earlier

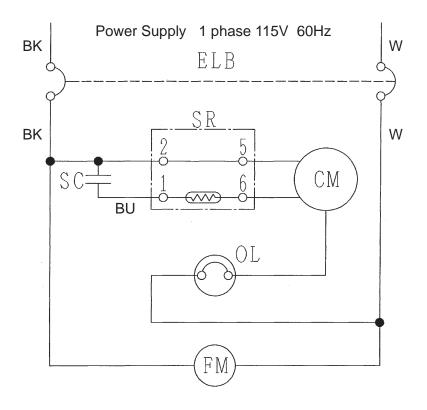


CM	Compressor
SR	Start Relay
SC	Start Capacitor
OL	Overload Relay
FM	Fan Motor
ELB	Ground Fault Circuit Interrupter

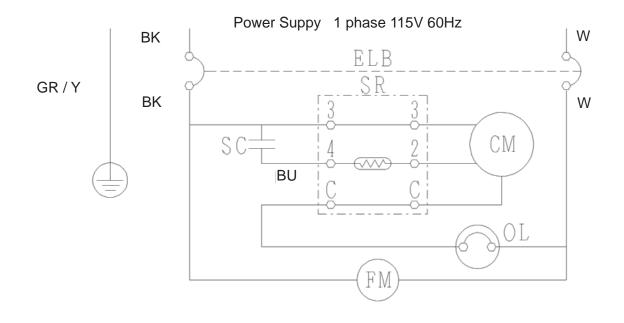

CM	Compressor
SR	Start Relay
SC	Start Capacitor
OL	Overload Relay
FM	Fan Motor
ELB	Ground Fault Circuit Interrupter

8. CONSTRUCTION

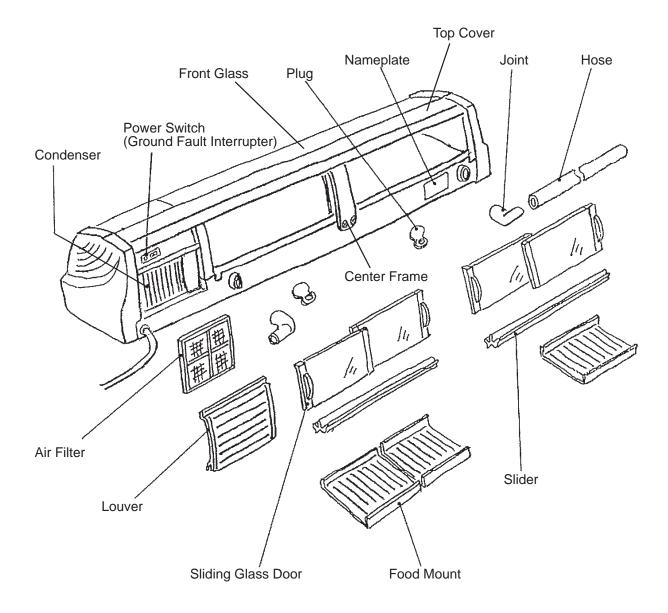

9. REMOVAL AND REPLACEMENT

CAUTION

1. Be sure to unplug the showcase before removing or replacing the parts.

2. Handle the glass parts with care.

[a] SIDE COVER

Remove the two machine screws at the bottom, lift up the side cover, and unhook the top.

[b] TOP COVER

Remove the sliding door and side cover.


- 1) The top cover is hooked and fixed on the top frame (aluminum).
- 2) Lift up and unhook the rear end of the top cover.
- When the rear part is lifted off, move it forward to unhook and remove the front part.

The top cover is tightly hooked on the top frame and will not come off easily. Remove it with care to avoid injury. To replace, reverse the removal procedure.

[c] FRONT GLASS

Remove the sliding door, side cover and top cover. Lift the front glass off the bottom fit.

The bottom and side interior of the front glass is sealed with silicone sealant (black). Be sure to re-seal it at replacement.

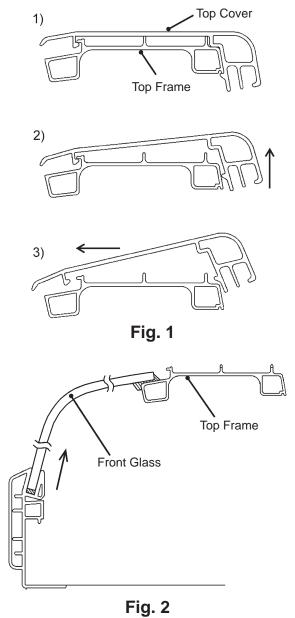


[d] SIDE FRAME

Remove the sliding door, side cover and top cover. Unbind the wiring on the side frame. Remove the two screws securing the top frame and the top of the side frame. Lift the side frame off the bottom fit.

[e] CENTER FRAME (Except HNC-120 type)

Remove the two flat head machine screws (black) securing the center frame to the rear and the two machine screws securing the center frame to the top frame. Tilt the center frame and release it from the fit.

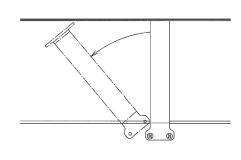



[f] HOLDER - EVAPORATOR PIPE

Remove the truss head tapping screw (4×25) from the bottom of the top frame. Take off the center frame. Be careful with the evaporator pipe. It will be released and hang down. Remove the truss head tapping screw (4×10) from the bottom of the top frame.

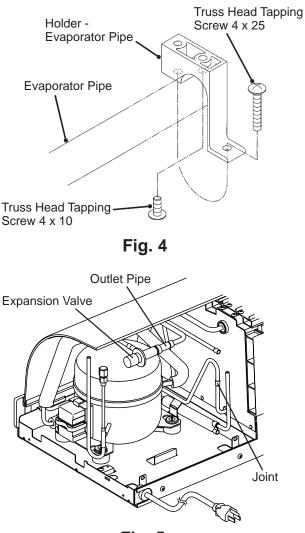


Fig. 5

[g] UNIT

Remove the sliding door, side cover, top cover, top frame and side frame. Take off the compressor terminal cover and remove the starter and motor protector. Uninsulate the expansion valve and unbraze the outlet pipe with a gas burner (see "11. CONSTANT PRESSURE EXPANSION VALVE AND REFRIGERANT CHARGE").

Unbraze the joint indicated. Remove the four machine screws securing the unit base. The whole unit can be pulled out.

10. REFRIGERANT SERVICE INFORMATION

1) Allowable Compressor Opening Time and Prevention of Lubricant Mixture [R134a]

The compressor must not be opened more than 30 minutes in replacement or service. Do not mix lubricants of different compressors even if both are charged with R134a, except when they uses the same lubricant.

2) Treatment for Refrigerant Leak [R134a]

If a refrigerant leak occurs in the low side of a showcase charged with R134a, air may be drawn in. Even if the low side pressure is higher than the atmospheric pressure in normal operation, a continuous refrigerant leak will eventually lower the low side pressure below the atmospheric pressure and will cause air suction. Air contains a large amount of moisture, and ester easily absorbs a lot of moisture. If a showcase charged with R134a has possibly drawn in air, the drier must be replaced. Be sure to use a drier designed for R134a.

3) Handling of Handy Flux [R134a]

Repair of the refrigerant circuit needs brazing. It is no problem to use the same handy flux that has been used for the current refrigerants. However, its entrance into the refrigerant circuit should be avoided as much as possible.

4) Oil for Processing of Copper Tubing [R134a]

When processing the copper tubing for service, wipe off oil, if any used, by using alcohol or the like. Do not use too much oil and let it into the tubing, or wax contained in the oil will clog the capillary tubing.

5) Service Parts for R134a

Some parts used for refrigerants other than R134a are similar to those for R134a. But never use any parts unless they are specified for R134a because their endurance against the refrigerant have not been evaluated. Also, for R134a, do not use any parts that have been used for other refrigerants. Otherwise, wax and chlorine remaining on the parts may adversely affect R134a.

6) Replacement Copper Tubing [R134a]

The copper tubes currently in use are available for R134a. But do not use them if oily inside. The residual oil in copper tubes should be as little as possible. (Low residual oil type copper tubes are used in the shipped units.)

7) Evacuation, Vacuum Pump and Refrigerant Charge [R134a]

Never allow the oil in the vacuum pump to flow backward. The vacuum level and vacuum pump may be the same as those for the current refrigerants. However, the rubber hose

and gauge manifold to be used for evacuation and refrigerant charge should be exclusively for R134a.

8) Refrigerant Leak Check

Refrigerant leaks can be detected by charging the unit with a little refrigerant, raising the pressure with nitrogen and using an electric detector. Do not use air or oxygen instead of nitrogen for this purpose, or rise in pressure as well as in temperature may cause R134a to suddenly react with oxygen and explode. Be sure to use nitrogen to prevent explosion.

11. CONSTANT PRESSURE EXPANSION VALVE AND REFRIGERANT CHARGE

[a] SPECIFICATIONS

Model:	HYP-2-5QHD-5
Manufacturer:	Fuji Koki
Part Number:	447283-04
Refrigerant:	R134a
Adjustment Range:	0.01 - 0.3MPa
Pressure Rise by Adjusting Screw:	0.039 - 0.049MPa / turn

[b] FUNCTION

When the low side pressure drops, the Constant Pressure Expansion Valve opens and lets the refrigerant flow to keep a constant pressure.

[c] CONSTRUCTION

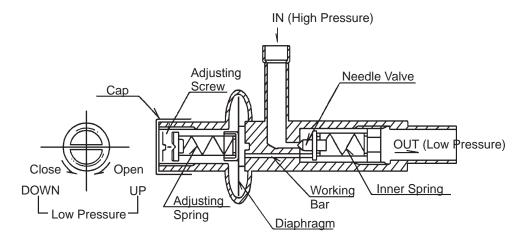


Fig. 6

[d] REPLACEMENT

A WARNING ·

Always protect the valve body by using a damp cloth to prevent the valve from overheating. Do not braze with the valve body exceeding 230°F (110°C).

IMPORTANT

Always install a new Drier every time the sealed refrigeration system is opened. Do not replace the Drier until after all other repairs or replacement have been made.

1) Recover the refrigerant (R134a) and store it in an approved container.

2) Remove the Insulation Cover and Cap from the Expansion Valve.

3) Remove the Expansion Valve by heating the Inlet and Outlet Pipes with a gas burner.

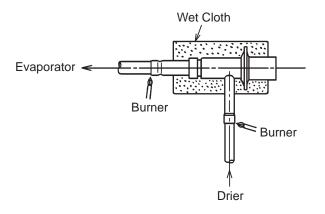


Fig. 7

12. SERVICE DIAGNOSIS

PROBLEM	POSSIBLE CAUSE	REMEDEY
[1] Showcase will not start.	1. Ground fault circuit interrupter in OFF position.	1. Turn ON.
	2. Unplugged.	2. Plug in.
	3. Supply voltage too low.	 Plug into a separate receptacle of 115V ± 10%.
	4. No power supply to the wall outlet. (Breaker or fuse blown out.)	4. Correct.
	 Electrical circuit open or bad contacts. 	5. Correct.
	6. Motor protector tripped.	6. Ventilate and reset fan motor.
[2] Poor cooling	1. Gas leaks.	1. Repair the leaks and recharge.
performance	2. Fan motor defective.	2. Replace.
	3. Condenser and/or air filter clogged.	3. Clean.
	4. Condenser air inlet blocked.	4 - 9. Instruct the user on
	5. Exposed to direct sunlight.	characteristics and proper use
	 Located next to a high heat producing equipment. 	of the showcase.
	7. Doors opened too frequently or left open.	
	8. Packed with foods, or warm or hot foods inside.	
	 9. Ambient temperature exceeding 80 °F (27°C). 	
[3] Dry foods	1. Foods have been stored from the previous day.	1 - 2. Instruct the user on characteristics and proper use
	2. Foods have been stored for a long time.	of the showcase.
[4] Frosting	 [Exterior] Relative humidity exceeding 60%. 	1 - 2. Instruct the user on characteristics and proper
	 [Interior] Doors opened too frequently or left open. 	use of the showcase. Wipe off excessive frost with a soft cloth.