



Mike is a pendant control station used for the control of industrial machines. This auxiliary control acts on the motor of the machine through a power interface, such as a contactor or a PLC. It is an industrial control station designed for heavy duty use.

### DESIGN

Mike has an innovative design, where each graphic element is linked to a specific technical function. Its dimensions and shape are the result of careful analysis of the product ergonomic aspects, aimed at achieving a graphic style that blends in with modern industrial environments, making Mike extremely handy and user friendly. Its compact dimensions and antislip grooves on the case make it easy to handle under any working conditions.

#### **FEATURES**

The innovative hanging system of Mike, with cables hidden inside the shell, enables quick, correct, ergonomic installation to prevent the danger of personal injury in everyday use. Mike has been designed to facilitate wiring and maintenance: the switches are installed in the base of the control station, together with the inlet of the cable, and are separated from the actuators, installed on the cover; this drastically reduces time and costs for installation and maintenance down time. The emergency stop mushroom pushbutton complies with ISO 13850 regulation and is equipped with positive opening NC switches.

#### OPTIONS

Mike is available in configurations with 4 to 15 actuators, with 1NO or 1NC switches and LED voltage 24/48 V AC/DC o 110/230 V AC.

The range includes actuators in various colours: one or two speed buttons, selector switches and key-operated switches in various actuation configurations, pilot lights, pulsed or latched mushroom pushbuttons with rotation or key-operated release. One-speed pushbuttons and selector switches are available in illuminated version in a range of colours.

Mike comes with standard sheet of labels (symbols and lettering) to be applied to the upper cover near the actuators, according to customers' needs. Upon request Mike can be supplied with pushbuttons bearing two-colour moulded symbols, making the symbols permanent.

A specific protection is available for the actuators installed on the bottom of the control station.

#### MATERIALS

The 22.5 mm rubber pushbuttons ensure protection against dust penetration, to prevent them from becoming stuck when the control station is used in particularly harsh conditions.

All the materials and components used are weather resistant and guarantee protection of the unit against the penetration of water and dust.



INDUSTRIAL LIFTING



CONSTRUCTION



INDUSTRIAL AUTOMATION



STAGE TECHNOLOGY

### STANDARDS - MARKINGS - HOMOLOGATIONS

Conformity to Community Directives:
 2006/95/CE: Low Voltage Directive
 2006/42/CE: Machinery Directive

- Conformity to Standards:

EN 60204-1 Safety of machinery - Electrical equipment of machines

EN 60947-1 Low-voltage switchgear and controlgear

EN 60947-5-1 Low-voltage switchgear and controlgear - Control circuit devices and switching elements - Electromechanical control circuit devices

EN 60947-5-5 Low-voltage switchgear and controlgear - Control circuit devices and switching elements - Electrical emergency stop device with mechanical latching function

EN 60529 Degrees of protection provided by enclosures
ISO13850 Safety of machinery - Emergency stop - Principles for design

- Regulations for the prevention of accidents BGV C 1 (only for Germany)
- Markings and homologations: (€

#### **GENERAL TECHNICAL SPECIFICATIONS**

- Storage ambient temperature: -40°C/+80°C

- Operational ambient temperature: -40°C/+80°C

- Protection degree: IP 66 / IP 67 / IP 69K

- Insulation category: Class II

- Cable entry: rubber cable sleeve (Ø 8÷26 mm)

- Operating positions: any position

- Mechanical life

1 speed pushbutton: 8x10<sup>6</sup> operations 2 speed pushbutton: 8x10<sup>6</sup> operations illuminated pushbutton: 8x10<sup>6</sup> operations

- HALT test (data available on request)

- Markings and homologations: C € • ® III SIL 1

## TECHNICAL SPECIFICATIONS OF THE MICROSWITCHES

- Utilisation category: AC 15
- Rated operational current: 3 A
- Rated operational voltage: 250 V
- Rated thermal current: 10 A

- Rated insulation voltage: 300 Vac - Mechanical life: 8x10<sup>6</sup> operations

- Terminal referencing: according to EN 50013

- Connections: screw-type terminals

- Wires: 2x0,5mm2 - 2x1,5 mm2 - 1x2,5 mm2

- Tightening torque: 0.5 Nm

- Markings and homologations: ( € ( the contraction of the contraction)

The slow action switch PRSL1800PI has 1 NO contact, double break. The slow action switch PRSL1801PI has 1 NC, double break.

All NC contacts are of the positive opening operation type .

The switches have the following reference for internal wiring.



PRSL1800PI



PRSL1801P

# TECHNICAL SPECIFICATIONS OF THE LEDS

- Electrical ratings PRSL1821PI: 110-240 Vac, 1.15-2.50 mA

- Electrical ratings PRSL1820PI: 24-48 Vac/dc, 1.30-2.70 mA

- Markings and homologations: (€ 📵 us



## POSSIBLE ASSEMBLIES AND OVERALL DIMENSIONS (MM)

### Standard

	60
0000000	A
72,7	59,5

N° of	Length (mm)
buttons	Α
4/5	201
6/7	261
8/9	321
12 / 13	441
14 / 15	501

With small lower protection





With large lower protection




The data and the products illustrated in this brochure may be modified without notice. Under no circumstances can their description have a contractual value



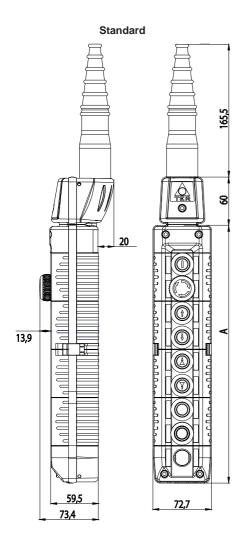


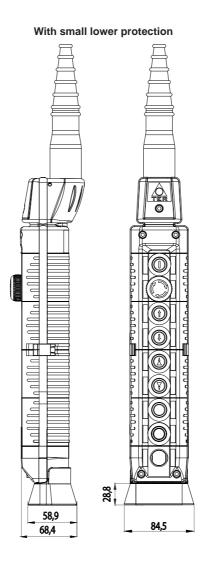

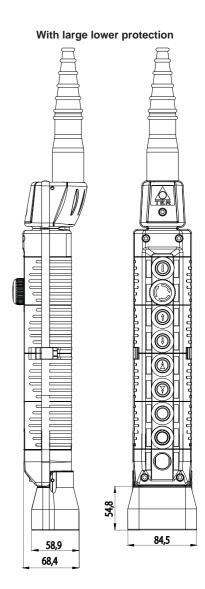



Length (mm)
Α
201
261
321
441
501

# ACTUATORS

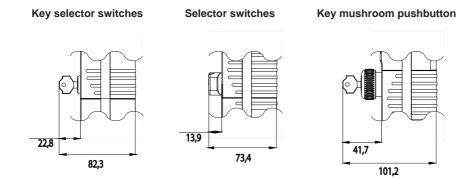

Dimensions of all mushroom pushbuttons are in released position

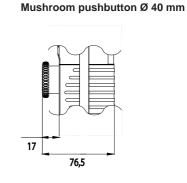

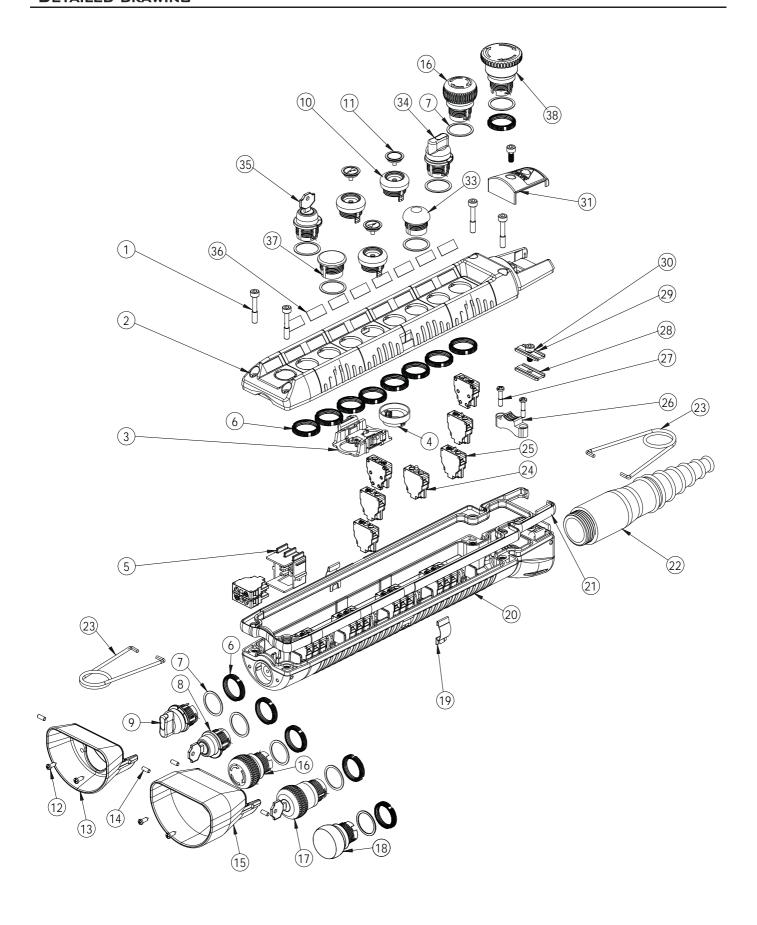

The data and the products illustrated in this brochure may be modified without notice. Under no circumstances can their description have a contractual value.

Registered Office - via San Vigilio 2 - 23887 Olgiate Molgora (LC) - Italy Tel. +39 0399911011 - Fax +39 0399910445 - E-mail: info@terworld.com



Via Garibaldi 29/31 - 23885 Calco (LC) - Italy

# SWITCHES

REF	DRAWING	DESCRIPTION	SCHEME	CODE
0.4		LED element 24/48 V AC/DC	-	PRSL1820PI
24		LED element 110/230 V AC	-	PRSL1821PI
25 —	05	1NO single switch	E	PRSL1800PI
	1NC single switch	E	PRSL1801PI	

### ACTUATORS

REF	DRAWING	DESCRIPTION	Code
		2 speed pushbutton	PRSL1810PI
10+6		1 speed pushbutton	PRSL1811PI
		1 speed illuminated pushbutton	PRSL1815PI
11	<b>©</b>	Disk for button	PRTAxxxxxx see Disk table
37+7+6		Blanking plug	PRSL1845PI

### MUSHROOM PUSHBUTTONS

REF	DRAWING	DESCRIPTION	HEAD COLOR	Code
16+7+6		Latched mushroom pushbutton for emergency stop	Red	PRSL1880PI
17+7+6	9	Key mushroom pushbutton	Red	PRSL1890PI
			Red	PRSL1885ROC
			Blue	PRSL1885BLC
18+7+6		Impulse mushroom pushbutton	Yellow	PRSL1885GIC
18+7+6	3	with black base	Green	PRSL1885VEC
	0		Orange	PRSL1885ARC
			Black	PRSL1885NEC
38+7+6	900	Latched mushroom pushbutton for emergency stop Ø 40 mm	Red	PRSL1881PI

# PILOT LIGHTS

REF	DRAWING	Color	CODE
		White	PRSL1844PI
		Green	PRSL1841PI
33+7+6		Blue	PRSL1846PI
33+1+0	<b>6</b>	Red	PRSL1840PI
		Yellow	PRSL1842PI
		Orange	PRSL1843PI

D	D-11/11/15	Basinis	Colo	ıR	- Code	
REF	DRAWING	Positions	TRANSPARENT	FULL	CODE	
				White		PRSL1855BI
			Green		PRSL1855VE	
		0 / 1	Blue		PRSL1855BL	
		Spring return	Red		PRSL1855RO	
			Yellow		PRSL1855GI	
	_		Orange		PRSL1855AR	
			White		PRSL1856BI	
			Green		PRSL1856VE	
		0 / 1	Blue		PRSL1856BL	
		Maintained	Red		PRSL1856RO	
	A		Yellow		PRSL1856GI	
9+7+6			Orange		PRSL1856AR	
and 34+7+6				White	PRSL1855BIC	
				Green	PRSL1855VEC	
		0 / 1		Blue	PRSL1855BLC	
		Spring return		Red	PRSL1855ROC	
				Yellow	PRSL1855GIC	
				Orange	PRSL1855ARC	
	-	-		White	PRSL1856BIC	
				Green	PRSL1856VEC	
		0 / 1 Maintained		Blue	PRSL1856BLC	
			-	Red	PRSL1856ROC	
			-	Yellow	PRSL1856GIC	
			-	Orange	PRSL1856ARC	
			White	<u> </u>	PRSL1857BI	
			Green		PRSL1857VE	
		1/0/2	Blue		PRSL1857BL	
		Spring return	Red		PRSL1857RO	
			Yellow		PRSL1857GI	
			Orange		PRSL1857AR	
	-		White		PRSL1858BI	
			Green		PRSL1858VE	
		4.10.10	Blue		PRSL1858BL	
		1 / 0 / 2 Maintained	Red		PRSL1858RO	
			Yellow		PRSL1858GI	
	Ø.		Orange		PRSL1858AR	
34+7+6			- Crange	White	PRSL1857BIC	
				Green	PRSL1857VEC	
		4.10.10		Blue	PRSL1857BLC	
		1 / 0 / 2 Spring return		Red	PRSL1857ROC	
		-19		Yellow	PRSL1857GIC	
					PRSL1857GIC PRSL1857ARC	
	-			Orange		
				White	PRSL1858BIC	
				Green	PRSL1858VEC	
		1/0/2		Blue	PRSL1858BLC	
		Maintained		Red	PRSL1858ROC	
				Yellow	PRSL1858GIC	
				Orange	PRSL1858ARC	

The data and the products illustrated in this brochure may be modified without notice. Under no circumstances can their description have a contractual value.



REF	DRAWING	Positions	Colo	IR	- Code
REF	DRAWING		TRANSPARENT	FULL	
			White		PRSL1863BI
			Green		PRSL1863VE
		1 / 1+2 / 2	Blue		PRSL1863BL
		Spring return	Red		PRSL1863RO
			Yellow		PRSL1863GI
			Orange		PRSL1863AR
			White		PRSL1864BI
			Green		PRSL1864VE
		1 / 1+2 / 2	Blue		PRSL1864BL
		Maintained	Red		PRSL1864RO
			Yellow		PRSL1864GI
			Orange		PRSL1864AR
				White	PRSL1863BIC
				Green	PRSL1863VEC
		1 / 1+2 / 2		Blue	PRSL1863BLC
		Spring return		Red	PRSL1863ROC
				Yellow	PRSL1863GIC
				Orange	PRSL1863ARC
	•			White	PRSL1864BIC
			Green	PRSL1864VEC	
		1 / 1+2 / 2 Maintained		Blue	PRSL1864BLC
				Red	PRSL1864ROC
				Yellow	PRSL1864GIC
				Orange	PRSL1864ARC
4+7+6			White		PRSL1859BI
	Ŏ		Green		PRSL1859VE
		0 / 1 / 1+2	Blue		PRSL1859BL
		Spring return	Red		PRSL1859RO
			Yellow		PRSL1859GI
			Orange		PRSL1859AR
			White		PRSL1860BI
			Green		PRSL1860VE
		0 / 1 / 1+2	Blue		PRSL1860BL
		Maintained	Red		PRSL1860RO
			Yellow		PRSL1860GI
			Orange		PRSL1860AR
			<del>-</del>	White	PRSL1859BIC
				Green	PRSL1859VEC
		0/1/1+2		Blue	PRSL1859BLC
		Spring return		Red	PRSL1859ROC
		-		Yellow	PRSL1859GIC
				Orange	PRSL1859ARC
				White	PRSL1860BIC
				Green	PRSL1860VEC
					-
		0 / 1 / 1+2 Maintained		Blue	PRSL1860BLC
		airitairioa		Red	PRSL1860ROC
				Yellow	PRSL1860GIC
				Orange	PRSL1860ARC

			Colo	IR	
REF	DRAWING	Positions	TRANSPARENT	FULL	CODE
			White		PRSL1861BI
			Green		PRSL1861VE
		1/2	Blue		PRSL1861BL
		Spring return	Red		PRSL1861RO
			Yellow		PRSL1861GI
			Orange		PRSL1861AR
			White		PRSL1862BI
			Green		PRSL1862VE
		1 / 2 Maintained	Blue		PRSL1862BL
	S.		Red		PRSL1862RO
			Yellow		PRSL1862GI
34+7+6			Orange		PRSL1862AR
34+7+0		1/2 Spring return		White	PRSL1861BIC
	0			Green	PRSL1861VEC
				Blue	PRSL1861BLC
				Red	PRSL1861ROC
				Yellow	PRSL1861GIC
				Orange	PRSL1861ARC
				White	PRSL1862BIC
				Green	PRSL1862VEC
		1/2		Blue	PRSL1862BLC
		Maintained		Red	PRSL1862ROC
				Yellow	PRSL1862GIC
				Orange	PRSL1862ARC

### KEY SELECTOR SWITCHES

REF	DRAWING	Positions	SPRING RETURN	MAINTAINED POSITIONS	PULL-OUT POSITION	Code	
8+7+6 and	8	0/1	Х		0	PRSL1867PI	
34+7+6				Х	0	PRSL1868PI	
				Х		0	PRSL1869PI
		1/0/2		Х	0	PRSL1870PI	
	Ø	0/4/4:0	Х		0	PRSL1871PI	
34+7+6		0 / 1 / 1+2		Х	0	PRSL1872PI	
34+7+6	Š	4 / 0 ahanan ayan	Х		1	PRSL1873PI	
		1 / 2 change over		Х	1	PRSL1874PI	
		1/1+2/2	Х		1+2	PRSL1875PI	
		1 / 1+	1 / 1+2 / 2		Х	1+2	PRSL1876PI

The data and the products illustrated in this brochure may be modified without notice. Under no circumstances can their description have a contractual value.



REF	DRAWING	DESCRIPTION	Code
3		Mechanical interlock	PRSL1850PI
4		Button-switch spacer	PRSL8512PI
5		1-2-3 switch holder	PRSL8750PI
13+12+14		Small protection	PRSL1830PI
15+12+14		Large protection	PRSL1831PI
19	Ð	Closing clip	PRTR1035PE
22		Cable sleeve	PRSL0145PE
23		Hook	PRGA0012PE
28+29+30	*	Complete wire clamp	PRSL1896PI
04.00	9	Cable cover with logo TER	PRSL1832PI
31+32		Neutral cable cover	PRSL1836PI
		Label sheet - symbols	PRET0215PE
		Label sheet - German	PRET0220DE
20		Label sheet - English	PRET0220EN
36	<u> </u>	Label sheet - Spanish	PRET0220ES
		Label sheet - French	PRET0220FR
		Label sheet - Italian	PRET0220IT



















































BLACK GREEN PRTA097MPI PRTA098MPI PRTA099MPI PRTA096MPI PRTA095MPI PRTA094MPI PRTA093MPI

RED





PRTA033MPI

TRANSPARENT DISKS













Standard control stations are supplied with symbol label sheets.

4 ACTUATORS

A	RESET ALARM BUTTON	EMERGENCY STOP MUSHROOM PUSHBUTTON	VER			
	N.2 PRSL1800PI 1NO+1NO	N.1 PRSL1801PI 1NC	N.1 PRSL1800PI 1NO	N.2 PRSL1800PI 1NO+1NO	י כם, ורס צ	Cade
	E	E	E	E\(\frac{1}{14}\) E\(\frac{1}{14}\)	UPPER	
8	1	1	2		Yellow	F70AY12020000001
	1	1	2		Black	F70AB12020000001
	1	1		2	Yellow	F70AY12000200001
	1	1		2	Black	F70AB12000200001

### 6 ACTUATORS

	RESET ALARM BUTTON	S MECHANICALLY BETWEEN PAIRS	/ER			
A	N.2 PRSL1800PI 1NO+1NO	N.1 PRSL1801PI 1NC	N.1 PRSL1800PI 1NO	N.2 PRSL1800PI 1NO+1NO		Code
	E\( \int_{14}^{13} \) E\( \int_{14}^{13} \)	£	E\( \bigcup_{14}^{13} \)	E\(\frac{1}{14}\) E\(\frac{1}{14}\)	UPPER	GODE
8	1	1	4		Yellow	F70EY12040000002
8	1	1	4		Black	F70EB12040000001
	1	1		4	Yellow	F70EY12000400002
	1	1		4	Black	F70EB12000400001

### 8 ACTUATORS

10 John 10 Joh	RESET ALARM BUTTON						
	N.2 PRSL1800PI 1NO+1NO	N.1 PRSL1801PI 1NC	N.1 PRSL1800PI 1NO	N.2 PRSL1800PI 1NO+1NO	י כם, ורסד	Code	
	E\(\frac{1}{14}\) E\(\frac{1}{14}\)	E	E13	E\(\frac{1}{14}\) E\(\frac{1}{14}\)	UPPER		
8	1	1	6		Yellow	F70BY12060000001	
988	1	1	6		Black	F70BB12060000001	
	1	1		6	Yellow	F70BY12000600001	
	1	1		6	Black	F70BB12000600001	

# 12 ACTUATORS

A	RESET ALARM BUTTON	EMERGENCY STOP MUSHROOM PUSHBUTTON	BLACK BUTTONS INTERLOCKED B	Y R R		
A	N.2 PRSL1800PI 1NO+1NO	N.1 PRSL1801PI 1NC	N.1 PRSL1800PI 1NO	N.2 PRSL1800PI 1NO+1NO	r co,	Cade
00000	E\(\frac{13}{14}\) E\(\frac{1}{14}\)	E	E\( \bigc\)	E\(\frac{1}{14}\) E\(\frac{1}{14}\)	UPPER	
8	1	1	10		Yellow	F70CY12100000001
2	1	1	10		Black	F70CB12100000001
8	1	1		10	Yellow	F70CY12001000001
	1	1		10	Black	F70CB12001000001

## 14 ACTUATORS

A	RESET ALARM BUTTON	EMERGENCY STOP MUSHROOM PUSHBUTTON	BLACK BUTTONS	ν Ε		
A	N.2 PRSL1800PI 1NO+1NO	N.1 PRSL1801PI 1NC	N.1 PRSL1800PI 1NO	N.2 PRSL1800PI 1NO+1NO	2 CO Y	Code
00000	E\( \bigc\) 13	E	E\( \bigc\)	E\(\frac{13}{14}\) E\(\frac{13}{14}\)	UPPER	
2	1	1	12		Yellow	F70DY12120000001
8	1	1	12		Black	F70DB12120000001
8	1	1		12	Yellow	F70DY12001200001
	1	1		12	Black	F70DB12001200001

The data and the products illustrated in this brochure may be modified without notice. Under no circumstances can their description have a contractual value.



03072014-10

	Instructions	1	2	3			
	(See next page for list of components and legends)	ts t	Pu	s, soms	6 Hook		Switches
	Fill in the chart to the left according to the number of control elements required. Control stations are available with 5, 7, 9,	Control	Button disks and colors	Color of selecors, mushrooms, pilot lights	7 Sleeve		and LEDs
	13 or 15 control elements. It is not possible ti assemble the last button on the cover if a control element is assembled on the bottom of the control station, and vice versa. If necessary, you				4		
_	can possibly use a longer control station enclosure.				8 MI		
1	Control elements: enter the number corresponding to the control element required (1 to 39) according to the legend.						
	Button disks and colors: for pushbuttons (1 to 3) enter:						
4	the number corresponding to the disk required ([50] to [85]) according to the legend. Both full color disks and transparent disks (for illuminated buttons) are available. Eg. [57]				MI		
3	Color of selectors, mushrooms, pilot lights: for toggle selector switches (15 to 24), impulse mushroom pushbuttons (7) and pilot lights (11) enter the code corresponding to the color required according to the legend. Eg. RP				MI		
4	If you choose <b>disks with arrows</b> (legend 54 to 72), enter the direction of the arrow in the circle. Eg.						
5	Switches and LEDs: enter the number corresponding to the switch or LED required (90 to 93) according to the legend. It is				MI		
	possible to enter up to 3 switches per position. Es. 91  2 speed pushbuttons can activate two switches on the first						
	speed and one switch on the second speed.			<u> </u>			
	Selector switches can activate only two switches and possibly a LED.						
	ATTENTION: LEDs can be placed only in the central position						
	and they are used for illuminated buttons and selector switches				MI		
	(See Control Elements legend for switch activation)	l					
6	Hook: tick the box at the top or at the bottom if the hook is required. Eg. HX6k						
7	Cable sleeve: tick the box if the cable sleeve is required.				MI		
	Eg. Sl <b>¥</b> ve						
8	Mechanical interlock: tick the boxes where mechanical interlock between two control elements is required. Eg.				MI		
9	<b>Protection</b> : when a control element is mounted on the bottom of the control station, it is possible to use a protection; in this case tick the box corresponding to the protection required.				IVII		
	Eg. Si <b>X</b> all						
10	Cover: tick the box corresponding to the cover color required (the base of the enclosure is always black).				MI		
11	SIL 1 certified: tick the box if you require SIL 1 certified units for safety functions.						
12	Adhesive labels: stickers with letterings or symbols may be placed on the left and on the right of any control element. If label sheets are required, tick the corresponding box.				MI		
	Control element on the bottom of the control station*						
	Control element 1				MI		
	Color 3						
	Switches 5				MI		
	Small Large None Protection 9						
	*ATTENTION: only mushroom pushbuttons with ref. 4, 5, 6 with						
	one or two switches, or <b>non illuminated</b> selector switches ref. 15,			<u> </u>	- MI		
	16, 30, 31 with only one switch can be assembled on the bottom of the control station. LEDs can not be mounted in this position.						
	Cover 10   SIL 1 certified 11						
	Yellow Black				MI		
	Adhesive labels (12)						
	Symbols English French					H	
	Italian German Spanish	l			6 Hook		
	Comman Opanish						

1 MIKE - Legend - Control	elemen	ts					
* SWITCH ACTIVATION It is possible to mount up to 3 switches for on the top, in the middle or on the botton Eg.: 2 speed pushbutton: the first speed	n. If the sel	ector switches are mount	ted with the lever facing do	wnwards,	, then the the	activation of the s	witches is reversed.
<b>Pushbuttons</b> It is possible to mount up to three switches for each button. LEDs can be mounted only in the middle.	It is poss In the n		witches for each selector. mount only the LED for	It is p			switches for each central position.
SWITCH ACTIVATION*			SWITCH ACTIVATION*				SWITCH ACTIVATION*
1 1 speed speed 1 speed 1 speed 1 speed 1		/1 pring return	pos 1		0 / 1 spring return key out in po		pos 1 NA pos 1
2 speed speed 1 speed 1 speed 1 speed 2		/ 1 naintained positions	pos 1	31	0 / 1 maintained key out in pe		pos 1 NA pos 1
1 speed speed 1 LED speed 1 speed 1		/0/2 pring return	pos 1	32	1 / 0 / 2 spring return key out in po		pos 1 NA pos 2
Mushroom pushbuttons	40	/ 0 / 2 aintained positions	pos 1	33	1 / 0 / 2 maintained   key out in po		pos 1 NA pos 2
All mushroom pushbuttons activate all the switches at the same time.		/ 1+2 / 2 oring return	pos 1 and 1+2 pos 2 and 1+2	34	0 / 1 / 1+2 spring return key out in po		pos 1+2 NA pos 1 and 1+2
pushbutton for emergency stop		/ 1+2 / 2 aintained positions	pos 1 and 1+2 pos 2 and 1+2	35	0 / 1 / 1+2 maintained key out in po		pos 1+2 NA pos 1 and 1+2
5 Latched mushroom pushbutton for emergency stop Ø 40 mm		/ 1 / 1+2 pring return	pos 1+2 pos 1 and 1+2	36	1 / 2 change spring return key out in p	n	pos 1 NA pos 2
6 Key mushroom pushbutton		/ 1 / 1+2 naintained positions	pos 1+2 pos 1 and 1+2	37	1 / 2 change maintained key out in pe	positions	pos 1 NA pos 2
7 Impulse mushroom pushbutton		/ 2 pring return	pos 1 pos 2	38	1 / 1+2 / 2 spring return key out in p		pos 1 and 1+2  NA  pos 2 and 1+2
with black base		/ 2 naintained positions	pos 1 pos 2	39	1/1+2/2 maintained p key out in pos		pos 1 and 1+2 NA pos 2 and 1+2
12 Blanking plug							
2 Legend - Button disks at	nd color	'S					
Full color and symbol disks for p	oushbutt	ons (ref. 1 and 2)	RED WHITE	В		nsparent disk minated butto	
50 54 1 58	62	66 70		78 OR	ANGE 80		HITE GREEN
51 55 59 YELLOW	63	67 67	75	79	81		LUE ORANGE
52 60 11	64	68 0 72				03	55
53 P 57  61	65 (	69 GREEN 73	YELLOW RED				
3 Legend - Color of select	ors, mu	shrooms, pilot lial	nts			5 Legen	d -
Non-illuminated toggle selector			mushroom pushbutt	on			nes and LEDs
(ref. 15 to 24)  RP Red BP Blue			k base (ref. 7)		Orange	90 PRSL18 1NO swi	
GP Yellow VP Green			low V Green		Black	91 PRSL18 1NC swi	
Illuminated toggle selector sw (ref. 15 to 24)			s (ref. 11)		0.50.5.5.	92 PRSL182 24/48 V /	20PI AC/DC LED
RI Red BI Blue GI Yellow VI Green		range R Re Vhite G Yel	d B Blue low V Green		Orange White	93 PRSL183	21PI

The data and the products illustrated in this brochure may be modified without notice. Under no circumstances can their description have a contractual value.



110/230 V AC LED

93

#### **USE AND MAINTENANCE INSTRUCTIONS**

Mike Pendant Control Station is an electromechanical device for low voltage control circuits (EN 60947-1, EN 60947-5-1) to be used as electrical equipment on machines (EN 60204-1) in compliance with the fundamental requirements of the Low Voltage Directive 2006/95/CE and of the Machine Directive 2006/42/CE.

The pendant station is designed for industrial use and also for use under particularly severe climatic conditions (operational temperature from –40°C to +80°C, suitable for use in tropical environment).

The equipment is not suitable for use in environments with potentially explosive atmosphere, corrosive agents or a high percentage of sodium chloride (saline fog). Oils, acids or solvents may damage the equipment; avoid using them for cleaning.

Do not connect more than one phase to each switch. Do not oil or grease the control elements or the switches.

The installation of the pendant station shall be carried out by expert and trained personnel. Wiring shall be properly done according to the current instructions.

Prior to the installation and the maintenance of the pendant station, the main power of the machinery shall be turned off.

#### Steps for the proper installation of the pendant station

- 1. Open the pendant station
- 2. Screw the variable section rubber cable sleeve (6) into the enclosure (14)
- 3. Cut the cable sleeve (6) and insert the multi-pole cable tight enough to guarantee protection against water and/or dust
- 4. Strip the cable to a length suitable for wiring the switches/LED (10)
- 5. Tape the stripped part of the cable
- Fix the multi-pole cable inside the pendant station using the variable section cable clamp (9) (supplied together with the fixing screws (8), inside the "Accessories bag")
- 7. Tighten the cable tie (15) (inside the "Accessories bag") under the choosen measure ring on the cable sleeve (6)
- 8. Connect all the switches/LED (10) according to the wiring layout printed on the switches /LED and overleaf (tighten the wires into the terminals with a torque equal to 0.5 Nm; (UL (c)UL: use 60°C or 75°C copper (CU) conductors and stiff or flexible wire 14-16 AWG); insertability of wires into the terminals 2x0.5mm² 2x1.5 mm² 1x2.5 mm²)
- 9. Close the pendant station checking the proper positioning of the tightening gasket (13), making sure the gasket fits well into the cover and the enclusure seats. ATTENTION: make sure no cable is in between the switches/LED (10) and the actuators (16) mounted on the upper cover (11). Fix the closing clips (12), if provided and depending on the assembly. Tighten the fixing screws (3) on the cover with a torque of 250 cNm.
- 10. Screw the clamping plates (4, 5) into their seat on the enclosure (14)
- 11. Fasten the holding wires, used to support the multi-pole cable, to the clamping plates (4, 5). ATTENTION: make sure the holding wires are as close as possible to the screw. After positioning the holding wires, tighten the screw
- 12. Position the wire cover (2) and tighten the screw (1) with a torque of 250 cNm. Insert the hook (7) into its seats on the enclosure (14)
- 13. In order to open the control station, loosen the screws on the cover (3), remove the clips (12), if provided, loosen the screw (1) and remove the wire cover (2), and loosen the clamping plate (4)

CAUTION: Do not operate on the actuators when the control station is not perfectly closed (with screws tightened and clips fitted as described in point 9) as this may cause the release of the mechanical interlock. If this happens, re-position the mechanical interlock before closing the control station.

#### Periodic maintenance steps

- Check the proper tightening of the screws (3) of the enclosure (11, 14)
- Check the proper tightening of the switch/LED (10) terminal screws
- Check the wiring conditions (in particular where wires clamp into the switches)
- Check the conditions of the tightening gasket (13), of the rubber of the actuators (16) and of the cable sleeve (6)
- Check that the plastic enclosure (11, 14) of the pendant station is not broken
- Check the proper assembling of the clips (12), if provided

In case any component of the pendant station is modified, the validity of the markings and the guarantee on the equipment are annulled. Should any component need replacement, use original spare parts only.

TER declines all responsibility for damages caused by the improper use or installation of the equipment.

### Specifications UL

#### **Technical Specifications UL**

#### Protection PRSL1830PI, PRSL1831PI

When the pilot light / selector switch / key selector switch / impulse mushroom pushbutton / mushroom push-button / emergency mushroom push-button / emergency key mushroom push-button / actuator is mounted on the bottom of the enclosed pendant control stations, the large protection PRSL1831PI or small protection PRSL1830PI shall be used.


### **Emergency Stop Button**

Category = NISD3
Code = PRSL1880P1, PRSL1881PI
Contact Blocks = PRSL1801PI (A600, Q600)
Optional Contact Blocks = PRSL1800PI (A600, Q600)


Code = PRSL1890PI Contact Blocks = PRSL1801PI (A600, Q600)

These unlisted components "emergency stop buttons" are intended for use within


TECNO ELETTRICA RAVASI S R L Listed (NKCR) Mike and Victor pushbutton stations.

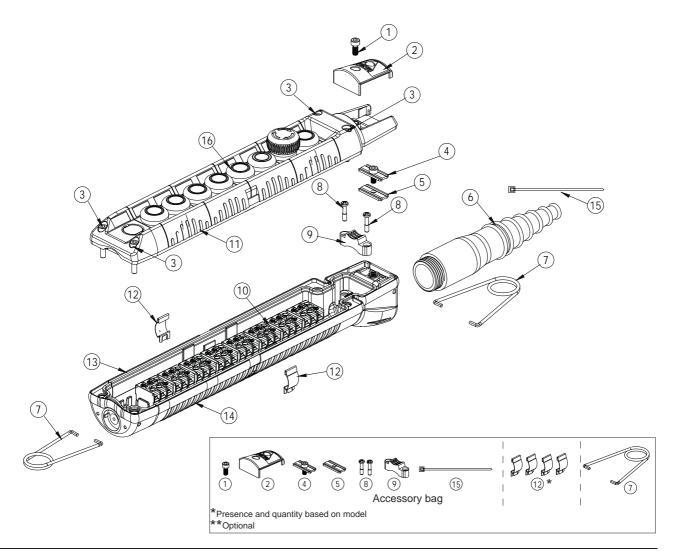



### **SWITCH ACTIVATION**

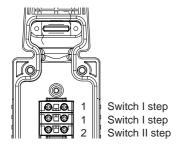

Pushbutton 2 steps

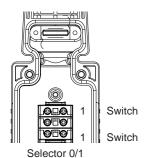

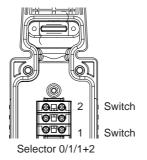

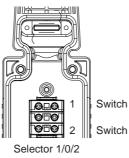

Selector 1/0/2 Selector 1/1+2/2 Selector 1/2



1NO switch



1NC switch



The data and the products illustrated in this brochure may be modified without notice. Under no circumstances can their description have a contractual value.

